




4

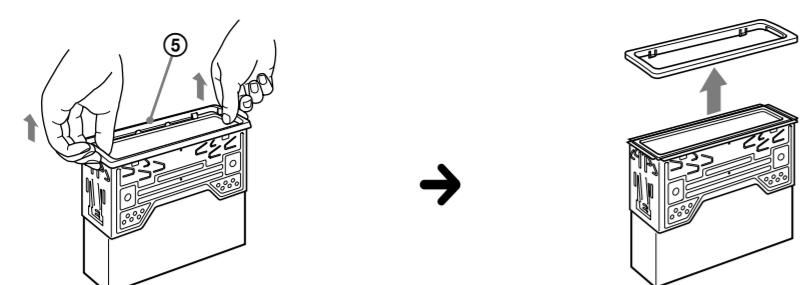


2

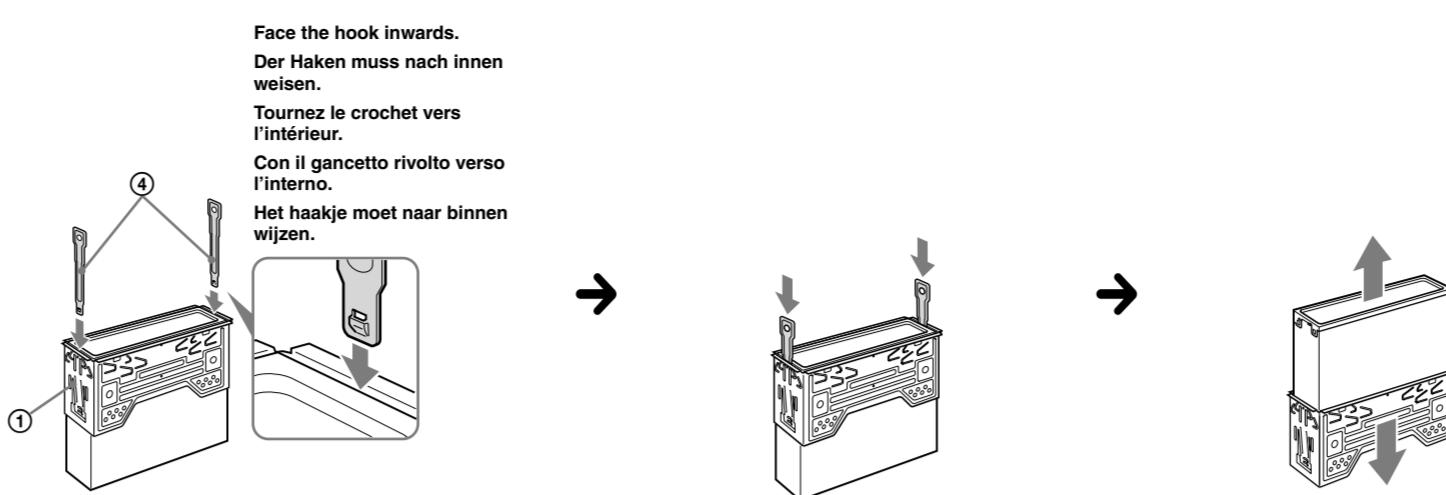


5

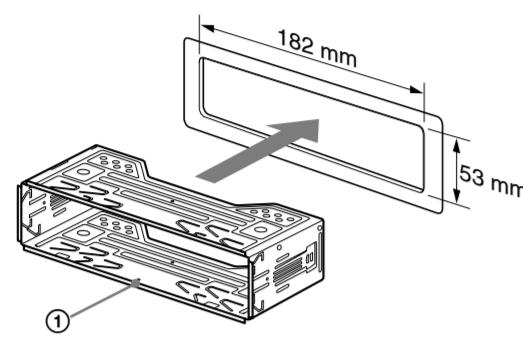


1

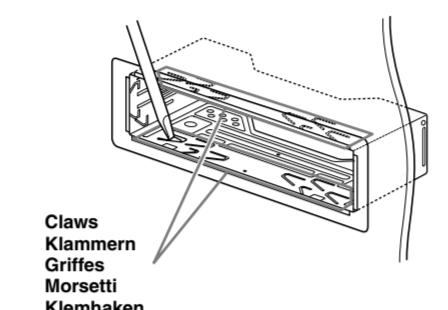


3

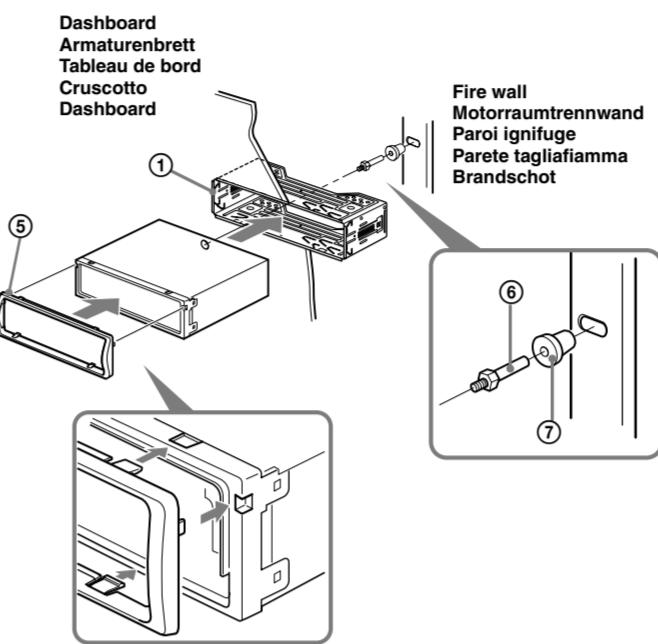

6

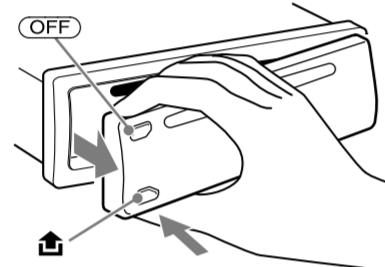

A

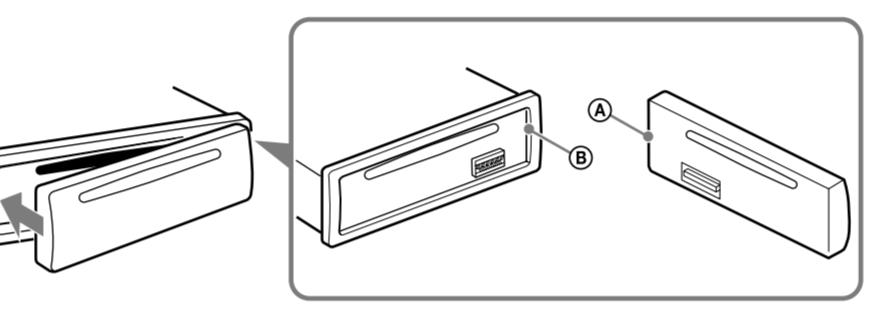

Precautions

- Choose the installation location carefully so that the unit will not interfere with normal driving operations.
- Avoid installing the unit in areas subject to dust, dirt, excessive vibration, or high temperature, such as in direct sunlight or near heater ducts.
- Use only the supplied mounting hardware for a safe and secure installation.

Mounting angle adjustment

Adjust the mounting angle to less than 45°.

Removing the protection collar and the bracket [4]

Before installing the unit, remove the protection collar (④) and the bracket (①) from the unit.

- Remove the protection collar (④).
- Pinch both edges of the protection collar (④), then pull it out.
- Insert both release keys (⑤) together between the unit and the bracket (①) until they click.
- Pull down the bracket (①), then pull up the unit to separate.

Mounting example [5]

Installation in the dashboard

- Notes**
- Bend these claws outward for a tight fit. If necessary (②), make sure that the 4 catches on the protection collar (④) are properly engaged in the slots of the unit (③).

How to detach and attach the front panel [6]

Before installing the unit, detach the front panel.

6-A To detach

Before detaching the front panel, be sure to press (OFF).

Press (OFF), and pull it off towards you.

6-B To attach

Engage part (⑥) of the front panel with part (⑦) of the unit, as illustrated, and push the left side into position until it clicks.


Warning if your car's ignition has no ACC position

Be sure to set the Auto Off function. For details, see the supplied Operating Instructions. The unit will shut off completely and automatically in the set time after the unit is turned off, which prevents battery drain.

If you do not set the Auto Off function, press and hold (OFF), and the display disappears each time you turn the ignition off.


RESET button

When the installation and connections are completed, be sure to press the RESET button with a ball-point pen, etc., after detaching the front panel.

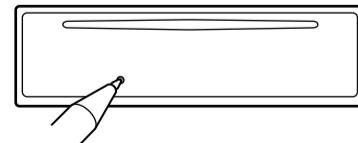

Taste RESET


Wenn Sie das Gerät eingebaut und alle Anschlüsse vorgenommen haben, müssen Sie die Frontplatte abnehmen und mit einem Kugelschreiber oder einem anderen spitzen Gegenstand die Taste RESET drücken.

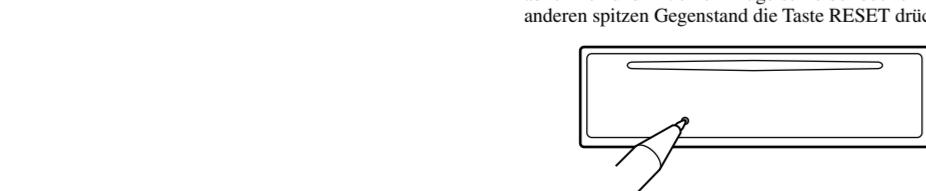

1



2

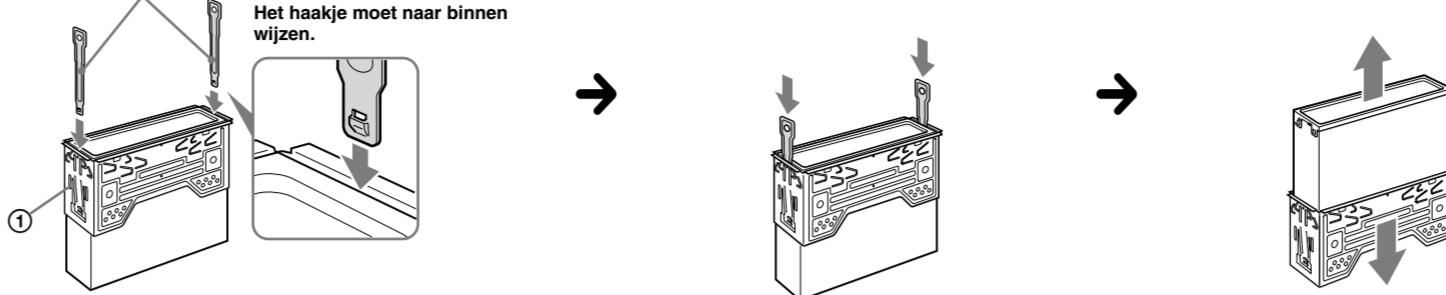

Power connection diagram

Auxiliary power connector may vary depending on the car. Check your car's auxiliary power connector diagram to make sure the connections match correctly. There are three basic types (illustrated below). You may need to switch the positions of the red and yellow leads in the car stereo's power supply leads to connect them correctly. After switching the connecting and switched power supply leads correctly, connect the unit to the car's power supply. If you have any questions and problems connecting your unit that are not covered in this manual, please consult the car dealer.

Il connettore di alimentazione accessoria può variare a seconda dell'auto. Controllare il diagramma del connettore di alimentazione accessoria dell'auto per essere sicuri che i collegamenti corrispondano correttamente. Vi sono tre tipi di base (illustrati sotto). Potrà essere necessario cambiare le posizioni dei fili rosso e giallo nel cavo di alimentazione dello stereo dell'auto. Dopo aver fatto corrispondere i collegamenti e aver cominciato i cavi di alimentazione, collegare l'apparecchio all'alimentazione dell'auto. Se si hanno domande o se sorgono problemi che sono stati trattati nel manuale nel collegare l'apparecchio, contattare l'autoconcessionario.







Voedingsaansluitingschema

De hulpvoeding-aansluiting kan verschillen afhankelijk van de auto. Controleer het voedingsaansluitings-schema dat bij dit apparaat wordt geleverd om te zien of de aansluitingen kloppen. Er zijn drie basistypes (zie afbeelding hieronder). Het is mogelijk dat u de posities van de rode en gele kabels in het netvoer van het voedingsaansluiting moet wisselen om de verbinding te maken. Stellen Sie die Anschlüsse her, schließen Sie die geschalteten Stromversorgungsleitungen richtig an und verbinden Sie dann das Gerät mit der Stromversorgung Ihres Fahrzeugs. Wenn beim Anschließen des Geräts Fragen oder Probleme auftreten, die in dieser Bedienungsanleitung nicht erläutert werden, wenden Sie sich bitte an den Autokauf.



Schéma de raccordement d'alimentation

Le connecteur d'alimentation auxiliaire peut varier suivant le type de voiture. Veuillez lire le schéma du connecteur d'alimentation auxiliaire de votre voiture pour vous assurer que les connexions correspondent. Il existe trois types de base (illustrés ci-dessous). Il peut que vous deviez commuter la position des fils rouge et jaune dans le câble d'alimentation de l'autoradio. Après avoir établi les connexions et raccordé l'appareil correctement les fils d'alimentation, raccordez l'appareil à l'alimentation de la voiture. Si vous avez des questions ou des difficultés à propos de cet appareil qui ne sont pas abordées dans le présent mode d'emploi, consultez votre concessionnaire automobile.

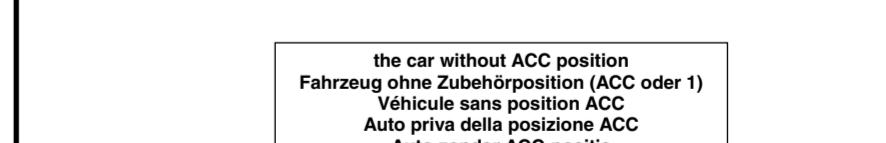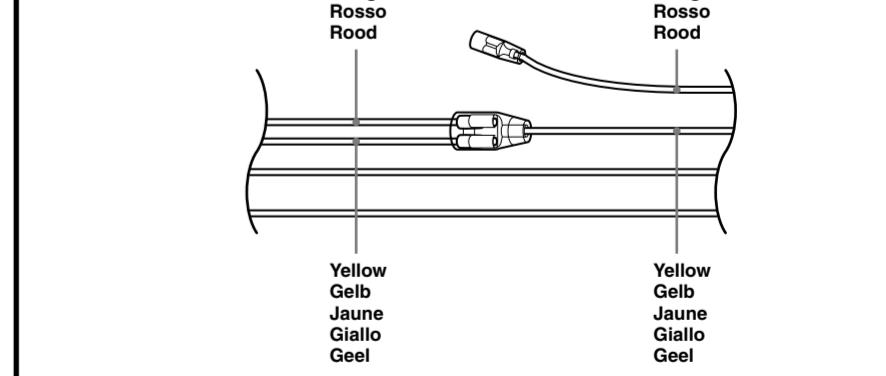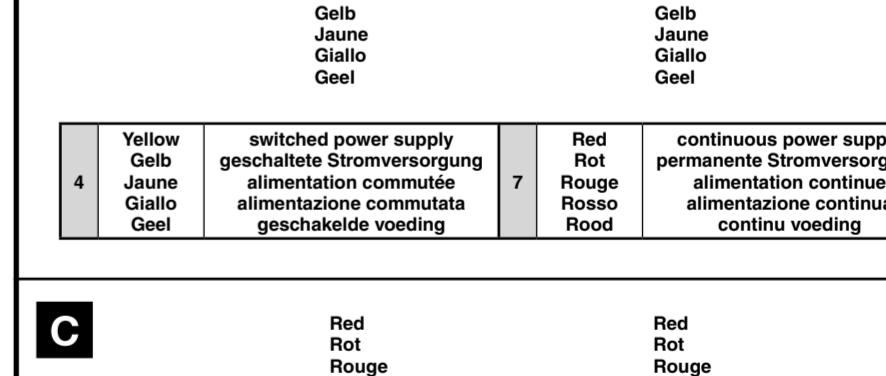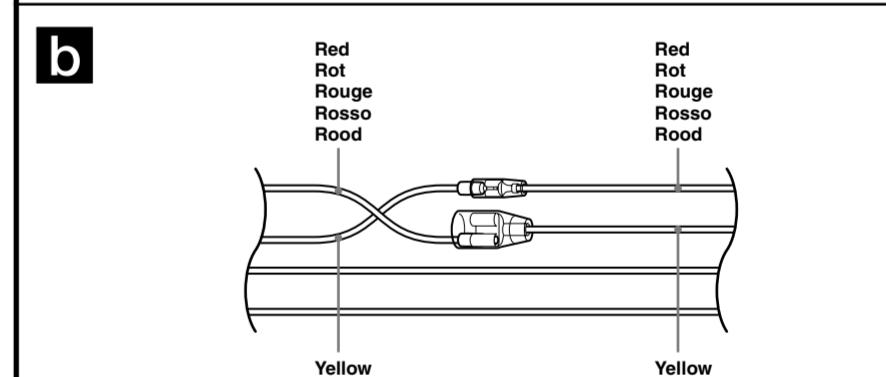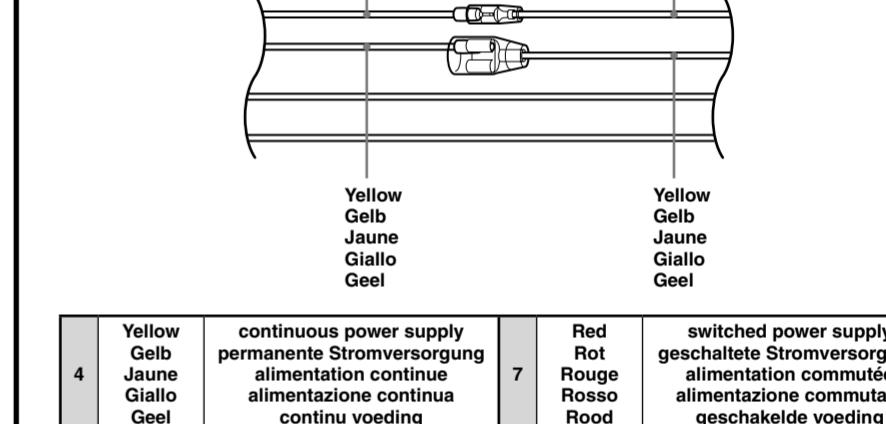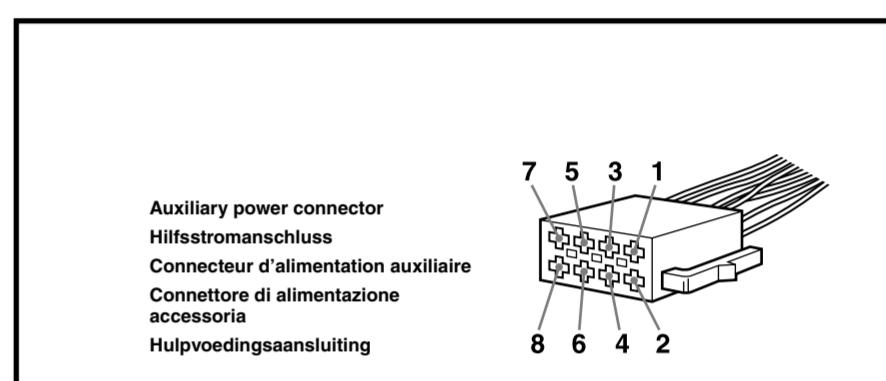

the car without ACC position
Fahrzeug ohne Zubehörposition ACC oder 1)
Véhicule sans position ACC
Auto priva della posizione ACC
Auto zonder ACC-positie