



Barbecue grill

Dear Customer,

Before using the appliance, the user should read the following instructions carefully.

Connection to the mains supply

The equipment should only be connected to an earthed socket installed in accordance with the regulations.

This appliance is designed for outdoor use. We therefore recommend operating it with an additional earth-leakage circuit-breaker at a rated tripping current not exceeding 30mA.

Make sure that the supply voltage corresponds with the voltage marked on the rating label.

This product complies with all binding CE labelling directives.

General information

The barbecue grills are available in different configurations. When assembling the grill or fitting any accessories, always refer to the corresponding diagram.

Important safety instructions

 
- **Caution: do not, under any circumstances, cover the grill rack with aluminium foil, barbecue dishes or other items, as the resulting build-up of heat could destroy the grill.**
- Before the appliance is used, the main body as well as any attachment fitted should be checked thoroughly for any defects. Should the appliance, for instance, have been dropped onto a hard surface, it must no longer be used: even invisible damage may have adverse effects on the operational safety of the appliance.
- During operation, the barbecue grill must be placed on a level, heat-resistant surface, impervious to splashes and stains. When grilling food with a high fat

or moisture content, splashes are not always avoidable.

- **Do not fit the wind screen if the appliance is used indoors.**
- Do not position the grill next to a wall or corner, and ensure that no inflammable materials are stored near it.
- Remember that food with a high fat or moisture content may tend to ignite.
- **Always fill the grill pan with water before use.**

The water helps to **cool down** the grill pan, reduces the build-up of smoke, and also facilitates cleaning.

Ensure that the water level is kept between then 'Min.' and 'Max.' markings at all times during use.



The water level indicator can be found inside the grill pan.

- Always ensure that the water level is kept above the 'Min.' mark. Water should be added in good time, while ensuring that it does not come into contact with the heating element.
- **Before the grill is used, always check that the heating element is correctly fitted in the grill pan and safely locked. Do not connect the grill to mains power until the grill pan has been filled with water.**
- **The barbecue grill must be supervised at all times during operation. For reasons of safety, always keep it out of the reach of children.**
- **Do not, under any circumstances, use charcoal or any other solid or liquid fuel to operate the grill.**
- Always bear in mind that the housing surfaces as well as the heating element become **very hot** during operation. Even after the heating element is switched off, it must not be touched until it has sufficiently cooled down - **there is otherwise a severe danger of burns.**

- To avoid the risk of electric shock, the heating element and the power cord must not be immersed in liquid or even allowed to come into contact with it.
- Do not allow the power cord to touch any hot parts of the appliance.
- The power cord should be regularly examined for any signs of damage. In the event of such damage being found, the appliance must no longer be used.
- Always remove the plug from the wall socket
 - after use,
 - in case of any malfunction, and
 - during cleaning.
- The use of an extension-lead reel causes a loss of power, possibly combined with a subsequent heat build-up in the cable. It is therefore necessary to unwind the cable completely if a cable reel is used. Make sure that the reel is approved for outdoor use by the manufacturer.
- Before carrying, transporting or storing the grill, ensure that it has sufficiently cooled down. Pour out any remaining water after use.
- Ensure that the grill is not stored outdoors, or in any other location where it might be subjected to extremes of temperature or high humidity.
- No responsibility can be/will be accepted if damage results from improper use, or if these instructions are not complied with.
- This barbecue grill is intended for domestic use only and not for commercial applications.
- In order to comply with safety regulations and to avoid hazards, repairs of electrical appliances must be carried out by qualified personnel. If repairs are needed, please send the appliance to one of our customer service departments. The address can be found in the appendix to this manual.

Grill with additional base stand:

Assemble the base stand according to the schematic diagram supplied, and then place

the grill onto the stand. The small feet under the grill connect with the tops of the vertical legs of the base stand.

Ensure that the grill and base stand are placed in a safe and stable position. The power cord should be routed in such a way that no one is likely to trip over it.

Reflector tray

If your grill model comes with a reflector tray, the tray can be placed right onto the water surface **underneath** the heating element when using the grill outdoors.

Before using for the first time

- Remove any packaging materials from the appliance.
- Clean the grill rack and grill pan with warm soapy water.
- Grill assembly:
 1. Place the heating element into the grill pan.
 2. Slide the safety locking device for the heating element – located on the housing to the left of the electric junction box – to the right. Use a suitable screwdriver to tighten the fixing screws.
 3. Fit the grill rack on top.
 4. If required, additional accessories may be fitted according to the diagram shown in the instructions.
- Fill the grill pan with water up to the 'Max' marking.
- Let the grill heat up for approximately 5 minutes without any food on the rack. This will lessen the smell typically encountered when first switching on a new grill (a slight smell and a little smoke may be emitted - ensure sufficient ventilation).

Grilling

- The grill pan must be filled with water up to the 'Max' marking.
- Insert the plug into a suitable earthed power-outlet.
- *Switch-type grill models:*

- Set the switch to its on position.
- *Thermostat-controlled models:*
 - Set the thermostat control knob to its 'Max' position. The indicator light comes on, and the heating element is permanently switched on.
- After approximately 5 minutes, the heating element reaches the right temperature for grilling.
- Thermostat-controlled grill models, in addition to regular grilling, can also be used to keep the food warm: by turning the *thermostat control* back, the intervals between the heating element switching on and off can be reduced to a minimum.

Caution: to prevent a possible build-up of heat and subsequent damage to the appliance, the food to be cooked must be placed directly onto the grill rack. Do not place any objects (e.g. aluminium foil, barbecue plates or other items) between the food and the heating element.

As the water in the grill pan evaporates during grilling, it must be topped up in good time. When adding water, ensure that the water does not come into contact with the heating element.

Once the grilling process is finished:

- *Thermostat-controlled grill models:*
 - Set the thermostat control knob back to '●'.
- *Switch-type models:*
 - Set the switch to its off position.
- Remove the plug from the power outlet and allow the grill to cool down.

General care and cleaning

- Ensure that the grill is thoroughly cleaned after use.
- Before cleaning the grill, ensure it is disconnected from the power supply and has completely cooled down.
- Do not use metallic pads or abrasive cleaning agents.

- Remove the grill rack and clean it with warm soapy water. To remove persistent food residues, it can be left soaking for a while. Do not put the rack into a dish washer.
- All other parts can be cleaned with a cloth soaked in soapy water, and should be wiped completely dry afterwards.

Storage

After cleaning, the grill should be stored indoors in a dry location.

Disposal



 
Do not dispose of old or defective appliances in domestic garbage; this should only be done through public collection points.

Guarantee

This product is guaranteed against defects in materials and workmanship for a period of two years from the date of purchase. Under this guarantee the manufacturer undertakes to repair or replace any parts found to be defective, providing the product is returned to one of our authorised service centres. This guarantee is only valid if the appliance has been used in accordance with the instructions, and provided that it has not been modified, repaired or interfered with by any unauthorised person, or damaged through misuse.

This guarantee naturally does not cover wear and tear, nor breakables such as glass and ceramic items, bulbs etc. If the product fails to operate and needs to be returned, pack it carefully, enclosing your name and address and the reason for return. If within the guarantee period, please also provide the guarantee card and proof of purchase.

SEVERIN

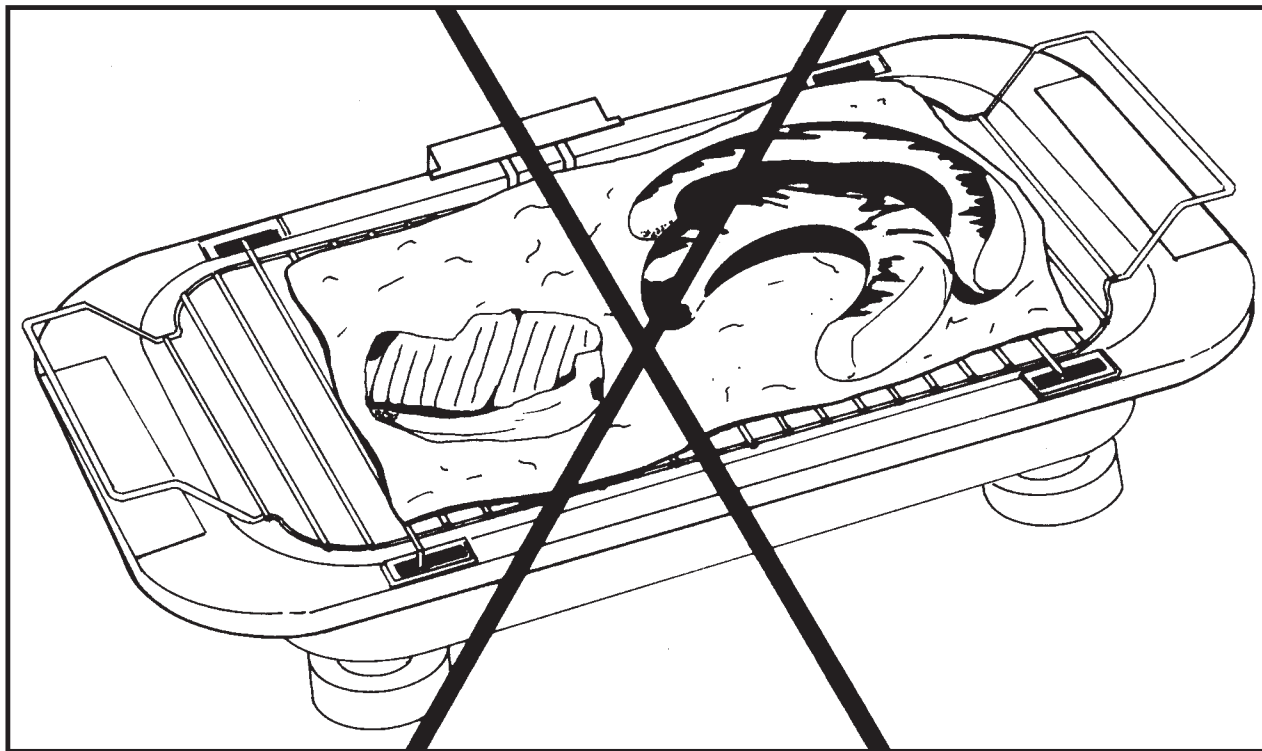

- Ⓓ Nicht mit Alufolie, Grillschale o.ä. abdecken!
- ⒼⒹ Do not cover with aluminum foil, grill tray etc.
- Ⓕ Ne couvrez ni avec un papier aluminium ni avec la plaque etc.
- ⒶⒻ Niet bedekken met aluminiumfolie, grillplaat enz.
- Ⓔ No cubra con papel de aluminio, ni con la bandeja de asar, etc.
- Ⓘ Non coprite con fogli di alluminio, piastra o altro.
- ⒹⓀ Må ikke dækkes med stanniol, grillristen el. lign.
- Ⓐ Får inte täckas med aluminiumfolie, grillplatta el.dyl.
- ⒻⒶ Älä peitä alumiinifoliolla, grillilevyllä tms.
- ⒶⒻ Nie przykrywać folią aluminiową, pokrywką, itp.
- ⒼⒶ Μην καλύπτετε με αλουμινόχαρτο, ταψί, κτλ.
- ⒶⒶⒶ Не накрывайте алюминиевой фольгой, подносом и т. д.

I/M No.: 3087.0000