

# SHARP®

## BD HI FI COMPONENT SYSTEM

MODEL

# XL-BD601PH

## OPERATION MANUAL



Made for  
 iPod iPhone iPad

iPad, iPhone, iPod, iPod classic, iPod nano and  
iPod touch are trademarks of Apple Inc., registered  
in the U.S. and other countries.



**BESONDERE ANMERKUNGEN**  
**REMARQUES SPÉCIALES**  
**NOTAS ESPECIALES**  
**SÄRSKILDA ANMÄRKNINGAR**

**Hinweis:**  
Dieses Gerät kann nur an Orten mit 220-240 V Wechselspannung und einer Netzfrequenz von 50/60 Hz verwendet werden. Eine Verwendung an anderen Orten ist nicht möglich.

**Remarque :**  
Cet appareil peut être uniquement utilisé sur un courant secteur de 220–240 V CA, 50/60 Hz. Il ne peut pas être utilisé sur d'autres courants secteurs.

**Nota:**  
Este reproductor puede usarse sólo donde la fuente de alimentación sea 220–240V ca, 50/60Hz. No puede usarse en ningún otro lugar.

**Anm.:**  
Denna spelare kan endast användas på ställen med en nätpåslagning på 220–240 V växelström, 50/60 Hz. Den kan inte användas på andra ställen.

**Nota:**  
Questo lettore può essere utilizzato solo con alimentazione in c.a. di 220–240V, 50/60Hz. Non può essere utilizzato con altri tipi di alimentazione.

**Opmerking:**  
Deze speler kan alleen worden gebruikt op plaatsen met een netspanning van 220–240V, 50/60 Hz. De speler kan niet op andere plaatsen worden gebruikt.

**Nota:**  
Este leitor só pode ser utilizado em locais onde a fonte de alimentação seja de 220–240 V CA, 50/60 Hz. Não pode ser utilizado em outros locais.

**Tärkeää:**  
Tätä soitinta voidaan käyttää vain 220–240 V, 50/60 Hz vaihtovirtalähteesä (AC). Soitinta ei voida käyttää muulla virrasyötöllä eikä jännitteellä.

**Uwaga:**  
Urządzenie może zostać podłączone wyłącznie do prądu przemiennego 50/60 Hz o napięciu 220–240 V. Nie można go podłączać do innych źródeł zasilania.

**Note:**  
This System can be used only where the power supply is AC 220–240V, 50/60Hz. It cannot be used elsewhere.

**NOTE PARTICOLARI**  
**BIJZONDRE OPMERKINGEN**  
**NOTAS ESPECIAIS**  
**ERITYISHUOMAUTUS**

**Schutz des Netzkabels**

Um Fehlbetrieb des Players zu vermeiden und elektrischen Schlägen, Feuer- und Verletzungsgefahr vorzubeugen, beachten Sie bitte die folgenden Punkte.

- Fassen Sie immer am Netzstecker an, wenn Sie das Netzkabel anschließen oder abtrennen.
- Halten Sie das Netzkabel entfernt von Heizeräten.
- Stellen Sie niemals schwere Gegenstände auf dem Netzkabel ab.
- Versuchen Sie niemals selbst Reparaturen oder Modifikationen am Netzkabel.

**Protection du cordon d'alimentation**

Afin d'éviter des dysfonctionnements du lecteur et d'empêcher une électrocution, un incendie ou des blessures corporelles, veuillez respecter les points suivants :

- Tenez fermement la fiche du cordon d'alimentation secteur lorsque vous le branchez ou le débranchez.
- Tenez le cordon d'alimentation secteur à l'écart des appareils de chauffage.
- Ne placez jamais un objet lourd sur le cordon d'alimentation secteur.
- N'essayez pas de réparer ou de restaurer le cordon d'alimentation secteur de quelque façon que ce soit.

**Protección del cable de alimentación**

Para evitar problemas en el reproductor y protegerse contra descargas eléctricas, incendios o lesiones personales, respete las indicaciones siguientes.

- Sostenga el enchufe con firmeza al conectar o desconectar el cable de alimentación de ca.
- Mantenga el cable de alimentación de ca lejos de aparatos de calefacción.
- Nunca coloque ningún objeto pesado sobre el cable de alimentación de ca.
- No intente reparar ni reconstruir el cable de alimentación de ca de ninguna manera.

**WAŻNE INFORMACJE**  
**SPECIAL NOTES**

**Skydd av nätkabeln**

Observera noga det följande för att undvika fel på spelaren och skydda mot elstötar, brand och personskador.

- Fatta ett stadigt tag i kontakten vid anslutning eller losskoppling av nätkabeln.
- Håll nätkabeln borta från alla värmekällor.
- Placera aldrig några tunga föremål på nätkabeln.
- Försök aldrig att reparera eller på något sätt modifiera nätkabeln.

**Protezione del cavo di alimentazione**

Per evitare malfunzionamenti del lettore e per proteggere l'utente da folgorazioni, incendi o ferite personali, si prega di osservare quanto segue:

- Quando si collega o si scollega il cavo di alimentazione CA tenere saldamente la spina.
- Tenere sempre il cavo di alimentazione CA lontano da apparecchi di riscaldamento.
- Non appoggiare mai oggetti pesanti sul cavo di alimentazione CA.
- Non tentare in nessun modo di riparare o ricostruire il cavo di alimentazione CA.

**Bescherming van het netsnoer**

Lees de volgende punten aandachtig door om storingen, een elektrische schok, brand of persoonlijk letsel te voorkomen.

- Pak de stekker stevig vast wanneer u deze in het stopcontact steekt.
- Houd het netsnoer uit de buurt van warmtebronnen.
- Plaats nooit een zwaar voorwerp op het netsnoer.
- Probeer nooit om het netsnoer op enigerlei wijze te repareren.

**Protecção do cabo de alimentação**

Para evitar avarias no leitor e se proteger contra choques eléctricos, incêndio ou lesões pessoais, respeite as instruções a seguir.

- Segure a ficha com firmeza ao ligar ou desligar o cabo de alimentação CA.
- Mantenha o cabo de alimentação CA afastado de fontes de calor.
- Nunca coloque qualquer objecto pesado sobre o cabo de alimentação CA.
- Não tente reparar ou reconstruir o cabo de alimentação CA seja por que forma for.

## Virtajohdon asianmukainen käyttö

Noudata seuraavia ohjeita soittimen toimintahäiriöiden sekä sähköiskun, tulipalon tai henkilövahinkojen välttämiseksi.

- Pidä pistokkeesta tukevasti kiinni, kun irrotat tai liität virtajohdon.
- Älä säilytä tai käytä virtajohtoa lämmityslaitteiden läheisyydessä.
- Älä sijoita raskaita esineitä virtajohdon päälle.
- Älä yritykseen korjata tai muuttaa virtajohtoa itse millään tavalla.

## Zabezpieczenie kabla zasilającego

Żeby zapewnić prawidłowe działanie odtwarzacza i zapobiec porażeniu prądem, wybuchowi pożaru lub zranieniu, prosimy o przestrzeganie poniższych wytycznych.

- Należy mocno trzymać wtyczkę w trakcie podłączania lub odłączania przewodu zasilającego.
- Kabel zasilający powinien znajdować się z daleka od urządzeń grzewczych.
- Nie wolno ustawać ciężkich przedmiotów na kablu zasilającym.
- Nie należy próbować w żaden sposób naprawiać lub sztukować kabla zasilającego.

## AC Power Lead Protection

To avoid any malfunctions of the unit, and to protect against electric shock, fire or personal injury, please observe the following.

- Hold the plug firmly when connecting or disconnecting the AC power lead.
- Keep the AC power lead away from heating appliances.
- Never put any heavy object on the AC power lead.
- Do not attempt to repair or reconstruct the AC power lead in any way.

## Dichiarazione di conformità

La società SHARP ELECTRONICS EUROPE GmbH dichiara che il prodotto XL-BD601PH Sistema Hi Fi Blu-ray è costruito in conformità alle prescrizioni del D.M.no 548 del 28/8/95, pubblicato sulla G.U.no 301 del 28/12/95 ed in particolare è conforme a quanto indicato nell'art. 2, comma 1 dello stesso decreto.

- Bei Einstellung der ON/STAND-BY-Taste auf STAND-BY ist die Netzspannung immer noch im Gerät vorhanden.

Wenn die ON/STAND-BY-Taste auf STAND-BY eingestellt wird, kann das Gerät unter Verwendung der Timer-Betriebsart oder Fernbedienung in Betrieb gesetzt werden.

### Warnung:

In diesem Gerät sind keine vom Benutzer wartbaren Teile vorhanden. Niemals Abdeckungen entfernen, außer wenn Sie dafür qualifiziert sind. In diesem Gerät sind gefährliche Spannungen vorhanden. Vor Ausführung von irgendwelchen Kundendienstarbeiten oder bei längerer Nichtverwendung des Gerätes stets den Netzstecker aus der Netzsteckdose ziehen.

- Lorsque la touche ON/STAND-BY est mise en STAND-BY, l'appareil est toujours sous tension.

Lorsque la touche ON/STAND-BY se trouve sur la position STAND-BY, l'appareil est prêt à fonctionner par la minuterie ou la télécommande.

### Avertissement:

Cet appareil contient des pièces non réparables par l'utilisateur. Personne non qualifiée n'enlèvera jamais les couvercles. L'appareil contenant des organes portés à haute tension, débrancher l'appareil avant toute réparation ou en période de non-utilisation.

- Cuando el botón ON/STAND-BY está puesto en la posición STAND-BY, todavía hay tensión dentro del aparato.

Cuando el botón ON/STAND-BY está puesto en la posición STAND-BY, el aparato puede ponese en funcionamiento utilizando el modo del temporizador o el controlador remoto.

### Advertencia:

Tenga en cuenta que dentro de este aparato no hay piezas que pueda reparar. No quite nunca las tapas a menos que se esté cualificado para hacerlo. Este aparato tiene en su interior tensiones peligrosas. Desenchufe siempre la clavija de la red del tomacorriente antes de realizar cualquier servicio de mantenimiento y cuando no se use el aparato durante un largo período de tiempo.

- När ON/STAND-BY knappen är i läge STAND-BY, finns nätpänning i apparaten.

Med ON/STAND-BY knappen i läge STAND-BY kan apparaten startas med timerfunktion eller fjärrkontrollen.

### Warning:

Apparaten innehåller inga delar som kan åtgärdas av kunden. Höljet för endast öppnas av kvalificerad personal. Apparaten innehåller farliga spänningar. Stickkontakten ska därför dras ut från nätagget före reparationsarbeten och bör dras ut om apparaten inte ska användas på mycket länge.

- Quando il tasto ON/STAND-BY si trova in posizione STAND-BY, all'interno dell'apparecchio c'è ancora la corrente.

Se il tasto ON/STAND-BY si trova nella posizione STAND-BY, l'unità può essere accesa con il modo timer o con il telecomando.

### Avvertenza:

L'apparecchio non contiene parti riparabili dall'utente. Non togliere mai i copreri, a meno di non essere qualificati per farlo. All'interno dell'apparecchio ci sono tensioni pericolose, per cui si deve sempre staccare la spina del cavo d'alimentazione dalla presa di corrente prima di qualsiasi intervento di manutenzione e quando non si usa l'apparecchio per un lungo periodo di tempo.

- Wanneer de ON/STAND-BY toets in de STAND-BY stand staat, loopt er nog steeds stroom (netspanning) in het toestel.

Wanneer de ON/STAND-BY toets in de STAND-BY stand staat, kan het toestel ingeschakeld worden via de timerfunctie of de afstandsbediening.

### Waarschuwing:

Dit toestel bevat geen door de gebruiker te repareren onderdelen. Verwijder de behuizing nooit tenzij u deskundig bent op dit gebied. In het toestel loopt een gevaarlijke spanning; haal de stekker altijd uit het stopcontact alvorens onderhoud uit te voeren of wanneer het toestel voor langere tijd niet gebruikt wordt.

- Quando o botão ON/STAND-BY estiver ajustado na posição STAND-BY, a voltagem de alimentação ainda se encontra presente dentro do aparelho. Quando o botão ON/STAND-BY estiver ajustado na posição STAND-BY, o aparelho pode ser colocado em operação através do modo de programação horária ou pelo controle remoto.

### Advertência:

Neste aparelho não há partes que podem ser consertadas pelo usuário. Nunca retire a tampa, a menos que você tenha qualificação para tal. Este aparelho contém voltagens perigosas. Remova sempre o cabo de alimentação da tomada antes de efetuar qualquer conserto ou quando deixar o aparelho muito tempo fora de uso.

- Kun ON/STAND-BY -kytkin on STAND-BY-asennossa, laitteessa on yhä virta.  
Kun ON/STAND-BY -kytkin on STAND-BY-asennossa, laite voidaan kytkeä pääle kaukosäätimestä.

### Varoitus:

Laitteen sisällä ei ole käyttäjän huollettavissa olevia osia. Kotelon saa irrottaa vain siihen pätevöitynyt henkilö. Laitteen sisällä on vaarallinen jännite. Laite on aina irrottava verkkovirrasta ennen huoltotoimenpiteitä ja jos laite on pitkään käytävästä.

- Gdy urządzenie znajduje się w trybie czuwania, jego wewnętrzne elementy są pod napięciem.

Gdy urządzenie znajduje się w trybie czuwania, może zostać włączone przy pomocy zegara lub pilota.

### Ostrzeżenie:

Wewnątrz urządzenia nie ma żadnych elementów wymagających obsługi użytkownika. Obudowa może być zdejmowana wyłącznie przez wykwalifikowanych pracowników serwisu. Wewnętrzne elementy urządzenia znajdują się pod napięciem. Przed zdjęciem odbudowy, lub gdy urządzenie ma zostać przez dłuższy czas nieużywane, należy wyjąć wtyczkę z gniazdka elektrycznego.

- When the ON/STAND-BY button is set at STAND-BY position, mains voltage is still present inside the unit.

When the ON/STAND-BY button is set at STAND-BY position, the unit may be brought into operation by the timer mode or remote control.

### Warning:

This unit contains no user serviceable parts. Never remove covers unless qualified to do so. This unit contains dangerous voltages, always remove mains plug from the socket before any service operation and when not in use for a long period.

- Når ON/STAND-BY-knappen er sat i STAND-BY positionen, er der stadig netspaending til stede i apparatet.

Når ON/STAND-BY-knappen er sat i STAND-BY position, kan apparatet startes v.hj.a. timer-funksionen eller fjernbetjeningen.

### Advarsel:

Apparatet indeholder ingen dele, der kan repareres af brugeren selv. Fjern aldrig kabinetet med mindre De er kvalificeret hertil. Apparatet indeholder farlig strømspænding. Traek altid stikket ud af stikkontakten før der foretages reparationer, eller hvis apparatet ikke er i brug i længere tid.

PŘED SEJMUTÍM KRYTU NUTNO VYJMOUT VIDLICI ZE SÍŤOVÉ ZÁSUVKY.

PRED ZLOŽENÍM KRYTU JE NUTNÉ ODPOJIŤ PRÍSTROJ ZO SIETE.

DENNA APPARAT ÄR ANSLUTEN TILL 230 V VÄXELSTRÖM NÄR STICKPROPPEN ÄR INSKJUTEN I VÄGGUTTAGET. FÖR ATT FULLSTÄNDIGT KOPPLA IFRÅN APPARATEN, V.G. DRAG UT STICKPROPPEN.

● Audio-visuelles Material kann Urheberrechte umfassen, die ohne Genehmigung des Eigentümers dieser Urheberrechte nicht aufgenommen werden dürfen. Siehe die entsprechenden nationalen Gesetze.

● Le matériel audio-visuel peut comporter des œuvres faisant l'objet de droits d'auteur qui ne peuvent être enregistrées sans l'autorisation du possesseur du droit d'auteur, veuillez vous référer aux réglementations nationales en vigueur.

● El material audiovisual puede consistir en trabajos que tengan derechos de autor y que no deben grabarse sin la autorización del poseedor de dichos derechos de autor. Sírvase consultar las leyes aplicables en su país.

● Audiovisuellt material kan innehålla upphovsrättsarbete som inte skall mängfaldigas utan tillstånd av copyrightinnehavaren. Se den tillämpliga lagen i ditt land.

● Il materiale audio-visivo che fosse soggetto a copyright non può essere registrato senza l'autorizzazione del possessore del copyright. Si prega di attenersi alle leggi in vigore sul territorio nazionale.

● Audio-visueel materiaal kan worden beschermd door auteursrechten, in welk geval het niet mag worden opgenomen zonder de toestemming van de auteursrechthouder. Zie voor nadere informatie de betreffende wetten in het land van gebruik.

● O material audiovisual pode consistir de trabalhos de direitos autorias que não devem ser gravados sem autorização do proprietário dos direitos. Favor consultar as leis vigentes em seu país.

● Audiovisuaalinen materiaala saatetaan olla tekijänoikeudella suojaattua, eikä sitä täällöin saa tallentaa ilman tekijänoikeuden haltijan lupaa. Lisätietoja on maassasi sovellettavassa tekijänoikeuslaissa.

● Materiał audiowizualny może zawierać utwory chronione prawem autorskim, które nie mogą być nagrywane bez zgody właściciela praw autorskich. Patrz odpowiednie regulacje prawne w danym kraju

● Audio-visual material may consist of copyrighted works which must not be recorded without the authority of the owner of the copyright. Please refer to relevant law in your country.

● **Vorsicht:**

Das Gerät weder Tropf- noch Spritzwasser aussetzen. Ansonsten besteht die Gefahr eines Brandes oder elektrischen Schläges. Es dürfen keine mit Flüssigkeiten gefüllten Gegenstände wie Vasen auf dem Gerät abgestellt werden.

● **Attention:**

Pour éviter un incendie ou une secousse électrique, mettre l'appareil à l'abri de l'eau (éclaboussure, goutte). Ne pas poser sur l'appareil un récipient contenant du liquide.

● **Advertencia:**

Para evitar incendios y descargas eléctricas, no exponga el aparato a goteo o salpicadura de líquidos. No deberán ponerse encima del aparato objetos que estén llenos de líquido, como por ejemplo un florero.

● **Warning:**

Utsätt inte enheten för dropp eller stänk för att förhindra brand eller elektriska stötar. Inga vätskefylda föremål sätta över vaser för placeras på enheten.

● **Attenzione:**

Per prevenire incendi o scosse elettriche, non fare gocciolare nessun liquido sull'apparecchio e non bagnarlo. Non collocarvi sopra nessun oggetto riempito d'acqua, come per esempio vasi.

● **Waarschuwing:**

Stel het toestel niet bloot aan druipend of spattend water om brand en elektrische schokken te voorkomen. Met vloeistoffen gevulde voorwerpen, zoals vazen, mogen niet op het toestel geplaatst worden.

● **Cuidado:**

Para evitar incêndio ou choque elétrico, não exponha este aparelho a gotejamento ou salpicamento de água. Não coloque objetos com água como, por exemplo, um vaso de flores, em cima do aparelho.

● **Varoitus:**

Tulipalon tai sähköiskun välttämiseksi laitetta ei saa altistaan tippuvalle tai roiskuvalle vedelle. Nestettä sisältävä astioita kuten esim kukkanaljakoita ei saa asettaa laitteen päälle.

● **Ostrzeżenie:**

Żeby zapobiec niebezpieczenstwu pożaru lub porażeniu prądem, urządzenie należy chronić przed zalaniem lub wilgocią. Na urządzeniu nie wolno ustawiać żadnych zbiorników z wodą - np. wazonów.

● **Warning:**

To prevent fire or shock hazard, do not expose this appliance to dripping or splashing. No objects filled with liquids, such as vases, shall be placed on the apparatus.

● **Advarsel:**

Til at forbygge ild og stød risiko, lad vaare med at undsaette denne indretning for drøpning eller overstaenkning. Der må ikke anbringes nogen genstande fyldt med vand, som for eksempel vaser, på dette apparat.

● **Advarsel:**

For å unngå brann eller kortslutning, utsett ikke produktet for vann eller fuktighet. Gjenstander som inneholder væske, feks. en blomstervase, må ikke plasseres oppå apparatet.

● **Varoitus:**

Älä vie laitetta sateeseen tai kosteisiin tiloihin. Jos laite on kostunut, anna sen kuivua ennen kuin käytät sitä verkkovirralla. Nestettä sisältävä astioita kuten esim. kukkamaljakoita ei saa asettaa laitteen päälle.

**PŘÍSTROJ NEVYSTAVUJTE KAPAJÍCÍ NEBO STŘÍKAJÍCÍ VODĚ.**

**PRÍSTROJ NEVYSTAVUJTE KVAPKAJÚCEJ ALEBO STRIEKAJÚCEJ VODE.**

Urządzenie należy chronić przed zalaniem i wilgocią.

● Dieses Produkt ist ein Laserprodukt der Klasse 1.

● Ce produit est classifié comme étant un LASER DE CLASSE 1.

● Este producto está clasificado como un PRODUCTO LÁSER DE CLASE 1.

● Denna produkt klassificeras som KLASS 1 LASERPRODUKT.

● Questo prodotto è classificato come CLASS 1 LASER PRODUCT.

● Dit product is geklassificeerd als een KLASSE 1 LASER PRODUCT.

● Este produto é classificado como PRODUTO LASER DE CLASSE 1.

● Tämä laite on luokiteltu LUOKAN 1 LASERLAITTEEKSI.

● Opisywane urządzenie jest sklasyfikowane jako PRODUKT LASEROWY KLASY 1.

● This product is classified as a CLASS 1 LASER PRODUCT.

● Dette produktet er klassifisert som et KLASSE 1 LASERPRODUKT.

● Dette produkt er klassificeret som et KLASSE 1 LASERPRODUKT.

● Tämä laite on luokiteltu LUOKAN 1 LASERLAIT-TEEKKI.

● Denna produkt klassificeras som KLASSE 1 LASERAPPARAT.

● Tento výrobek je klasifikován jako LASEROVÝ VÝROBEK TŘÍDY 1.

● Tento výrobok je klasifikovaný ako LASEROVÝ VÝROBOK TRIEDY 1.

## ● VORSICHT

Verwendung von Regelungen oder Einstellungen bzw. Durchführung von anderen Verfahren als die hierin angegebenen kann zum Aussetzen gefährlicher Strahlung führen.

Da der in diesem Compact Disc Player verwendete Laserstrahl für die Augen schädlich ist, ist das Gehäuse unter keinen Umständen zu zerlegen.

Wenden Sie sich für Wartungsarbeiten nur an berechtigten Fachhändler.

## ● ATTENTION

Respecter les indications données relatives à la manipulation, au réglage et au fonctionnement. En cas de non-respect, on s'exposera à une radiation dangereuse.

Éviter absolument de démonter l'appareil, qui utilise un rayon laser nuisible aux yeux. Pour toute réparation, s'adresser à une personne qualifiée.

## ● PRECAUCIÓN

El uso de los controles, ajustes o ejecución de procedimientos distintos de los especificados podría causar la exposición a radiación peligrosa.

No intente desmontar la caja ya que el haz de láser usado en este reproductor de discos compactos es perjudicial para los ojos. Para el servicio de reparación, consulte a una persona cualificada.

## ● OBSERVERA

Användning av reglage eller justeringar eller handhavande på annat sätt än som anges kan leda till farlig besträlnings.

Försök inte ta isär höljet eftersom CD-spelarens laserstråle är skadlig för ögonen. Överlit service endast till kvalificerad personal.

## ● ATTENZIONE

L'uso dei comandi e l'effettuazione di regolazioni e procedimenti diversi da quelli specificati nel manuale possono provocare una pericolosa esposizione alle radiazioni.

Poiché il raggio laser usato in questo giradischi può danneggiare gli occhi, non smontare l'apparecchio. Per le riparazioni rivolgersi a personale specializzato.

## ● LET OP

Gebruik van regelaars, het maken van instellingen, gebruik of handelingen anders dan in deze gebruiksaanwijzing vermeld, kan gevaarlijke straling blootleggen.

De laserstraal in deze CD-speler kan de ogen beschadigen, Probeer derhalve de ombouw niet te verwijderen. Laat reparaties alleen over aan erkend onderhoudspersoneel.

## ● CUIDADO

O uso de controles, ajustes ou a execução de procedimentos além daqueles especificados aqui pode resultar em perigosa exposição à radiação.

Como os raios laser usados neste player de CD são perigosos para os olhos, não tente desmontar o aparelho. Solicite o conserto somente para pessoas especializadas.

## ● VAROITUS

Muiden kuin tässä määritetyjen ohjaustoimintojen, säätöjen ja toimintojen käyttö saattaa johtaa vaaralliseen sääteilyaltistumiseen.

Koska tässä cd-soittimessa käytetty lasersäde on silmille vahingollinen, älä pura soitinta. Ainoastaan pätevä henkilökunta saa huoltaa laitetta.

## ● OSTRZEŻENIE

Wykorzystanie elementów sterujących oraz wykonywanie czynności innych niż opisano w niniejszej instrukcji może spowodować narażenie na działanie niebezpiecznego promieniowania.

Ponieważ wiązka lasera zastosowanego w tym odtwarzaczu płyt CD jest niebezpieczna dla oczu, nie wolno samodzielnie demontać obudowy urządzenia. Wszelkie czynności serwisowe należy zlecać osobom wykwalifikowanym.

## ● CAUTION

Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

As the laser beam used in this compact disc player is harmful to the eyes, do not attempt to disassemble the cabinet. Refer servicing to qualified personnel only.

**VÝSTRAHA: VÝROBEK JE VYBAVEN LASEREM. PŘI NESPRÁVNÉ MANIPULACI S PŘÍSTROJEM V ROZPORU S TÍMTO NÁVODEM MŮZE DOJÍT K NEBEZPEČNÉMU OZÁŘENÍ. NEOTVÍREJTE A NESNÍMEJTE PROTO ŽÁDNÉ KRYTY A PŘÍSTROJ NEOPRAVUJTE. OPRAVU A SERVIS SVĚŘTE ODBORNÉMU SERVISU.**

**VÝSTRAHA: VÝROBOK JE VYBAVENÝ LASEROM. PRI NESPRÁVNOM MANIPULOVANÍ S PRÍSTROJOM V ROZPORE S TÝMTO NÁVODOM MÔŽE DÔJST K NEBEZPEČNÉMU OŽIARENIU. NEODKRÝVAJTE PRETO Žiadne KRYTY A PRÍSTROJ NEOPRAVUJTE. OPRAVU A SERVIS PRENECHAJTE ODBORNÉMU SERVISU.**



CAUTION: CLASS 2 VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. DO NOT STARE INTO THE BEAM.  
ACHTUNG: BEI GEÖFFNETER ABDECKUNG IST SICHTBARE UND UNSICHTBARE LASERSTRÄHLUNG DER KLASSE 2 IM GERÄTEINNEREN VORHANDEN. NICHT IN DEN STRÄHL SEHEN.  
ATTENTION: RADIATIONS LASER VISIBLES ET INVISIBLES DE CLASSE 2 QUAND OUVERT. NE PAS REGARDER FIXEMENT LE FAISCEAU.


WARNING: KLASS 2 SYNIG OG OSYNLIG LASERSTRÅLING NAR DENNA DEL ÄR ÖPPNAD. TITTA INTE I STRÅLEN.

HUOMIO! AVATTAESSA OLET ALTIINA NÄKYVÄLLE JA NÄKYMÄTTÖMÄLLÉ LUOKAN 2 LASERSÄTEILYLLE. ÄLÄ KATSO SÄTEESEN.

ADVARSEL: KLASSE 2 SYNIG OG USYNLIG LASERSTRÅLING HVIS DENNE DELEN ÅPNES. STIRR IKKE INN I STRÅLEN.

ADVARSEL: KLASSE 2 SYNIG OG USYNLIG LASERSTRÅLING VED ÅBNING. KIG IKKE IND I STRÅLEN.

注意: ここを開くとクラス2の可視及び不可視レーザー放射が出てきます。  
レーザー放射をのぞき込まないでください。

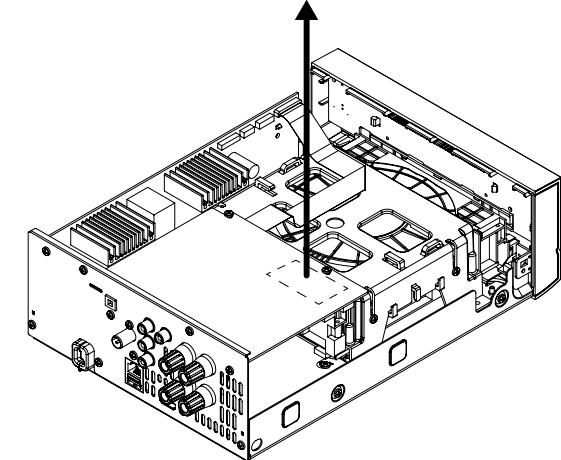

ADVERSEL-SYNLIG OG USYNLIG LASERSTRÅLING VED ÅBNING. SE IKKE IND I STRÅLEN-HELLER IKKE MED OPTISKE INSTRUMENTER.

VARO! AVATTAESSA OLET ALTIINA NÄKYVÄLLE JA NÄKYMÄTTÖMÄLLÉ LASERSÄTEILYLLE ÄLÄ TUJOTA SÄTEESENÄÄLÄKÄ KATSO SITÄ OPTISEN LAITTEEN LÄPI.

WARNING-SYNLIG OCH OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD. STIRRA EJ IN I STRÅLEN OCH BETRAKTA EJ STRÅLEN GENOM OPTISKT INSTRUMENT.

**VAROITUS! LAITTEEN KÄYTÄMINEN MUULLA KUIN TÄSSÄ KÄYTTÖOHJEESSA MAINITULLA TAVALLA SAATTAA ALTISTAA KÄYTÄJÄN TURVALLISUUSLUOKAN 1 YLITTÄVÄLLE NÄKYMÄTTÖMÄLLÉ LASERSÄTEILYLLE.**

**VARNING - OM APPARATEN ANVÄNDS PÅ ANNAT SÄTT ÄN I DENNA BRUKSANVISNING SPECIFICERAS. KAN ANVÄNDAREN UTSÄTTAS FÖR OSYNLIG LASERSTRÅLNING, SOM ÖVERSKRIDER GRÄNSEN FÖR LASERKLASS 1.**

## Entsorgungsinformationen



Achtung: Ihr Produkt trägt dieses Symbol. Es besagt, dass Elektro- und Elektronikgeräte nicht mit dem Haushaltsmüll entsorgt, sondern einem getrennten Rücknahmestystem zugeführt werden sollten.

### A. Entsorgungsinformationen für Benutzer aus Privathaushalten

#### 1. In der Europäischen Union

Achtung: Werfen Sie dieses Gerät zur Entsorgung bitte nicht in den normalen Hausmüll!

Gemäß einer neuen EU-Richtlinie, die die ordnungsgemäße Rücknahme, Behandlung und Verwertung von gebrauchten Elektro- und Elektronikgeräten vorschreibt, müssen elektrische und elektronische Altgeräte getrennt entsorgt werden.

Nach der Einführung der Richtlinie in den EU-Mitgliedstaaten können Privathaushalte ihre gebrauchten Elektro- und Elektronikgeräte nun kostenlos an ausgewiesenen Rücknahmestellen abgeben\*.

In einigen Ländern\* können Sie Altgeräte u.U. auch kostenlos bei Ihrem Fachhändler abgeben, wenn Sie ein vergleichbares neues Gerät kaufen.

\*) Weitere Einzelheiten erhalten Sie von Ihrer Gemeindeverwaltung.

Wenn Ihre gebrauchten Elektro- und Elektronikgeräte Batterien oder Akkus enthalten, sollten diese vorher entnommen und gemäß örtlich geltenden Regelungen getrennt entsorgt werden.

Durch die ordnungsgemäße Entsorgung tragen Sie dazu bei, dass Altgeräte angemessen gesammelt, behandelt und verwertet werden. Dies verhindert mögliche schädliche Auswirkungen auf Umwelt und Gesundheit durch eine unsachgemäße Entsorgung.

#### 2. In anderen Ländern außerhalb der EU

Bitte erkundigen Sie sich bei Ihrer Gemeindeverwaltung nach dem ordnungsgemäßen Verfahren zur Entsorgung dieses Geräts.

Für die Schweiz: Gebrauchte Elektro- und Elektronikgeräte können kostenlos beim Händler abgegeben werden, auch wenn Sie kein neues Produkt kaufen. Weitere Rücknahmesysteme finden Sie auf der Homepage von [www.swico.ch](http://www.swico.ch) oder [www.sens.ch](http://www.sens.ch).

### B. Entsorgungsinformationen für gewerbliche Nutzer

#### 1. In der Europäischen Union

Wenn Sie dieses Produkt für gewerbliche Zwecke genutzt haben und nun entsorgen möchten:

Bitte wenden Sie sich an Ihren SHARP Fachhändler, der Sie über die Rücknahme des Produkts informieren kann. Möglicherweise müssen Sie die Kosten für die Rücknahme und Verwertung tragen. Kleine Produkte (und kleine Mengen) können möglicherweise bei Ihrer örtlichen Rücknahmestelle abgegeben werden.

Für Spanien: Bitte wenden Sie sich an das vorhandene Rücknahmesystem oder Ihre Gemeindeverwaltung, wenn Sie Fragen zur Rücknahme Ihrer Altgeräte haben.

#### 2. In anderen Ländern außerhalb der EU

Bitte erkundigen Sie sich bei Ihrer Gemeindeverwaltung nach dem ordnungsgemäßen Verfahren zur Entsorgung dieses Geräts.

## Informations sur la mise au rebut correcte



Attention: votre produit comporte ce symbole. Il signifie que les produits électriques et électroniques usagés ne doivent pas être mélangés avec les déchets ménagers généraux. Un système de collecte séparé est prévu pour ces produits.

### A. Informations sur la mise au rebut à l'intention des utilisateurs privés (ménages)

#### 1. Au sein de l'Union européenne

Attention : si vous souhaitez mettre cet appareil au rebut, ne le jetez pas dans une poubelle ordinaire!

Les appareils électriques et électroniques usagés doivent être traités séparément et conformément aux lois en vigueur en matière de traitement, de récupération et de recyclage adéquats de ces appareils.

Suite à la mise en oeuvre de ces dispositions dans les Etats membres, les ménages résidant au sein de l'Union européenne peuvent désormais ramener gratuitement\* leurs appareils électriques et électroniques usagés sur des sites de collecte désignés.

Dans certains pays\*, votre détaillant reprendra également gratuitement votre ancien produit si vous achetez un produit neuf similaire.

\*) Veuillez contacter votre administration locale pour plus de renseignements.

Si votre appareil électrique ou électronique usagé comporte des piles ou des accumulateurs, veuillez les mettre séparément et préalablement au rebut conformément à la législation locale en vigueur.

En veillant à la mise au rebut correcte de ce produit, vous contribuerez à assurer le traitement, la récupération et le recyclage nécessaires de ces déchets, et préviendrez ainsi les effets néfastes potentiels de leur mauvaise gestion sur l'environnement et la santé humaine.

#### 2. Pays hors de l'Union européenne

Si vous souhaitez mettre ce produit au rebut, veuillez contacter votre administration locale qui vous renseignera sur la méthode d'élimination correcte de cet appareil.

Suisse : les équipements électriques ou électroniques usagés peuvent être ramenés gratuitement au détaillant, même si vous n'achetez pas un nouvel appareil. Pour obtenir la liste des autres sites de collecte, veuillez vous reporter à la page d'accueil du site [www.swico.ch](http://www.swico.ch) ou [www.sens.ch](http://www.sens.ch).

### B. Informations sur la mise au rebut à l'intention des entreprises

#### 1. Au sein de l'Union européenne

Si ce produit est utilisé dans le cadre des activités de votre entreprise et que vous souhaitez le mettre au rebut:

Veuillez contacter votre revendeur SHARP qui vous informera des conditions de reprise du produit. Les frais de reprise et de recyclage pourront vous être facturés. Les produits de petite taille (et en petites quantités) pourront être repris par vos organisations de collecte locales.

Espagne: veuillez contacter l'organisation de collecte existante ou votre administration locale pour les modalités de reprise de vos produits usagés.

#### 2. Pays hors de l'Union européenne

Si vous souhaitez mettre ce produit au rebut, veuillez contacter votre administration locale qui vous renseignera sur la méthode d'élimination correcte de cet appareil.

## Información sobre la eliminación



Atención: su producto está marcado con este símbolo.

Significa que los productos eléctricos y electrónicos usados no deberían mezclarse con los residuos domésticos generales.

Existe un sistema de recogida independiente para estos productos

### A. Información sobre eliminación para usuarios particulares

#### 1. En la Unión Europea

Atención: si quiere desechar este equipo, por favor no utilice el cubo de la basura habitual!

Los equipos eléctricos y electrónicos usados deberían tratarse por separado de acuerdo con la legislación que requiere un tratamiento, una recuperación y un reciclaje adecuados de los equipos eléctricos y electrónicos usados.

Tras la puesta en práctica por parte de los estados miembros, los hogares de particulares dentro de los estados de la Unión Europea pueden devolver sus equipos eléctricos y electrónicos a los centros de recogida designados sin coste alguno\*.

En algunos países\* es posible que también su vendedor local se lleve su viejo producto sin coste alguno si Ud. compra uno nuevo similar.

\*) Por favor, póngase en contacto con su autoridad local para obtener más detalles.

Si sus equipos eléctricos o electrónicos usados tienen pilas o acumuladores, por favor deséchelos por separado con antelación según los requisitos locales.

Al desechar este producto correctamente, ayudará a asegurar que los residuos reciban el tratamiento, la recuperación y el reciclaje necesarios, previniendo de esta forma posibles efectos negativos en el medio ambiente y la salud humana que de otra forma podrían producirse debido a una manipulación de residuos inapropiada.

#### 2. En otros países fuera de la Unión Europea

Si desea desechar este producto, por favor póngase en contacto con las autoridades locales y pregunte por el método de eliminación correcto.

Para Suiza: Los equipos eléctricos o electrónicos pueden devolverse al vendedor sin coste alguno, incluso si no compra ningún nuevo producto. Se puede encontrar una lista de otros centros de recogida en la página principal de [www.swico.ch](http://www.swico.ch) o [www.sens.ch](http://www.sens.ch).

### B. Información sobre Eliminación para empresas usuarias

#### 1. En la Unión Europea

Si el producto se utiliza en una empresa y quiere desecharlo:

Por favor póngase en contacto con su distribuidor SHARP, quien le informará sobre la recogida del producto. Puede ser que le cobren los costes de recogida y reciclaje. Puede ser que los productos de tamaño pequeño (y las cantidades pequeñas) sean recogidos por sus centros de recogida locales.

Para España: por favor, póngase en contacto con el sistema de recogida establecido o con las autoridades locales para la recogida de los productos usados.

#### 2. En otros países fuera de la Unión Europea

Si desea desechar este producto, por favor póngase en contacto con sus autoridades locales y pregunte por el método de eliminación correcto.

## Information om Ítervining



OBS! Produkten är märkt med symbolen ovan. Denna symbol indikerar att elektroniska produkter inte ska kastas i det vanliga hushållsavfallet eftersom det finns ett separat avfallshanterings-system för dem.

### A. Information om Ítervining av elektrisk utrustning för hushåll

#### 1. EU-länder

OBS! Kasta inte denna produkt i soporna!

Förbrukad elektrisk utrustning måste hanteras i enlighet med gällande miljölagstiftning och Ítervinningsföreskrifter. I enlighet med gällande EU-regler ska hushåll ha möjlighet att lämna in elektrisk utrustning till Ítervinningsstationer utan kostnad.\*

I vissa länder\* kan det även hända att man gratis kan lämna in gamla produkter till Íterförsäljaren när man köper en ny liknande enhet.

\*) Kontakta kommunen för vidare information.

Om utrustningen innehåller batterier eller ackumulatorer ska dessa först avlägsnas och hanteras separat i enlighet med gällande miljöföreskrifter.

Genom att hantera produkten i enlighet med dessa föreskrifter kommer den att tas om hand och Ítervinnas på tillämpligt sätt, vilket förhindrar potentiella negativa hälsos- och miljöeffekter.

#### 2. Länder utanför EU

Kontakta de lokala myndigheterna och ta reda på gällande sorterings- och Ítervinningsföreskrifter om du behöver göra dig av med denna produkt.

### B. Information om Ítervining för företag

#### 1. EU-länder

Gör så här om produkten ska kasseras:

Kontakta SHARPs Íterförsäljare för information om hur man gör till väga för att lämna tillbaka produkten. Det kan hända att en avgift för transport och Ítervining tillkommer. Mindre skrymmende produkter (om det rör sig om ett litet) kan eventuellt lämnas till lokala Ítervinningsstationer.

#### 2. Länder utanför EU

Kontakta de lokala myndigheterna och ta reda på gällande sorterings- och Ítervinningsföreskrifter om du behöver göra dig av med denna produkt.

## Informazioni per un corretto smaltimento



Attenzione: Il dispositivo è contrassegnato da questo simbolo, che segnala di non smaltire le apparecchiature elettriche ed elettroniche insieme ai normali rifiuti domestici. Per tali prodotti è previsto un sistema di raccolta a parte.

### A. Informazioni sullo smaltimento per gli utenti (privati)

#### 1. Nell'Unione europea

Attenzione: Per smaltire il presente dispositivo, non utilizzare il normale bidone della spazzatura!

Le apparecchiature elettriche ed elettroniche usate devono essere gestite a parte e in conformità alla legislazione che richiede il trattamento, il recupero e il riciclaggio adeguato dei suddetti prodotti.

In seguito alle disposizioni attuate dagli Stati membri, i privati residenti nella UE possono conferire gratuitamente le apparecchiature elettriche ed elettroniche usate a centri di raccolta designati\*.

In alcuni paesi\*, anche il rivenditore locale può ritirare gratuitamente il vecchio prodotto se l'utente acquista un altro nuovo di tipologia simile.

\*) Per maggiori informazioni si prega di contattare l'autorità locale competente.

Se le apparecchiature elettriche o elettroniche usate hanno batterie o accumulatori, l'utente dovrà smaltrirli a parte preventivamente in conformità alle disposizioni locali.

Lo smaltimento corretto del presente prodotto contribuirà a garantire che i rifiuti siano sottoposti al trattamento, al recupero e al riciclaggio necessari prevenendone il potenziale impatto negativo sull'ambiente e sulla salute umana, che potrebbe derivare da un'inadeguata gestione dei rifiuti.

#### 2. In paesi che non fanno parte dell'UE

Se si desidera eliminare il presente prodotto, contattare le autorità locali e informarsi sul metodo di smaltimento corretto.

Per la Svizzera: Le apparecchiature elettriche o elettroniche usate possono essere restituite gratuitamente al rivenditore, anche se non si acquista un prodotto nuovo. Altri centri di raccolta sono elencati sulle homepage di [www.swico.ch](http://www.swico.ch) o di [www.sens.ch](http://www.sens.ch).

### B. Informazioni sullo smaltimento per gli utenti commerciali

#### 1. Nell'Unione europea

Se il prodotto è impiegato a scopi commerciali, procedere come segue per eliminarlo.

Contattare il proprio rivenditore SHARP che fornirà informazioni circa il ritiro del prodotto. Potrebbero essere addebitate le spese di ritiro e riciclaggio. Prodotti piccoli (e quantitativi ridotti) potranno essere ritirati anche dai centri di raccolta locali.

Per la Spagna: Contattare il sistema di raccolta ufficiale o l'ente locale preposto al ritiro dei prodotti usati.

#### 2. In paesi che non fanno parte dell'UE

Se si desidera eliminare il presente prodotto, contattare le autorità locali e informarsi sul metodo di smaltimento corretto.

## Informatie over verantwoorde verwijdering



### A. Informatie over afvalverwijdering voor gebruikers (particuliere huishoudens)

#### 1. In de Europese Unie

Let op: Deze apparatuur niet samen met het normale huisafval weggooien!

Afgedankte elektrische en elektronische apparatuur moet gescheiden worden ingezameld conform de wetgeving inzake de verantwoorde verwerking, terugwinning en recycling van afgedankte elektrische en elektronische apparatuur.

Na de invoering van de wet door de lidstaten mogen particuliere huishoudens in de lidstaten van de Europese Unie hun afgedankte elektrische en elektronische apparatuur kosteloos\* naar hiertoe aangewezen inzamelingsinrichtingen brengen\*. In sommige landen\* kunt u bij de aanschaf van een nieuw apparaat het oude product kosteloos bij uw lokale distributeur inleveren.

\*) Neem contact op met de plaatselijke autoriteiten voor verdere informatie.

Als uw elektrische of elektronische apparatuur batterijen of accumulatoren bevat dan moet u deze afzonderlijk conform de plaatselijke voorschriften weggooien.

Door dit product op een verantwoorde manier weg te gooien, zorgt u ervoor dat het afval de juiste verwerking, terugwinning en recycling ondergaat en potentiële negatieve effecten op het milieu en de menselijke gezondheid worden voorkomen die anders zouden ontstaan door het verkeerd verwerken van het afval.

#### 2. In andere landen buiten de Europese Unie

Als u dit product wilt weggooien, neem dan contact op met de plaatselijke autoriteiten voor informatie omtrent de juiste verwijderingsprocedure.

Voor Zwitserland: U kunt afgedankte elektrische en elektronische apparatuur kosteloos bij de distributeur inleveren, zelfs als u geen nieuw product koopt. Aanvullende inzamelingsinrichtingen zijn vermeld op de startpagina van [www.swico.ch](http://www.swico.ch) of [www.sens.ch](http://www.sens.ch).

### B. Informatie over afvalverwijdering voor bedrijven

#### 1. In de Europese Unie

Als u het product voor zakelijke doeleinden heeft gebruikt en als u dit wilt weggooien:

Neem contact op met uw SHARP distributeur die u inlichtingen verschafft over de terugname van het product. Het kan zijn dat u een afvalverwijderingsbijdrage voor de terugname en recycling moet betalen. Kleine producten (en kleine hoeveelheden) kunnen door de lokale inzamelingsinrichtingen worden verwerkt.

Voor Spanje: Neem contact op met de inzamelingsinrichting of de lokale autoriteiten voor de terugname van uw afgedankte producten.

#### 2. In andere landen buiten de Europese Unie

Als u dit product wilt weggooien, neem dan contact op met de plaatselijke autoriteiten voor informatie omtrent de juiste verwijderingsprocedure.

## Informação sobre Eliminação de Produtos



Atenção: O seu produto está identificado com este símbolo. Significa que os produtos eléctricos e electrónicos não devem ser misturados com o lixo doméstico comum. Existe um sistema de recolhas específico para estes produtos.

### A. Informações sobre a Eliminação de Produtos para os Utilizadores (particulares)

#### 1. Na União Europeia

Atenção: Se quiser eliminar este equipamento, não o deve fazer juntamente com o lixo doméstico comum!

O equipamento eléctrico e electrónico deve ser tratado separadamente e ao abrigo da legislação aplicável que obriga a um tratamento, recuperação e reciclagem adequados de equipamentos eléctricos e electrónicos usados.

Após a implementação desta legislação por parte dos Estados-membros, todos os cidadãos residentes na União Europeia poderão entregar o seu equipamento eléctrico e electrónico usado em estações de recolha específicas a título gratuito\*.

Em alguns países\* o seu revendedor local também pode recolher o seu equipamento usado a título gratuito na compra de um novo equipamento.

\* Contacte as entidades locais para mais informações.

Se o seu equipamento eléctrico e electrónico usado funcionar a pilhas ou baterias, deverá eliminá-las em separado, conforme a legislação local, e antes de entregar o seu equipamento.

Ao eliminar este produto correctamente estará a contribuir para que o lixo seja submetido aos processos de tratamento, recuperação e reciclagem adequados. Desta forma é possível evitar os efeitos nocivos que o tratamento inadequado do lixo poderia provocar no ambiente e na saúde.

#### 2. Em outros Países fora da UE

Se quiser eliminar este produto, contacte as entidades locais e informese sobre o método correcto para proceder à sua eliminação.

Na Suíça: O equipamento eléctrico e electrónico é aceite, a título gratuito, em qualquer revendedor, mesmo que não tenha adquirido um novo produto. Poderá encontrar uma lista das estações de recolha destes equipamentos na página da Web [www.swich.ch](http://www.swich.ch) ou [www.sens.ch](http://www.sens.ch).

### B. Informações sobre a Eliminação de Produtos para Utilizadores-Empresas

#### 2. Na União Europeia

Se o produto for usado para fins comerciais e quiser eliminá-lo:

Contacte o seu revendedor SHARP que irá informá-lo sobre a melhor forma de eliminar o produto. Poderá ter de pagar as despesas resultantes da recolha e reciclagem do produto. Alguns produtos mais pequenos (e em pequenas quantidades) poderão ser recolhidos pelas estações locais.

Na Espanha: Contacte o sistema de recolhas público ou as entidades locais para mais informações sobre a recolha de produtos usados.

#### 2. Em outros Países fora da UE

Se quiser eliminar este produto, contacte as entidades locais e informese sobre o método correcto para proceder à sua eliminação.

## Tietoja laitteiden hävittämisestä



Huomio: Tuote on merkitty tällä symbolilla. Tämä tarkoittaa, että käytettyjä sähkö- ja elektroniikkalaitteita ei saa sekoittaa kotitalouden yleisjätteiden kanssa. Nämille tuotteille on olemassa erillinen keräysjärjestelmä.

### A. Hävitsojien käyttäjille (yksityiset kotitaloudet)

#### 1. Euroopan unionissa

Huomio: Jos haluat hävittää tämän laitteen, älä käytä tavallista jättesäiliötä.

Käytetyt sähkö- ja elektroniikkalaitteet pitää hävittää erikseen noudattamalla laitsääädintöä, joka takaa käytettyjen sähkö- ja elektroniikkalaitteiden olkean käsittelyn, keräämisen ja kierrättämisen.

Jäsenvaltioiden täytäntöönpanoa seuraten yksityiset kotitaloudet EU:n jäsenvaltioissa voivat palauttaa käytetyt sähkö- ja elektroniikkalaitteet määrittyihin keräyspaikoihin ilmaiseksi\*. Joissakin maissa\* paikalliset vähittäismyyjät voivat myös ottaa vastaan vanhan tuotteen ilmaiseksi, jos asiakas ostaa vastaan uuden tuotteen.

\*) Pyydä lisätietoja paikallisia viranomaisia.

Jos käytettyisssä sähkö- tai elektroniikkalaitteissa käytetään paristoja tai akkuja, hävitä nämä tuotteet etukäteen erikseen paikallisten säädösten mukaisesti.

Hävittämällä tuotteen asianmukaista, autat varmistamaan, että jätteet käsittellään, kerätään ja kierrätetään asianmukaissella tavalla. Nämä välttytään haitallisilta ympäristö- ja terveysvaikutuksilta, joita saattaa olla seuraamuksena jätteen epääsiäismukaisesta käsittelystä.

#### 2. Muiissa maissa EU:n ulkopuolella

Jos haluat hävittää tuotteen, ota yhteys paikallisiin viranomaisiin ja pyydä ohjeita tuotteen asianmukaiseen hävittämiseen.

### B. Hävitsojien yrityskäyttäjille

#### 2. Euroopan unionissa

Jos tuotetta on käytetty yrityskäytössä, ja haluat hävittää sen,

Ota yhteys SHARP-jällemyyjään, joka antaa sinulle lisätietoja tai ottaa tuotteen vastaan. Sinulta saatetaan veloittaa tuotteen vastaanottamisesta ja kierrätyksestä johtuvat kustannukset. Paikalliset keräyspisteet saattavat ottaa vastaan pienet tuotteet (ja pienet määrität).

#### 2. Muiissa maissa EU:n ulkopuolella

Jos haluat hävittää tuotteen, ota yhteys paikallisiin viranomaisiin ja pyydä ohjeita tuotteen asianmukaiseen hävittämiseen.

## Informacje dotyczące usuwania zużytego urządzenia



Uwaga: Państwa produkt oznaczony jest tym symbolem. Oznacza to, że zużytego sprzętu elektrycznego i elektronicznego nie należy łączyć z odpadami z gospodarstw domowych. Dla tego typu produktów istnieje odrębny system zbiórki odpadów.

### A. Informacje dla użytkowników (prywatne gospodarstwa domowe) dotyczące usuwania odpadów

#### 1. W krajach Unii Europejskiej

Uwaga: Jeśli chce Państwo usunąć to urządzenie, prosimy nie używać zwykłych pojemników na śmieci!

Zużyty sprzęt elektryczny i elektroniczny należy usuwać oddzielnie, zgodnie z wymogami prawa dotyczącymi odpowiedniego przetwarzania, odzysku i recyklingu zużytego sprzętu elektrycznego i elektronicznego.

Po wdrożeniu przepisów unijnych w Państwach Członkowskich prywatne gospodarstwa domowe na terenie krajów UE mogą bezpłatnie\* wracać zużyty sprzęt elektryczny i elektroniczny do wyznaczonych punktów zbiórki odpadów. W niektórych krajach\* można bezpłatnie zwrócić stary produkt do lokalnych punktów sprzedaży detalicznej pod warunkiem, że zakupią Państwo podobny nowy produkt.

\*W celu uzyskania dalszych informacji na ten temat należy skontaktować się z lokalnymi władzami.

Jeśli zużyty sprzęt elektryczny i elektroniczny jest wyposażony w baterie lub akumulatory, należy je usunąć oddzielnie, zgodnie z wymogami lokalnych przepisów.

Jeśli ten produkt zostanie usunięty we właściwy sposób, pomoże Państwu zapewnić, że odpady zostaną poddane przetworzeniu, odzyskowi i recyklingowi, a tym samym zapobiec potencjalnym negatywnym skutkom dla środowiska naturalnego i zdrowia ludzkiego, które w przeciwnym razie mogłyby mieć miejsce na skutek niewłaściwej obróbki odpadów.

#### 2. Kraje pozaunijnie

Jeśli chce Państwo pozbyć się produktu, należy skontaktować się z władzami lokalnymi i uzyskać informacje na temat prawidłowej metody usunięcia produktu.

Dotyczy Szwajcarii: Zużyte urządzenia elektryczne i elektroniczne można zwrócić bezpłatnie do dostawcy, bez konieczności zakupu nowego produktu. Adresy punktów odbioru zużytego sprzętu można znaleźć na stronie [www.swico.ch](http://www.swico.ch) lub [www.sens.ch](http://www.sens.ch).

### B. Informacje dla użytkowników biznesowych dotyczące usuwania odpadów

#### 1. W krajach Unii Europejskiej

W przypadku gdy produkt używany jest do celów handlowych i zamierza go Państwo usunąć:

Należy skontaktować się z dealerem firmy SHARP, który poinformuje o możliwości zwrotu wyrobu. Być może będą Państwo musieli ponieść koszty zwrotu i recyklingu produktu. Produkty niewielkich rozmiarów (i w małej liczbie) można zwrócić do lokalnych punktów zbiórki odpadów.

Dotyczy Hiszpanii: Skontaktuj się z punktem odbioru lub władzami lokalnymi w sprawie oddania używanego produktu.

#### 2. Kraje pozaunijnie

Jeśli chce Państwo usunąć ten produkt, należy skontaktować się z władzami lokalnymi i uzyskać informacje na temat prawidłowej metody jego usunięcia.

## Information on Proper Disposal



Attention: Your product is marked with this symbol. It means that used electrical and electronic products should not be mixed with general household waste. There is a separate collection system for these products.

### A. Information on Disposal for Users (private households)

#### 1. In the European Union

Attention: If you want to dispose of this equipment, please do not use the ordinary dustbin!

Used electrical and electronic equipment must be treated separately and in accordance with legislation that requires proper treatment, recovery and recycling of used electrical and electronic equipment.

Following the implementation by member states, private households within the EU states may return their used electrical and electronic equipment to designated collection facilities free of charge\*.

In some countries\* your local retailer may also take back your old product free of charge if you purchase a similar new one.

\*) Please contact your local authority for further details. If your used electrical or electronic equipment has batteries or accumulators, please dispose of these separately beforehand according to local requirements.

By disposing of this product correctly you will help ensure that the waste undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health which could otherwise arise due to inappropriate waste handling.

#### 2. In other Countries outside the EU

If you wish to discard this product, please contact your local authorities and ask for the correct method of disposal.

For Switzerland: Used electrical or electronic equipment can be returned free of charge to the dealer, even if you don't purchase a new product. Further collection facilities are listed on the homepage of [www.swico.ch](http://www.swico.ch) or [www.sens.ch](http://www.sens.ch).

### B. Information on Disposal for Business Users

#### 1. In the European Union

If the product is used for business purposes and you want to discard it:

Please contact your SHARP dealer who will inform you about the take-back of the product. You might be charged for the costs arising from take-back and recycling. Small products (and small amounts) might be taken back by your local collection facilities.

For Spain: Please contact the established collection system or your local authority for take-back of your used products.

#### 2. In other Countries outside the EU

If you wish to discard of this product, please contact your local authorities and ask for the correct method of disposal.

### Informationen zur Batterieentsorgung

Die für dieses Produkt mitgelieferte Batterie kann Spuren von Blei enthalten.

Für die EU: Die durchgestrichene Abfalltonne bedeutet, dass gebrauchte Batterien nicht mit dem Haushaltsmüll entsorgt werden sollten! Es gibt getrennte Sammelsysteme für gebrauchte Batterien, welche eine ordnungsgemäße Behandlung und Verwertung entsprechend gesetzlicher Vorgaben erlauben. Weitere Einzelheiten erhalten Sie von Ihrer Gemeindeverwaltung.

Für die Schweiz: Die gebrauchte Batterie kann an der Verkaufsstelle zurückgegeben werden.

Für andere Nicht-EU Staaten: Bitte erkundigen Sie sich bei Bedarf bei Ihrer Gemeindeverwaltung nach weiteren Informationen zur Entsorgung von gebrauchten Batterien.



Pb

### Information sur la mise au rebut de la pile

Les piles/accus fournis avec ce produit peuvent contenir des traces de Plomb.

Au sein de l'Union Européenne: Le symbole de la poubelle sur roues barrée laisse supposer que les piles/accus usagées ne doivent pas être mélangées avec les déchets ménagers! Il existe un mode de collecte séparé pour les piles/accus usagées, ce qui permet d'effectuer un traitement et un recyclage en accord avec la législation. Veuillez contacter une autorité locale pour plus de renseignements sur le système mis en place.

Pour la Suisse: Les piles/accus usagées doivent être retournées chez votre détaillant.

Pour les pays hors Union Européenne: Veuillez contacter une autorité locale afin de connaître la bonne méthode à utiliser pour la collecte de vos piles/accus usagées.



Pb

### Información sobre la eliminación de la batería

Las baterías suministradas con este producto contienen pequeñas cantidades de Plomo.

Para EU: El contenedor de basura con ruedas tachado indica que las baterías usadas no deberían mezclarse con los residuos domésticos generales. Existe un sistema de recogida independiente de baterías usadas, para permitir un correcto tratamiento y reciclado de acuerdo con la legislación vigente. Por favor póngase en contacto con el sistema de recogida establecido o con las autoridades locales para la recogida selectiva de las baterías usadas.

Para Suiza: Las baterías usadas deben ser retornadas al punto de venta.

Para otros países fuera de la Unión Europea: Por favor póngase en contacto con las autoridades locales para un correcto procedimiento de eliminación de las baterías usadas.



Pb

### Information om batteriavnyttning

Batteriet som följer med denna produkt kan innehålla spår av Bly.

For EU: Batteriet är märkt med den överkorsade soptunnan vilket betyder att det inte ska kastas i det vanliga hushållsavfallet. Det finns ett separat insamlingsystem för batterier för att underlätta korrekt behandling och återvinning enligt gällande lagstiftning. Kontakta kommunen för vidare information om insamling och återvinning.

For Schweiz: Använda batterier lämnas till inköpsstället.

För länder utanför EU: Kontakta de lokala myndigheterna för information om gällande sorterings- och återvinningsföreskrifter om du behöver göra dig av med ett använt batteri.



Pb

### Informazioni sullo smaltimento della batteria

La batteria fornita con questo prodotto contiene tracce di Piombo.

Per EU: Il cassetto barrato indica che le batterie usate non devono essere gettate assieme ai rifiuti domestici! Vi è un sistema di raccolta differenziata per le batterie usate, che consente il loro corretto trattamento e riciclo secondo quanto previsto dalle leggi vigenti. Vi prego di contattare le locali autorità per i dettagli del sistema di raccolta e riciclaggio.

Per la Svizzera:

Le batterie usate devono essere restituite al punto vendita.

Per altri Stati non-EU: Vi prego di contattare le autorità locali per conoscere il metodo corretto di conferimento delle batterie usate.



Pb

### Information sur la mise au rebut de la pile

Les piles/accus fournies avec ce produit peuvent contenir des traces de Plomb.

Au sein de l'Union Européenne: Le symbole de la poubelle sur roues barrée laisse supposer que les piles/accus usagées ne doivent pas être mélangées avec les déchets ménagers! Il existe un mode de collecte séparé pour les piles/accus usagées, ce qui permet d'effectuer un traitement et un recyclage en accord avec la législation. Veuillez contacter une autorité locale pour plus de renseignements sur le système mis en place.

Pour la Suisse: Les piles/accus usagées doivent être retournées chez votre détaillant.

Pour les pays hors Union Européenne: Veuillez contacter une autorité locale afin de connaître la bonne méthode à utiliser pour la collecte de vos piles/accus usagées.

### Information over afvalverwerking van batterijen

De batterij die bij dit toestel geleverd wordt bevat sporen van Lood.

Voor EU: De doorgestreepte vuilnisbak op wieltjes duidt aan dat de gebruikte batterijen niet mogen terechtkomen in het gewone huishoudelijke afval. Er bestaat een gescheiden ophalsysteem voor deze gebruikte batterijen om eigen behandeling en recyclage volgens de wetgeving toe te laten. Gelieve de lokale autoriteiten te contacteren voor de details van ophaling en recyclage.

Voor Zwitserland: De gebruikte batterij moet bij het verkooppunt teruggestrakt worden.

Voor andere niet EU landen: Gelieve contact op te nemen met uw lokale autoriteiten voor de correcte methode van verwerking van de gebruikte batterijen.

### Informação sobre Eliminação de Pilhas

A bateria fornecida com este produto contém traços de chumbo.

Para a União Europeia: O contentor de rodas traçado significa que as baterias usadas não deverão ser colocadas junto com o lixo doméstico! Existe um sistema de separação próprio para baterias usadas, para permitir um tratamento e reciclagem próprio de acordo com a legislação em vigor. Por favor contacte as autoridades locais para mais detalhes nos esquemas de recolha e reciclagem.

Para a Suíça: As baterias usadas deverão ser devolvidas ao ponto de venda.

Para os outros países fora da União Europeia: Por favor contacte a sua autoridade local para o método correcto de disposição das baterias usadas.

### Tietoja paristojen hävitämisestä

Tämän tuotteen mukana oleva paristo/akku saattaa sisältää jäänteitä Lyijyä. EU-maat: Paristo/akku on merkityy liiviytävän roskasäiliön symbolilla, mikä tarkoittaa, että sitä ei saa hävittää kotitalouden yleisjätteiden kanssa. Paristoille/akkuille on olemassa erillinen keräysjärjestelmä, joka helpottaa niiden asiamukaista käsittelyä ja lainmukaista kierrätystä. Ota yhteys kuntaviranomaisiin lisätietoa keräyksestä ja kierräyksestä.

Sveitsi: Käytetystä paristot/akun palautetaan ostopaikkaan.

EU:n ulkopuoliset maat: Ota yhteys paikallisia viranomaisiin saadaksesi lisätietoa voimassa olevista lajittelua- ja kierrätyssääädöksistä ja ohjeet käytetyn pariston/akun hävitämiseen.

### Informacja na temat usuwania baterii

Bateria dostarczana z tym produktem zawiera śladowe ilości ołowiu.

W krajach Unii Europejskiej: Przekreślony pojemnik na odpady oznacza, że zużytych baterii nie należy wyrzucać do pojemników z odpadami domowymi! Dla zużytych baterii istnieją oddzielne systemy zbiórki, które zapewniają prawidłowe przetwarzanie i odzysk zgodnie z obowiązującym prawem. Szczegóły na temat systemów zbiórki otrzymają Państwo w lokalnych władzach.

W Szwajcarii: Zużyte baterie można wrócić w punkcie sprzedaży.

Kraje pozaunijnie: W celu uzyskania szczegółowych informacji na temat prawidłowej metody pozbycia się zużytych baterii, proszę o kontakt z władzami lokalnymi.

### Information on Battery Disposal

The battery supplied with this product contains traces of Lead.

For EU: The crossed-out wheeled bin implies that used batteries should not be put to the general household waste! There is a separate collection system for used batteries, to allow proper treatment and recycling in accordance with legislation. Please contact your local authority for details on the collection and recycling schemes.

For Switzerland: The used battery is to be returned to the selling point.

For other non-EU countries: Please contact your local authority for correct method of disposal of the used battery.



Pb

# ENGLISH

- XL-BD601PH BD Hi Fi Component System consisting of XL-BD601PH (main unit) and CP-BD601PH (speaker system).

## Introduction

Thank you for purchasing this SHARP product. To obtain the best performance from this product, please read this manual carefully. It will guide you in operating your SHARP product.


### Special Note:

Supply of this product does not convey a license nor imply any right to distribute content created with this product in revenue-generating broadcast systems (terrestrial, satellite, cable and/or other distribution channels), revenue-generating streaming applications (via Internet, intranets and/or other networks), other revenue-generating content distribution systems (pay-audio or audio-on-demand applications and the like) or on revenue-generating physical media (compact discs, digital versatile discs, semiconductor chips, hard drives, memory cards and the like). An independent license for such use is required. For details, please visit <http://mp3licensing.com>

MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.

## Accessories

The following accessories are included.

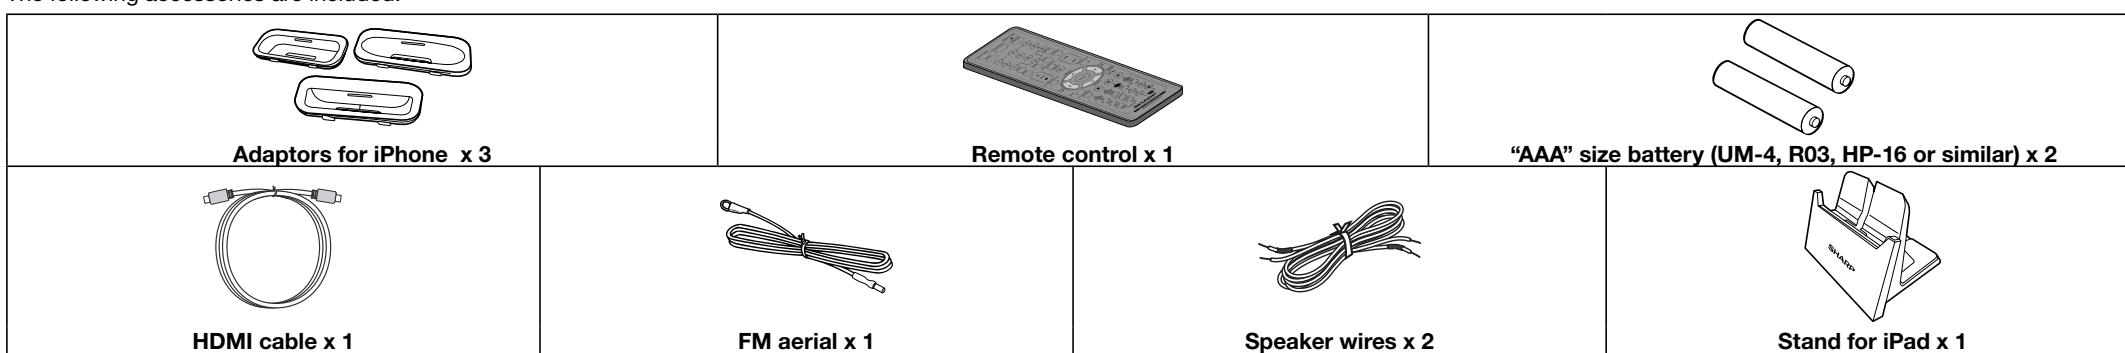

## CONTENTS

Introduction.....	1	Remote Control .....	8	Volume auto fade-in .....	12
Special Note:.....	1	System connections.....	9	Volume control.....	12
Accessories .....	1	USB 1, USB 2 terminals and Video Out socket.....	9	Speaker output selection (HDMI connection).....	12
Precautions .....	3	Aerial connection.....	9	Auto power on function.....	12
General .....	3	Speaker connection .....	9	Auto power off function.....	12
Volume control.....	3	Demonstration mode.....	10	Muting .....	12
About Media Types .....	3	Connecting iPod or iPhone to TV .....	10	X-Bass control.....	12
Blu-ray Disc .....	3	AC power connection .....	10	Bass control .....	13
Types of Discs/Media Formats that Can Be Used with This Unit .....	3	HDMI connection (TV, projector) .....	10	Treble control .....	13
Discs that Cannot Be Used with This Unit.....	4	Connecting to an amplifier/AV receiver .....	10	Function Selector .....	13
About Disc Contents .....	5	Digital audio connection.....	11	Setting the clock (Remote control only) .....	13
The Icons Used in This Operation Manual.....	5	Line input connection (TV, etc.) .....	11	Before Starting Playback .....	13
Important Information.....	6	Wired connection (LAN cable).....	11	Language Setting .....	13
Disc Precautions.....	6	Broadband Internet Connection .....	11	Operating a TV Using the Remote Control .....	13
License and Copyright .....	6	Subwoofer pre-out connection.....	11	To change the TV manufacturer setting .....	14
Controls and indicators .....	7	Remote control .....	12	Using AQUOS LINK .....	16
Front panel .....	7	Battery installation.....	12	Audio Return Channel (ARC) (Audio Return Channel submenu) .....	16
Display.....	7	Test of the remote control .....	12	Using 3D .....	16
Speaker system.....	7	General control .....	12	Control Panel .....	17
Speaker grilles are removable .....	7	Turning the Power On .....	12		
		Display brightness control.....	12		

## Contents (continued)


---

<b>Video/Picture/Music Playback</b>	<b>18</b>	<b>Playing back video on demand streaming content</b>	<b>34</b>	Basic Operation.....	41
Loading a Disc.....	18	Playing back YouTube content .....	34	Playback.....	41
BD/DVD Video Playback.....	18	iPod, iPhone and iPad connection (USB 2 only) .....	35	Picture.....	41
BD/DVD Menus .....	18	iPod, iPhone or iPad playback (USB 2) .....	35	Sound.....	42
Enjoying BONUSVIEW or BD-LIVE.....	19	iPhone playback .....	35	Network.....	42
DVD-R/-RW (VR format) / BD-RE/-R (BDAV format) Playback.....	20	iPod and iPhone connection (Dock only) .....	35	Other.....	42
Audio CD Playback .....	21	To insert adaptor for iPod or iPhone .....	35	Condensation .....	42
Audio Data (MP3 File) Playback .....	21	To remove adaptor for iPod or iPhone .....	35	If problem occurs .....	42
Displaying Still Images (JPEG files).....	22	iPod or iPhone playback (Dock only).....	35	Factory reset, clearing all memory .....	42
Accessing DLNA servers.....	23	To disconnect iPod, iPhone or iPad.....	36	Before transporting the unit .....	42
<b>Playback Functions</b>	<b>24</b>	Watching videos on a TV connected to iPod or iPhone .....	36	<b>Maintenance</b> .....	<b>42</b>
Fast Forward/Reverse (Search).....	24	Navigating the iPod, iPhone or iPad menus .....	36	Cleaning the cabinet.....	42
Skipping to the Next or the Start of the Current Chapter (Track/Title).....	24	Various iPod, iPhone and iPad functions.....	36	<b>On-screen Error Messages</b> .....	<b>43</b>
Pause/Frame Advance Playback.....	24	<b>Listening to the radio</b> .....	<b>36</b>	<b>Specifications</b> .....	<b>43</b>
Slow Playback (Forward/Reverse).....	24	Tuning .....	36	General .....	43
Repeat Playback of a Title or Chapter (Repeat Playback).....	25	Memorising a station.....	37	Amplifier .....	43
Partial Repeat Playback (Repeat Playback of a Specified Part).....	25	To recall a memorised station.....	37	BD player .....	43
Displaying the Audio Information .....	25	To scan the preset stations.....	37	USB .....	43
Switching Subtitles.....	25	To erase entire preset memory .....	37	Tuner .....	43
Switching the Angle.....	25	<b>Using the Radio Data System (RDS)</b> .....	<b>37</b>	Speaker .....	43
Displaying the Angle Mark.....	26	Information provided by RDS .....	37	<b>Glossary</b> .....	<b>44</b>
<b>Settings During Playback</b>	<b>26</b>	Using the Auto Station Programme Memory (ASPM) .....	38	<b>Network Service Disclaimer</b> .....	<b>45</b>
Function Control .....	26	Notes: for RDS operation .....	38	<b>About Software License</b> .....	<b>46</b>
<b>Settings</b>	<b>27</b>	To recall stations in memory .....	38		
Common operations.....	27	<b>Timer and sleep operation (Remote control only)</b> .....	<b>39</b>		
Setting the PIN code for the first time .....	27	Timer playback .....	39		
Parental Control Setting .....	27	Sleep operation .....	40		
Audio Video Settings .....	27	To use timer and sleep operation together.....	40		
Smart Settings.....	28	<b>Enhancing your system</b> .....	<b>40</b>		
AQUOS LINK.....	28	Listening to the playback sounds of portable audio unit, etc. ....	40		
Playback Setting.....	28	Headphones .....	40		
On Screen Language.....	29	<b>Troubleshooting chart</b> .....	<b>41</b>		
Version.....	29	Tuner .....	41		
System.....	29	USB .....	41		
Communication Setup.....	29	iPod, iPhone or iPad .....	41		
USB Memory Management.....	31	Power.....	41		
Software Update Settings .....	31				

## Precautions

### ■ General

- Please ensure that the equipment is positioned in a well ventilated area and ensure that there is at least 10 cm (4") of free space along the sides, top and back of the equipment.

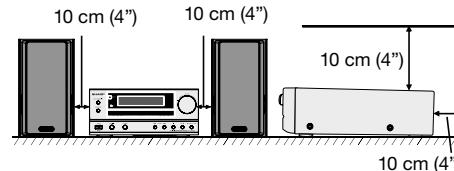

- Use the unit on a firm, level surface free from vibration.
- Place the speakers at least 30 cm (12") away from any CRT TV to avoid colour variations across the TV screen. If the variations persist, move the speakers further away from the TV. LCDTV is not prone to such variation.
- Keep the unit away from direct sunlight, strong magnetic fields, excessive dust, humidity and electronic/electrical equipment (home computers, facsimiles, etc.) which generate electrical noise.
- Do not place anything on top of the unit.
- Do not expose the unit to moisture, to temperatures higher than 60°C (140°F) or to extremely low temperatures.
- If your system does not work properly, disconnect the AC power lead from the wall socket. Plug the AC power lead back in, and then turn on your system.
- In case of an electrical storm, unplug the unit for safety.
- Hold the AC power plug by the head when removing it from the wall socket, as pulling the lead can damage internal wires.
- The AC power plug is used as a disconnect device and shall always remain readily operable.
- **Do not remove the outer cover, as this may result in electric shock. Refer internal service to your local SHARP service facility.**
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Attention should be drawn to the environmental aspects of battery disposal.
- This unit should only be used within the range of 5°C - 35°C (41°F - 95°F).
- The apparatus is designed for use in moderate climates.

### Warning:

The voltage used must be the same as that specified on this unit. Using this product with a higher voltage other than that which is specified is dangerous and may result in a fire or other type of accident causing damage. SHARP will not be held responsible for any damage resulting from use of this unit with a voltage other than that which is specified.

### ■ Volume control

The sound level at a given volume setting depends on speaker efficiency, location, and various other factors. It is advisable to avoid exposure to high volume levels. Do not turn the volume on to full at switch on. Listen to music at moderate levels. Excessive sound pressure from earphones and headphones can cause hearing loss.

### Precautions on viewing stereoscopic 3D images

- Do not view stereoscopic 3D images if you have a history of photosensitivity, heart disease or poor health. This may cause the symptoms to worsen.
- If you experience any health problems such as fatigue and discomfort while viewing stereoscopic 3D images, immediately discontinue viewing. Continuing viewing after symptoms appear may cause health risks. Take a break until the symptoms have completely disappeared.
- Ages of 5-6 or over are recommended for viewing stereoscopic 3D images. Symptoms such as fatigue and discomfort are difficult to determine in young children, therefore they may suddenly become ill. When viewing 3D images with children, please watch for eye strain symptoms.
- When viewing stereoscopic 3D images, take a moderate break after watching one title. Viewing for extended periods may cause visual strain.

### Precautions when cleaning this product

- Turn off the main power and unplug the AC power lead from the wall socket before handling.
- To clean the outer cabinet, periodically wipe it with a soft cloth (cotton, flannel, etc.).
- For severe dirt, soak a soft cloth (cotton, flannel, etc.) in some neutral detergent diluted with water, wring the cloth out thoroughly, wipe off the dirt, then wipe again with a soft, dry cloth.
- Do not use chemicals or a chemically treated cloth for cleaning. It may damage the cabinet finish.

## About Media Types

### ■ Blu-ray Disc

Blu-ray Disc is the ultimate next generation optical media format, offering the following key features:

- Largest capacity (25 GB single layer – 50 GB dual layer) – with over 5 times the amount of content possible with current DVDs, particularly well suited for high definition feature films with extended levels of interactive features
- Pristine picture quality with the capability for full high definition 1920 x 1080p resolution
- Best audio possible with uncompressed surround sound (higher quality than even theatre audio)
- Broadest industry support – ensuring more choice for consumers in the marketplace
- Hardware products will be backward compatible with DVDs, allowing continued enjoyment of existing DVD libraries.

- Disc Durability – new breakthroughs in hard coating technologies gives Blu-ray Discs the strongest resistance to scratches and finger prints.

### ■ Types of Discs/Media Formats that Can Be Used with This Unit

- The following discs can be played back in this Unit. Do not use an 8 cm to 12 cm adapter.
- Use discs that conform to compatible standards as indicated by the presence of official logos on the disc label. Playback of discs not complying with these standards is not guaranteed. In addition, the image quality or sound quality is not guaranteed even if the discs can be played back.

Disc Type	Recording Format	Contents	Disc Size
BD Video	Region code B/ALL   	—	Audio + Video (Movie) 12 cm
BD-RE DL BD-R DL	BDMV/BDAV format		
DVD Video	Region code 2/ALL  	Video format	Audio + Video (Movie) 12 cm 8 cm
DVD+RW/DVD+R DVD-RW/DVD-R DVD+R DL/DVD-R DL	Video/VR/AVCHD format (finalised disc only) DivX+HD (H.264/MKV) JPEG* <sup>2</sup> MP3* <sup>3</sup>	Audio + Video (Movie)	12 cm 8 cm
Audio CD* <sup>1</sup>	Audio CD (CD-DA)	Audio	12 cm 8 cm
CD-RW/CD-R	Audio CD (CD-DA) JPEG* <sup>2</sup> MP3* <sup>3</sup>	Audio Still image (JPEG file) Audio	

Media Format	Recording Format	Contents
USB memory device	DivX+HD (H.264/MKV)	Audio + Video (Movie)
	JPEG* <sup>2</sup>	Still image (JPEG file)
	MP3* <sup>3</sup>	Audio

- BD/DVD video units and discs have region codes, which dictate the regions in which a disc can be played. This Unit's region code is B for BD and 2 for DVD. (Discs marked ALL will play in any unit.)

## About Media Types (continued)

- BD/DVD video operations and functions may be different from the explanations in this manual and some operations may be prohibited due to disc manufacturer's settings.
- If a menu screen or operating instructions are displayed during playback of a disc, follow the operating procedure displayed.

### Note:

- Playback for some of the discs in the left side column tables may not be possible depending on the disc.
- "Finalise" refers to a recorder processing a recorded disc so that it will play in other DVD units/recorders as well as this unit. Only finalised DVD discs will play back in this unit. (This unit does not have a function to finalise discs.)
- Some discs cannot be played back depending on the recording format.
- DivX playback may not be available depending on the DivX content and file.

### ■ Discs that Cannot Be Used with This Unit

The following discs cannot be played back or will not play back properly on this Unit. If such a disc is mistakenly played back, speaker damage may occur. Never attempt to play back these discs.

CDG, Video CD, Photo CD, CD-ROM, CD-TEXT, SVCD, SACD, PD, CDV, CVD, DVD-RAM, DVD-Audio, BD-RE with the cartridge, CD-WMA

### Discs with unusual shapes cannot be played.

- Discs with unusual shapes (heart-shaped or hexagonal discs, etc.) cannot be used. The use of such discs will cause malfunction.

### The following BD video discs cannot be played.

- Discs not displaying "B" or "ALL" for the region code (discs sold outside the authorised marketing area).\*
- Discs produced illegally.
- Discs recorded for commercial use.

\* The region code for this product is B.

### The following DVD video discs cannot be played.

- Discs not displaying "2" or "ALL" for the region code (discs sold outside the authorised marketing area).\*
- Discs produced illegally.
- Discs recorded for commercial use.

\* The region code for this product is 2.

### The following BD-RE/R, DVD-RW/R and DVD+RW/R discs cannot be played.

- Discs on which data has not been recorded cannot be played back.
- Sharp cannot guarantee playback compatibility for all self-recorded BD-discs because Blu-ray is a new and evolving format. The playback compatibility will be affected by your choice of BD-recorder, BD-disc and BD-burning software. Please always ensure you are using the latest software versions on all units and contact the individual manufacturers for further help if required.

To avoid inconveniences, please check the playback compatibility of your self-recorded disc before you purchase this BD-unit. For maximum playback compatibility of self-recorded BD-discs Sharp recommends that the BDMV/BDAV standards are used. If a playback issue occurs after purchase, please download the latest software version for your BD-unit from the Sharp internet page or ask your Sharp-Dealer.

This BD-unit uses the latest technology available at the time

of development and cannot guarantee support for future enhancements or changes to the standard.

### The following Audio CD\*<sup>1</sup> discs cannot be played.

- Discs containing a signal for the purpose of protecting copyrights (copy control signal) may not be played back with this Unit.
- This Unit has been designed on the premise of playing back Audio CDs that comply with CD (Compact Disc) standards.

### The following CD-RW/R discs cannot be played.

- Discs on which data has not been recorded cannot be played back.
- Discs recorded in a format other than an Audio CD and JPEG/MP3 file format cannot be played back.
- Discs may not be played back depending on their recording status or the status of the disc itself.
- Discs may not be played back depending on their compatibility with this Unit.

### \*<sup>2</sup> About the JPEG file format

JPEG is a type of file format for storing still-image files (photos, illustrations, etc.). The Unit lets you play JPEG format still-image files.

### File formats that are not compatible.

- Still images in formats other than JPEG (such as TIFF) cannot be played.
- There may be some files that cannot be played even if they are in JPEG format.
- Progressive JPEG files cannot be played.
- Moving image files as well as Motion JPEG format files cannot be played, even though they are JPEG files.

### Other files that cannot be played back.

- You may not be able to play some still images which you have created, touched up, copied or otherwise edited on your computer.
- You may not be able to play some still images you have processed (rotated or saved by overwriting other images you have imported from the Internet or e-mail).

### You may experience one or more of the following symptoms when playing files.

- It may take some time to play files depending on the number of folders, number of files and volume of data involved.
- EXIF information will not be displayed. EXIF stands for Exchangeable Image File Format, and is a standard for storing interchange information in image files, especially those using JPEG compression. (Refer to <http://exif.org> for more information.)

### \*<sup>3</sup> About the MP3 file format

MP3 files are audio data compressed in the MPEG1/2 Audio layer-3 file format. "MP3 files" have ".mp3" as extensions. (Some files that have ".mp3" extensions or files that have not been recorded in MP3 format will produce noise or cannot be played.)

### Playing the MP3 file format

- The MP3 files are not played in the order they were recorded.
- It is recommended to record data at a lower speed as data recorded at a fast speed can produce noise and may not be able to be played.
- The more folders there are, the longer the reading time.
- Depending on the folder tree, reading MP3 files can take time.
- The playing time may not be correctly displayed during MP3 file playback.

### The following files cannot be played on this unit.

- When both Audio CD [CD-DA] format and JPEG/MP3 file formats are recorded on a disc. (The disc is recognised to be an Audio CD [CD-DA] only tracks in Audio CD [CD-DA] format are played back.)
- Multi-session discs cannot be played.


### About the DivX+HD (H.264/MKV) file format

- DivX playback may not be available depending on the DivX content and file.

### About files/folders for Still images (JPEG files) and audio data (MP3 files)

You can play still images (JPEG files) /audio data (MP3 files) with this unit by making folder(s) on discs or USB memory devices as shown below.

Example of a folder structure:

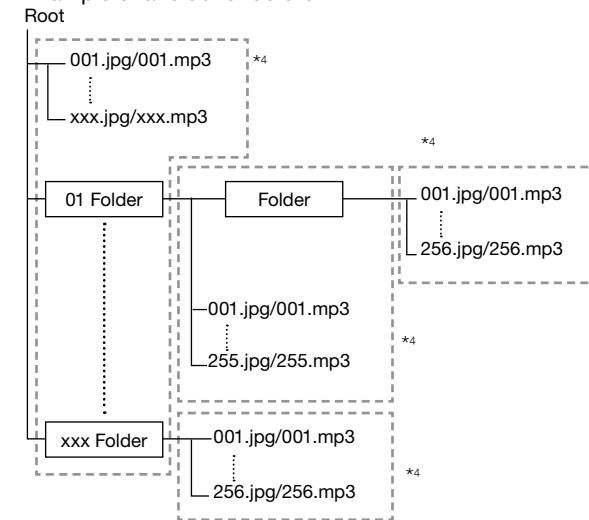

\*<sup>4</sup> Including the root directory, the maximum number of folders and files in each folder is limited to 256 in total.

### File and folder requirements

- The discs or USB memory devices which this unit can play back (recognise) are limited to the following properties:
  - Contains EXIF format files (only JPEG files)
  - Picture resolution: Between 32 x 32 and 7680 x 4320 pixels (only JPEG files)
  - Maximum number of folders and files in each folder: 256
  - Maximum hierarchy level of folders: 5
  - File size: 20 MB or less (JPEG files)  
200 MB or less (MP3 files)

### Note:

- File and folder names displayed on this unit may differ from those displayed on PCs.

## About Media Types (continued)

### ABOUT DivX VIDEO

- DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified® device that plays DivX video. Visit [divx.com](http://divx.com) for more information and software tools to convert your files into DivX video.

DivX Certified® to play DivX® and DivX Plus™ HD (H.264/MKV) video up to 1080p HD including premium content.

### ABOUT DivX VIDEO-ON-DEMAND

- This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to [vod.divx.com](http://vod.divx.com) for more information on how to complete your registration.

## ■ About Disc Contents

### BD Video

Enjoy BD-specific functions including BONUSVIEW (BD-ROM Profile 1 Version 1.1), such as picture-in-picture, and BD-LIVE (page 19). For the BD video discs compatible with BONUSVIEW/BD-LIVE, you can enjoy additional contents by copying the data from the discs or downloading it via the Internet. For instance, this function is capable of playing the original movie as the primary video while playing video commentary from the film director on a small screen as a secondary video.


#### Note:

- The available functions differ depending on the disc.


### Title, Chapter and Track

- Blu-ray discs and DVDs are divided into "Titles" and "Chapters". If the disc has more than one movie on it, each movie would be a separate "Title". "Chapters", on the other hand, are subdivisions of titles. (See Example 1.)
- Audio CDs are divided into "Tracks". You can think of a "Track" as one tune on an Audio CD. (See Example 2.)

Example 1: Blu-ray disc or DVD

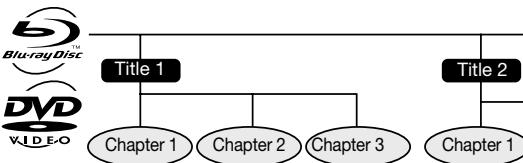


Example 2: Audio CD

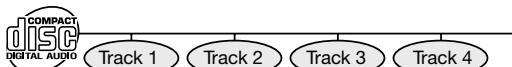 

### Icons Used on BD/DVD Video Disc Cases

The back of the case of a BD/DVD that is commercially available usually contains various information about the contents of the disc.

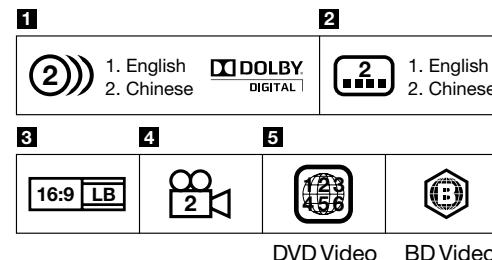

#### 1 Audio tracks and audio formats

BD and DVD discs can contain up to 8 separate tracks with a different language on each. The first in the list is the original track. This section also details the audio format of each soundtrack — Dolby Digital, DTS, MPEG etc.

#### Dolby Digital

A sound system developed by Dolby Laboratories Inc. that gives movie theatre ambience to audio output when the Unit is connected to a Dolby Digital processor or amplifier.

#### DTS

DTS is a digital sound system developed by DTS, Inc. for use in cinemas.

#### Linear PCM

Linear PCM is a signal recording format used for Audio CDs and on some DVD and Blu-ray discs. The sound on Audio CDs is recorded at 44.1 kHz with 16 bits. (Sound is recorded between 48 kHz with 16 bits and 96 kHz with 24 bits on DVD video discs and between 48 kHz with 16 bits and 192 kHz with 24 bits on BD video discs.)

#### 2 Subtitle languages

This indicates the kind of subtitles.

#### 3 Screen aspect ratio

Movies are shot in a variety of screen modes.

#### 4 Camera angle

Recorded onto some BD/DVD discs are scenes which have been simultaneously shot from a number of different angles (the same scene is shot from the front, from the left side, from the right side, etc.).

#### 5 Region code

This indicates the region code (playable region code).

## ■ The Icons Used in This Operation Manual

<b>BD VIDEO</b>	.....	Indicates the functions that can be performed for BD Video discs.
<b>BD-RE</b>	.....	Indicates the functions that can be performed for BD-RE discs.
<b>BD-R</b>	.....	Indicates the functions that can be performed for BD-R discs.
<b>DVD VIDEO</b>	.....	Indicates the functions that can be performed for DVD Video discs.
<b>DVD-RW</b>	.....	Indicates the functions that can be performed for DVD-RW discs.
<b>DVD-R</b>	.....	Indicates the functions that can be performed for DVD-R discs.
<b>AUDIO CD</b>	.....	Indicates the functions that can be performed for Audio CDs.
<b>CD-R</b>	.....	Indicates the functions that can be performed for CD-R discs.
<b>CD-RW</b>	.....	Indicates the functions that can be performed for CD-RW discs.
<b>USB</b>	.....	Indicates the functions that can be performed for USB memory devices.
<b>iPod</b>	.....	Indicates the functions that can be performed for iPod, iPhone and iPad.

 
# Important Information

## ■ Disc Precautions

### Be Careful of Scratches and Dust

- BD, DVD and CD discs are sensitive to dust, fingerprints and especially scratches. A scratched disc may not be able to be played back. Handle discs with care and store them in a safe place.

### Proper Disc Storage

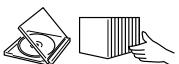Place the disc in the centre of the disc case and store the case and disc upright.	
Avoid storing discs in locations subject to direct sunlight, close to heating appliances or in locations of high humidity.	
Do not drop discs or subject them to strong vibrations or impacts.	
Avoid storing discs in locations where there are large amounts of dust or moisture.	

### Handling Precautions

- If the surface is soiled, wipe gently with a soft, damp (water only) cloth. When wiping discs, always move the cloth from the centre hole toward the outer edge.



- Do not use record cleaning sprays, benzene, thinner, static electricity prevention liquids or any other solvent.
- Do not touch the surface.
- Do not stick paper or adhesive labels to the disc.
- If the playing surface of a disc is soiled or scratched, the Unit may decide that the disc is incompatible and eject the disc tray, or it may fail to play the disc correctly. Wipe any dirt off the playing surface with a soft cloth.

### Cleaning the Pick Up Lens

- Never use commercially available cleaning discs. The use of these discs can damage the lens.
- Request the nearest service centre approved by SHARP to clean the lens.

### Warnings about dew formation

- Condensation may form on pick up lens or disc in the following conditions:
  - Immediately after a heater has been turned on.
  - In a steamy or very humid room.
  - When the Unit is suddenly moved from a cold environment to a warm one.

## When condensation forms:

- It becomes difficult for the Unit to read the signals on the disc and prevents the Unit from operating properly.

### To remove condensation:

- Take out the disc and leave the Unit with the power off until the condensation disappears. Using the Unit when there is condensation may cause malfunction.


## ■ License and Copyright

Audio-visual material may consist of copyrighted works which must not be recorded without the authority of the owner of the copyright. Refer to relevant laws in your country.

- "This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited."
- Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.
- Manufactured under license under U.S. Patent Nos: 5,956,674; 5,974,380; 6,226,616; 6,487,535; 7,392,195; 7,272,567; 7,333,929; 7,212,872 & other U.S. and worldwide patents issued & pending. DTS-HD, the Symbol, & DTS-HD and the Symbol together are registered trademarks & DTS-HD Master Audio | Essential is a trademark of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.
-  is a trademark of DVD Format/Logo Licensing Corporation.
- "HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries."
- "x.v.Colour" and "x.v.Colour" logo are trademarks of Sony Corporation.
- Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and/or other countries.
- "AVCHD" and the "AVCHD" logo are trademarks of Panasonic Corporation and Sony Corporation.
- Blu-ray Disc™, Blu-ray™, Blu-ray 3D™, BD-Live™, BONUSVIEW™, and the logos are trademarks of the Blu-ray Disc Association.
- YouTube is a trademark of Google Inc.
- DivX®, DivX Certified®, DivX Plus™ HD and associated logos are trademarks of DivX, Inc. and are used under license.
- LCフォント、LCFONT、エルシーフォント and LC logo mark are registered trademarks of SHARP Corporation. This product is embedded with LC Font technology, which was developed by SHARP Corporation for clearly displaying easy-to-read characters on an LCD screen. However, other non-LCD fonts are used for displaying some screen pages.

- "Made for iPod," "Made for iPhone," and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance.


## Controls and indicators

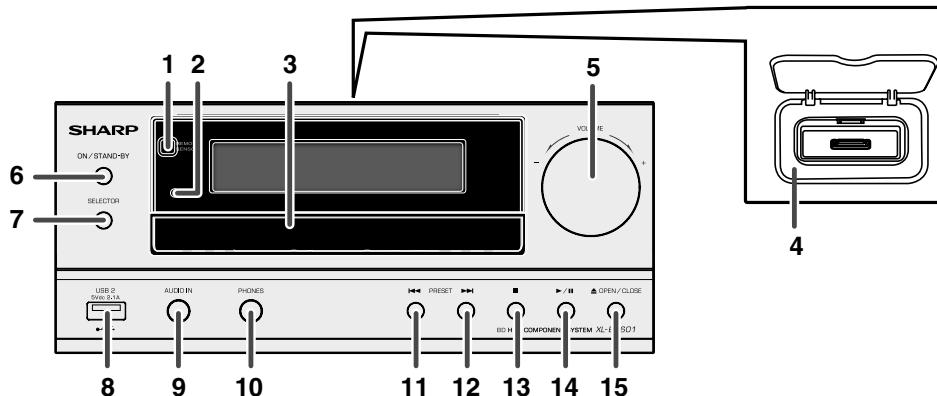

### Front panel

	Page
1. Remote sensor.....	12
2. Timer indicator.....	39
3. Disc Tray.....	18
4. Docking Station for iPod or iPhone .....	35
5. Volume Control .....	12
6. ON/STAND-BY Button .....	18, 35, 36, 42
7. SELECTOR Button.....	11, 13, 18, 22, 35
8. USB 2Terminal .....	9, 13

	Page
9. Audio In Socket.....	11, 40
10. Headphone Socket.....	40
11. Tuner Preset Down, DISC/USB Track Down, iPod/iPhone/iPad Skip Down/Fast Reverse .....	22, 36
12. Tuner Preset Up, DISC/USB Track Up, iPod/iPhone/iPad Skip Up/Fast Forward.....	22, 36
13. Disc/USB/iPod/iPhone/iPad Stop Button .....	22, 36
14. Disc/USB/iPod/iPhone/iPad Play or Pause Button .....	22, 36
15. DiscTray Open/Close Button .....	12, 18

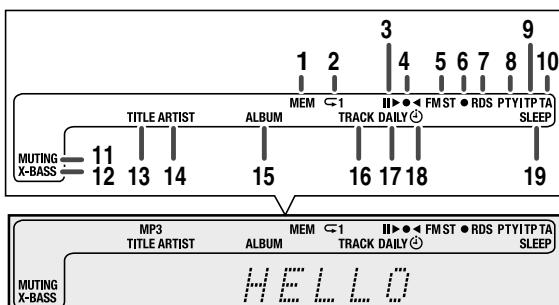


### Display

	Page
1. MEM (Memory) Indicator	37
2. Repeat Indicator	37
3. Play/Pause Indicator	37
4. Tuning FM Indicator .....	37
5. FM Stereo Mode Indicator.....	37
6. Stereo Station Indicator.....	37
7. RDS Indicator .....	37
8. PTY Indicator .....	37
9. TP Indicator .....	37
10. TA Indicator.....	37
11. Muting Indicator .....	12
12. X-bass Indicator .....	39
13. Title Indicator .....	39
14. Artist Indicator .....	39
15. Album Indicator .....	39
16. Track Indicator .....	40
17. DailyTimer Indicator .....	39
18. Once Timer Indicator.....	39
19. Sleep Indicator .....	40


### Speaker system

 
1. Dome-Tweeter	3
2. Woofer	4
3. Bass Reflex Duct	4
4. SpeakerTerminal	4

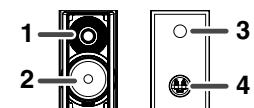

### Speaker grilles are removable

Make sure nothing comes into contact with the speaker diaphragms when you remove the speaker grilles.

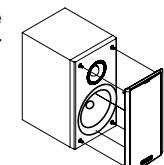

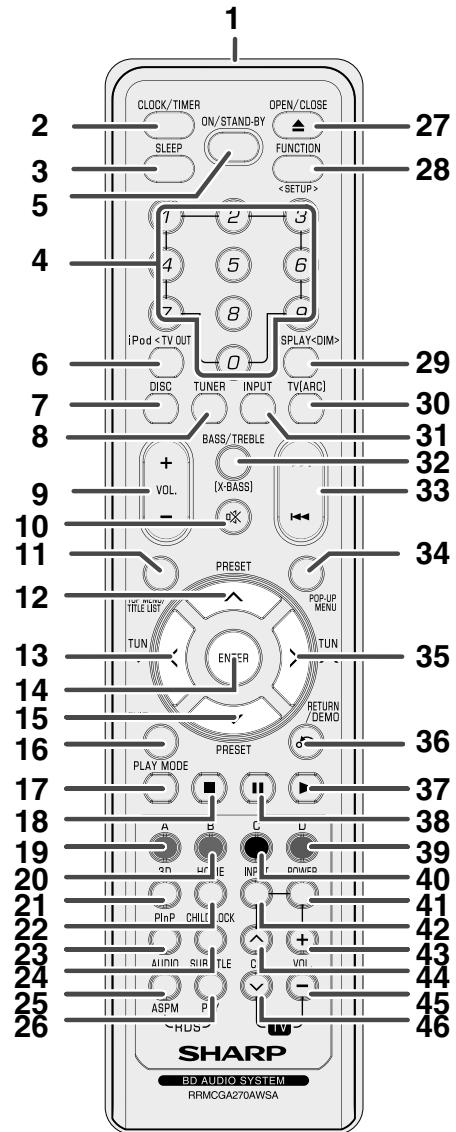

### Keylock function

You can set the keylock to prevent accidental operations.

This function allows TVs compatible with AQUOS LINK to also perform a Key Lock on the unit.


- To activate this function, press and hold CHILD LOCK button. "CHILD LOCK ON" will appear
- To deactivate, press and hold CHILD LOCK button. "CHILD LOCK OFF" will appear
- If you try to operate the unit while the keylock function is set, "CHILD LOCK" appear on the front display panel to indicate that the keylock function is set.

### ■ Remote Control


	Page
1. Remote Control Transmitter	12, 42
2. Clock/Timer Button	13, 39, 40
3. Sleep Button	40
4. Numeric Buttons	14, 40
5. ON/STAND-BY Button	13, 39
6. iPod <TV OUT> Button	35, 36
7. Disc Button	18, 22, 23
8. Tuner Button	36, 37, 38
9. Volume Up/Down Button	12
10. Mute Button	12
11. Top Menu>Title List Button	19, 36
12. Tuner Preset Up Button, iPod/iPhone Cursor Up Button	27, 29, 36
13. Tuning Down, Time Down Button	13, 27, 29, 36
14. Enter Button	13, 18, 20
15. Tuner Preset Down Button, iPod/iPhone Cursor Down Button	27, 29, 36
16. Exit Button	21, 22, 23
17. Play Mode Button	26
18. Stop Button	18, 21, 22, 36
19. Red (A) Button	20, 23
20. Green (B) Button	20, 21, 30
21. 3D Button	16
22. Home Button	21, 22, 24
23. Picture in Picture Button	19
24. Child Lock Button	8
25. Audio/RDS ASPM Button	38
26. Subtitle / RDS PTY Button	38
27. Open/Close Button	21, 22
28. Function <Setup> Button	25, 26
29. Display <DIM> Button	12, 18, 25, 37
30. TV (ARC) Button	12, 16
31. Input Button	11, 40
32. Bass Treble (X-BASS) Button	12, 13
33. Skip Up, Fast Forward, Time Up/ Skip Down, Fast Reverse, Time Down Button	13, 22, 24, 36
34. Pop-Up Menu Button	18
35. Tuning Up, Time Up Button	13, 27, 29, 36
36. Return/Demo Button	10, 21, 23, 30
37. Play Button	16, 17, 20, 23, 36
38. Pause Button	22, 23, 36
39. Blue (D) Button	20, 23, 30
40. Yellow (C) Button	20, 23, 30
41. TV Power Button	13
42. TV Input Button	13
43. TV Volume Up Button	13
44. TV Channel Up Button	13
45. TV Volume Down Button	13
46. TV Channel Down Button	13

# System connections

**Make sure to unplug the AC power lead before making any connections.**

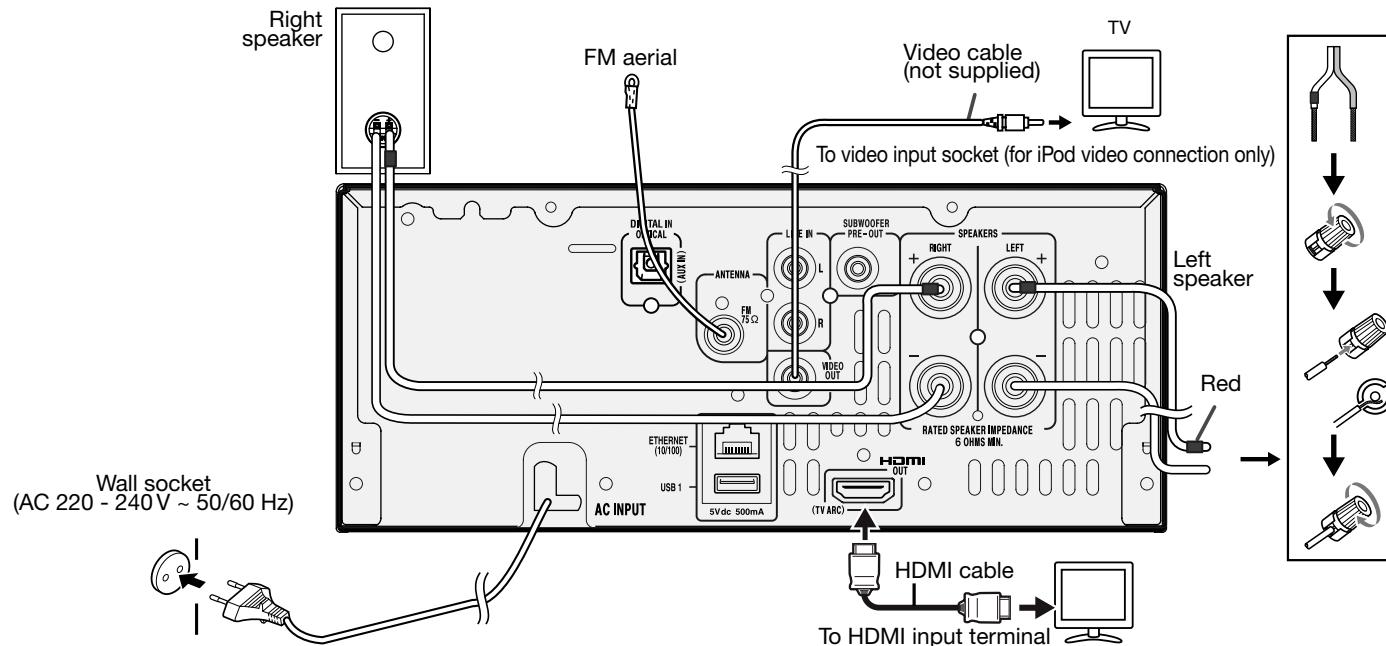

## ■ USB 1, USB 2 terminals and Video Out socket

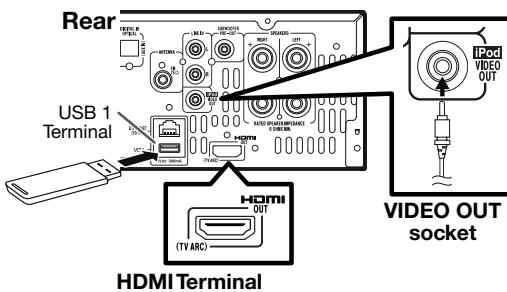

### USB 1 terminal:

This terminal is only for USB memory devices to support music, video, photo and memory expansions for BD-LIVE.

### VIDEO OUT socket:

This socket is only for iPod and iPhone video out connection.

### USB 2 terminal:

This terminal is only for iPod, iPhone and iPad. It does not support USB memory device.

### HDMI terminal:

This terminal supports DISC function (BD, DVD, CD and USB 1), TV ARC and AQUOS LINK.

## ■ Aerial connection

### Supplied FM aerial:

Connect the FM aerial wire to the FM 75 Ω socket and position the FM aerial wire in the direction where the strongest signal can be received.

### External FM aerial:


Use an external FM aerial (75 ohms coaxial cable) for better reception. When an external FM aerial is used, disconnect the supplied FM aerial wire.

#### Note:

Placing the aerial on the unit or near the AC power lead may cause noise pickup. Place the aerial away from the unit for better reception.

## ■ Speaker connection

- Connect the wire without insulation tube to the minus (-) terminal, and the wire with red insulation tube to the plus (+) terminal.
- Use speakers with an impedance of 6 ohms or more, as lower impedance speakers can damage the unit.
- Do not mistake the right and the left channels. The right speaker is the one on the right side when you face the unit.
- Do not let the bare speaker wires touch each other.
- Do not allow any objects to fall into or to be placed in the bass reflex ducts.
- Do not stand or sit on the speakers. You may be injured.

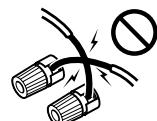

Correct

## System connections (continued)

### ■ Demonstration mode

- The first time the unit is plugged in, the unit will enter the demonstration mode.
- To cancel the demonstration mode, press the RETURN/DEMO button (remote control) during power stand-by mode. The unit will enter the low power consumption mode.
- To return to the demonstration mode, press the RETURN/DEMO button again.
- If iPod or iPhone is docked, the unit will begin charging. "Charge Mode" will be displayed. Demonstration mode is invalid during charge mode.

### ■ Connecting iPod or iPhone to TV

Photo and video files from iPod or iPhone can be viewed by connecting the system to TV/monitor.

If the TV/monitor has a video input, connect it to the iPod VIDEO OUT socket at the back of the unit and set the TV Out on the iPod or iPhone unit to "ON" position. (Refer page 36.)

#### Note:

Please make sure to set iPod unit to either NTSC or PAL to match your TV signal. Please visit Apple's homepage for further information.

### ■ AC power connection

After checking all the connections have been made correctly, plug the AC power lead of this unit into the wall socket.

#### Note:

Unplug the AC power lead from the wall socket if the unit will not be in use for a prolonged period of time.

### ■ HDMI connection (TV, projector)

You can enjoy high quality digital picture and sound using an HDMI cable. (Only TVs/projectors with an HDMI terminal can be connected to this unit.)

#### When using HDMI ARC (Audio Return Channel) Connection

When this unit is connected to TV, there might be a necessity to adjust the TV menu.


Refer the operation manual of the respective TV, concerning ARC.

In case of incompatibility between this unit and your TV HDMI ARC, please use the analog or digital connection. (Refer Line In and Digital In connection on page 11.)

When you use AQUOS LINK or TV ARC, make sure to use a certified HDMI cable.

1 Be sure to turn off this Unit and the TV/projector before making any connections.

2 Firmly connect an HDMI cable to the HDMI OUT (TV ARC) terminal on this unit (①) and the HDMI IN terminal of the TV/projector (②).

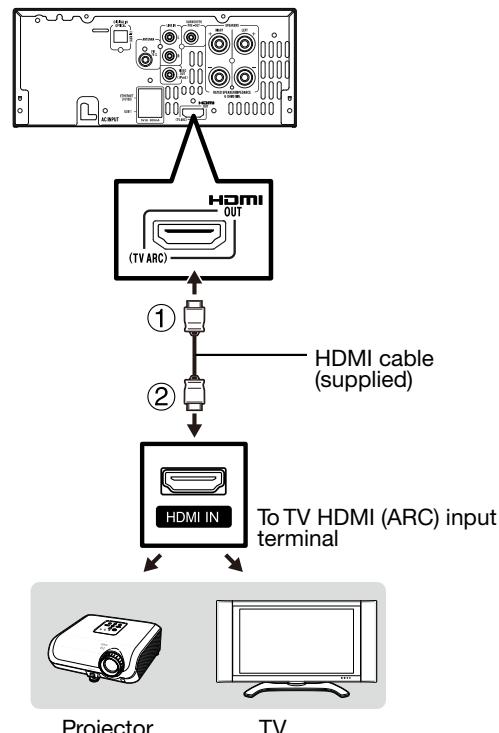

#### Notes:

- In this unit, "HDMI Video Out" is set to "Auto" as a default (See page 27). (Normally set to "Auto".) If you don't get a stable image with "HDMI Video Out" set to "Auto", select the output resolution which corresponds to the connected equipment.
- This unit supports HDMI which enables ARC (Audio Return Channel).
- To enable ARC make sure to use High Speed HDMI cable.
- This structure also needs TV that supports ARC.
- To enjoy 3D images, connection to a 3D compatible TV is needed.
- For connection to a TV/projector, refer to the TV/projector's operation manual.

#### After connecting


- If necessary, perform the Audio Video Settings. (Page 27)
- Refer to AQUOS LINK function. (Pages 16 and 28)
- Prepare the desired disc or content and start playback. (Pages 18–23, 24–25)

### ■ Connecting to an amplifier/AV receiver

You can connect this unit to an amplifier/AV receiver to enjoy digital surround sound. With this unit, the audio connection can be made using HDMI connection depending on the capabilities of the amplifier/AV receiver you connect.

#### Note:

- Be sure to turn off this Unit and the equipment before making any connections.
- For details on output of audio formats, see page 34.

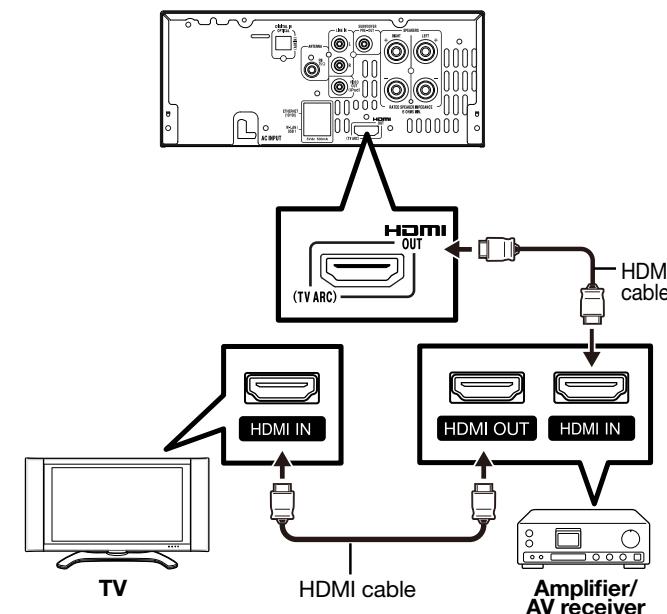


#### Notes:

- When using an HDMI output, 7.1 ch Digital Output is available.
- Audio transmitted in DTS-HD High Resolution Audio and DTS-HD Master Audio formats is output from the HDMI terminal as Bitstream. Connect an amplifier with a built-in decoder to enjoy the fine sound quality.
- When a connection to a 3DTV is made via an amplifier/AV receiver, it is necessary to connect to a 3D compatible amplifier/AV receiver.

## System connections (continued)

### Digital audio connection

You can connect TV unit or other similar device using an optical digital audio cable (commercially available).

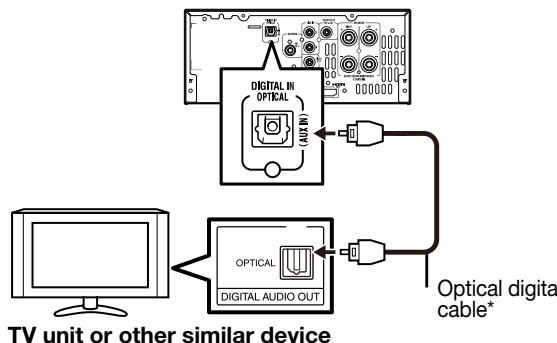

TV unit or other similar device


\* Commercially available

### After connecting

- If necessary, perform the Audio Video Settings. (Page 27)
- Prepare the desired disc or content and start playback. (Pages 18-23, 24-25)

### Line input connection (TV, etc.)

Connect to the TV using an audio cable.

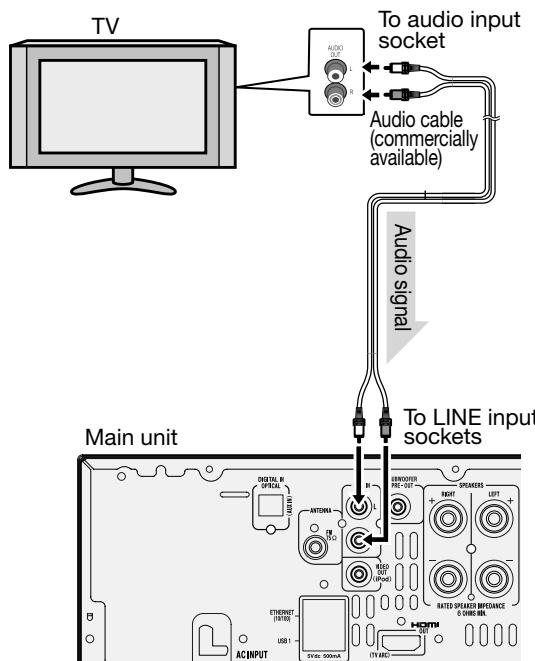


To select Line In function:

- On main unit: Press SELECTOR button repeatedly until Line In is displayed.
- On remote control: Press INPUT button repeatedly until Line In is displayed.

### Wired connection (LAN cable)

Connect a LAN cable (commercially available) to the ETHERNET terminal of this unit (①) and the LAN port of the broadband router (②).

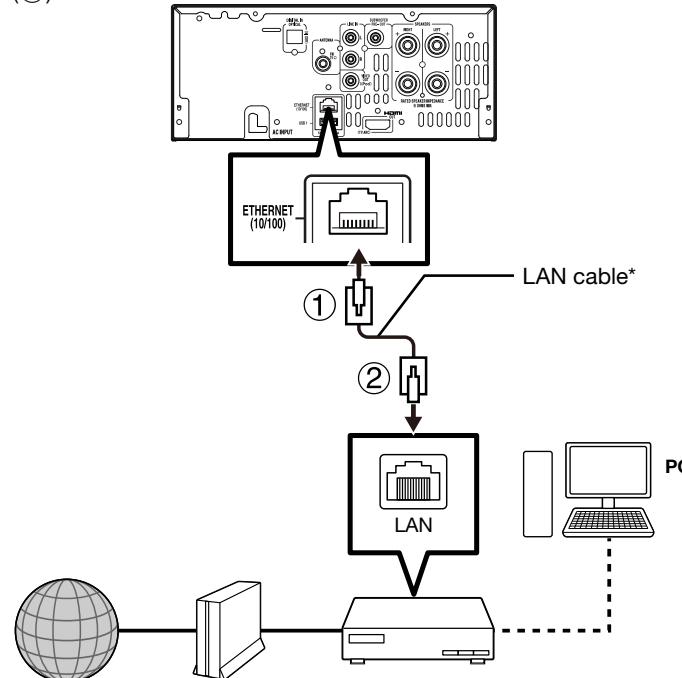

\* Commercially available

### Notes:

- Use a LAN cable/router supporting 10BASE-T/100BASE-TX.
- SHARP cannot guarantee that all brands' broadband routers will operate with this unit.

### After connecting

- Perform the communication settings. (Pages 29-30)
- When enjoying BD-LIVE functions, see pages 19 and 20.
- When enjoying video on-demand services (e-Contents), see pages 29, 34.
- To play back files via the Home Network, see page 23.
- To update the software via the Internet, perform Software Update Settings. (Pages 31-34)

### Broadband Internet Connection

By connecting this unit to the Internet, you can enjoy a variety of content on your TV using BD-LIVE functions, video on-demand services (e-Contents), home networks and also perform software updates. In this unit, the Internet connection can be made using wired connection (LAN cable).

### Notes:


- Be sure to turn off this Unit and the equipment before making any connections.

### Caution:

- When using a broadband Internet connection, a contract with an Internet service provider is required. For more details, contact your nearest Internet service provider.
- Refer to the operation manual of the equipment you have as the connected equipment and connection method may differ depending on your Internet environment.

### Subwoofer pre-out connection

You can connect a subwoofer with an amplifier to the SUBWOOFER PRE OUT socket.

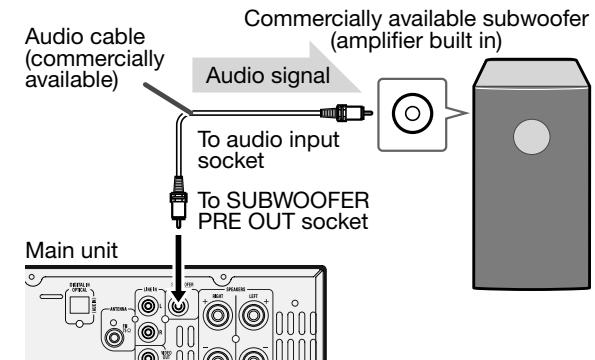


### Notes:

- No sound is heard from the subwoofer without a built-in amplifier.
- Subwoofer Pre-out (audio signal): 200mV / 10k ohms at 70 Hz.

## Remote control

### Battery installation

- 1 Open the battery cover.
- 2 Insert the supplied battery according to the terminal indicated in the battery compartment.
- 3 When inserting or removing the battery, push it towards the (-) battery terminals.
- 4 Close the cover.

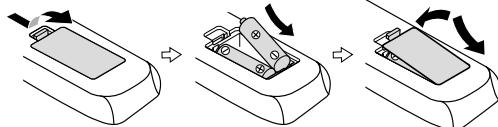

#### Caution:

- Replace all old batteries with new ones at the same time.
- Do not mix old and new batteries.
- Remove the battery if the unit will not be used for a long period of time. This will prevent potential damage due to battery leakage.
- Do not use rechargeable battery (nickel-cadmium battery, etc.).
- Installing the battery incorrectly may cause the unit to malfunction.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.


#### Notes: concerning use:

- Replace the battery if the operating distance is reduced or if the operation becomes erratic. Purchase two "AAA" size batteries (UM-4, R03, HP-16 or similar).
- Periodically clean the transmitter on the remote control and the sensor on the unit with a soft cloth.
- Exposing the sensor on the unit to strong light may interfere with operation. Change the lighting or the direction of the unit if this occurs.
- Keep the remote control away from moisture, heat, shock, and vibrations.


### Test of the remote control

Check the remote control after checking all the connections.

Point the remote control directly at the remote sensor on the unit. The remote control can be used within the range shown below:

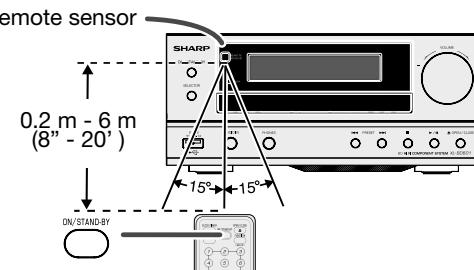

## General control

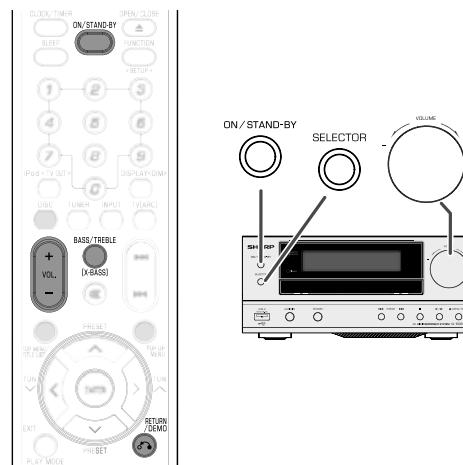

### Turning the Power On

Press ON/STAND-BY on the remote control or on the main unit to turn on the power.

#### Entering standby

Press ON/STAND-BY on the remote control or on the main unit to enter standby.


#### Note:

- When you turn on this unit for the first time after purchase or when you turn on this unit after you perform "System Reset" (see page 29), the language setting screen will be displayed, so please perform the language setting (see step 3 of page 13).
- If you press ON/STAND-BY again immediately after entering standby, the Unit may not turn on. If this happens, wait for 10 seconds or more and then turn on the power again.

#### About the Home screen

When turning on the unit on DISC function, the Home screen appears.

#### Home screen

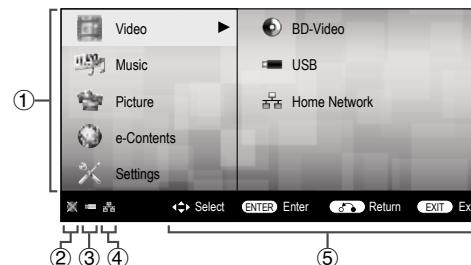

- ① Main menu
- ② Icon for disc inserted
- ③ Icon for USB memory device connected
- ④ Icon for LAN connection
- ⑤ Button Guide

### Display brightness control

To dim the display brightness, press and hold the DISPLAY <DIM> button on the remote control for more than 2 seconds.

- The display brightness will change each time the DISPLAY <DIM> button is pressed for more than 2 seconds.



### Volume auto fade-in

If you turn off and on the main unit with the volume set to 80 or higher, the volume starts at 40 and fades in to the last set level.

### Volume control

Turn the volume knob towards VOLUME +/- (on main unit) or press VOL. +/- (on remote control) to increase or decrease the volume.

### Speaker output selection (HDMI connection)

By using HDMI connection, you have an option to listen to the sound output either from this unit or your TV.

To select the preferred speaker output, press and hold TV (ARC) button on the remote control until "TV Speaker" or "BD601 Speaker" appears on the display.

### Auto power on function

When you press any of the following buttons, the unit turns on.

- iPod <TV OUT>, DISC, INPUT, TUNER, TV (ARC) on the remote control: Selected function is activated.
- ▶/II or OPEN/CLOSE button on the main unit: The unit turns on and playback of the last function will start (DISC, TUNER, USB-2 (iPod), iPod, AUDIO IN, LINE IN, DIGITAL IN, TV ARC)

### Auto power off function

The main unit will enter the stand-by mode (when iPod or iPhone is not docked) after 15 minutes of inactivity during:  
iPod/USB-2 (iPod): No connection.

DISC: In the stop mode.

AUDIO IN/LINE IN/DIGITAL IN/TV ARC: No detection of input signal or very low sound audibility

#### Note:

However, if iPod or iPhone is docked, the unit will begin charging. "Charge Mode" will be displayed.

### Muting

The volume is muted temporarily when pressing the button on the remote control. Press again to restore the volume.

### X-Bass control

When the power is first turned on, the unit will enter the extra bass mode which emphasises the bass frequencies, and X-BASS ON will appear. To cancel the extra bass mode, press and hold BASS/TREBLE [X-BASS] button on the remote control.

## General control (continued)

### Bass control

 
- 1 Press the BASS/TREBLE [X-BASS] button to select "Bass".
  - 2 Within 5 seconds, press the VOLUME (+ or -) button to adjust the bass.
- 

### Treble control

- 1 Press the BASS/TREBLE [X-BASS] button to select "Treble".
  - 2 Within 5 seconds, press the VOLUME (+ or -) button to adjust the treble.
- 

### Function Selector


When the SELECTOR button on main unit is pressed, the current function will change to different mode. Press the SELECTOR button repeatedly to select desired function.

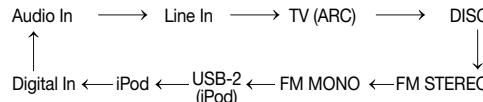

#### Note:

The backup function will protect the memorised function mode for a few hours should there be a power failure or the AC power lead becomes disconnected.

## Setting the clock (Remote control only)

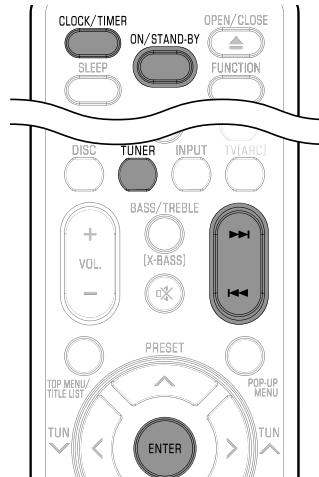

In this example, the clock is set for the 24-hour (0:00) display.

- 1 Press the ON/STAND-BY button to turn the power on.
- 2 Press the CLOCK/TIMER button.
- 3 Within 10 seconds, press the ENTER button. To adjust the day, press the **↔** or **→** button and then press the ENTER button.

- 4 Press the **↔** or **→** button to select 24-hour or 12-hour display and then press the ENTER button.

→ "0:00" → The 24-hour display will appear.  
(0:00 - 23:59)  
↓  
"AM 12:00" → The 12-hour display will appear.  
(AM 12:00 - PM 11:59)  
↓  
"AM 0:00" → The 12-hour display will appear.  
(AM 0:00 - PM 11:59)

- 5 To adjust the hour, press the **↔** or **→** button and then press the ENTER button. Press the **↔** or **→** button once to advance the time by 1 hour. Hold it down to advance continuously.

- 6 To adjust the minutes, press the **↔** or **→** button and then press the ENTER button. Press the **↔** or **→** button once to advance the time by 1 minute. Hold it down to advance the time by 10 minutes interval.

#### To confirm the time display:

Press the CLOCK/TIMER button. The time display will appear for about 10 seconds.

#### Note:

When power supply is restored after unit is plugged in again or after a power failure, reset the clock (page 42).

#### To readjust the clock:


Perform "Setting the clock" from step 1. If the "Clock" does not appear in step 2, step 4 (for selecting the 24-hour or 12-hour display) will be skipped.

#### To change the 24-hour or 12-hour display:

- 1 Clear all the programmed contents. [Refer to "Factory reset, clearing all memory" on page 42 for details.]
- 2 Perform "Setting the clock" from step 1 onwards.


## Before Starting Playback

### Language Setting

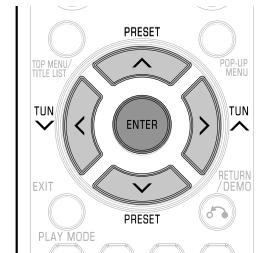

#### Changing the on-screen display language

- 1 At the Home Screen, press **↑/↓** to select "Settings", then press **>** or **ENTER**.
- 2 Press **↑/↓** to select "On Screen Language", then press **>** or **ENTER**.

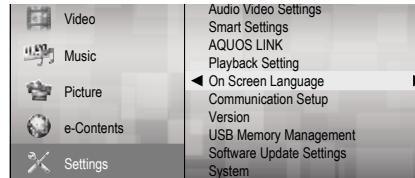

- 3 Press **↑/↓** to select the language you want to display on the screen, then press **ENTER**.

English	Nederlands	Česky
Deutsch	Svenska	Magyar
Français	Dansk	Slovensky
Italiano	Norsk	Slovenščina
Español	Suomi	
Português	Polski	

#### Note:

 
- To select the DVD disc language, such as subtitle language, etc., see page 19.

### Operating a TV Using the Remote Control

The Universal Remote Control may operate the basic functions of the SHARP TV.


#### TV function control

- TV Power: **POWER**
- TV-AV Selector: **INPUT**
- TV Volume up/down: **VOL +/−**
- TV Channel up/down: **CH ▲/▼**

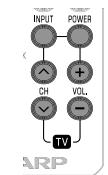

## Before Starting Playback (continued)

### ■ To change the TV manufacturer setting

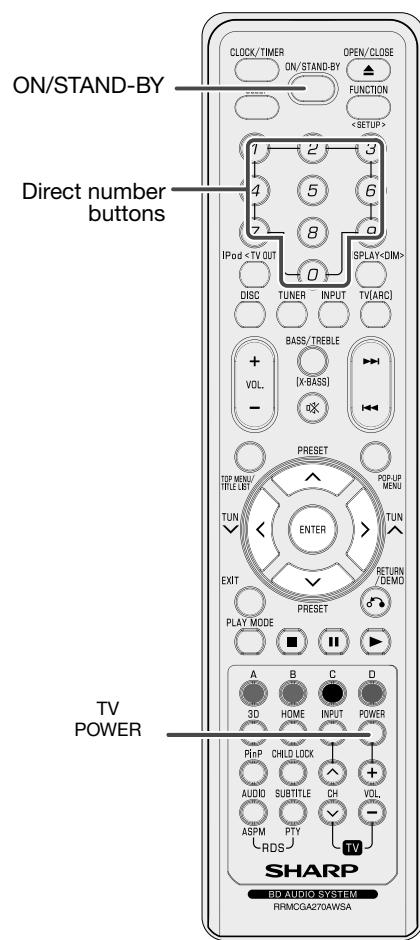

**Whilst holding down the TVPOWER button, enter the manufacturer setting number (3 digits) with the direct number buttons.**

- Check the TV setting number to change the TV manufacturer setting (see pages 14 to 16).
- After setting, check it operates properly.

Manufacturer/Brand	Set-Up Code Number
ADMIRAL	072 081 160 161 096
ADVENT	247
AIKO	103
AKAI	006 146 248 150 157 167 078 184 185 255
ALARON	028
AMARK	112 143
AMERICA ACTION	043
AMPRO	073
ANAM	043 054 055 056 080 112
AOC	058 006 004 112 121
APEX	227
APEX DIGITAL	015 226 037
AQUAVISION	148
ASTAR	189
AUDIOVOX	076 103 043 035 145 197
AVION	219
BAYSONIC	043
BELL&HOWELL	072
BENQ	241
BRADFORD	043
BROKSONIC	096
CANDLE	006 002 003 004
CAPEHART	058
CARVER	164
CELEBRITY	001
CETRONIC	043
CINERAL	103 120
CITIZEN	006 002 003 004 101 103 143
CLASSIC	043
CONCERTO	004
CONTEC	043 051

Manufacturer/Brand	Set-Up Code Number
CORONADO	143
CRAIG	043 054 028
CROSLEY	164
CROWN	043 143
CURTIS MATHES	006 004 101 143 011 072 081 120 164
CXC	043
DAEWOO	076 103 055 004 127 143 016 043 044 125 120
DAYTRON	004 143
DELL	041 142
DENON	011
DIGITAL PROJECTION	224
DUMONT	004 073
DWIN	102 104 161
DYNASTY	043
DYNATECH	062
DYNEX	145
FISHER	007 057
ELECTROBAND	001
ELECTROGRAPH	182
ELECTROHOME	024 076 143
ELEMENT	084 190
EMERSON	005 028 043 048 076 096 155 004 051 143 151 153 154 213
EPSON	026 235
ESA	078
FUJITSU	164 028 198 246 066 138
FUNAI	028 043 052 249
FUTURETECH	043
GATEWAY	242 078
GE	006 073 144 160 161 004 008 009 034 056 074 091 155 081 120
GEM	078
GIBRALTER	004 073
GOLDSTAR	004 106 119 110 112 113 127 143
GRUNPY	028 043
HAIER	084 196

### Notes:

- Some models of Sharp's TVs may not be operable.
- As for manufacturers with 2 or more setting numbers, test them to select the right number.
- Registering the manufacturer number deletes the number previously memorised.
- When replacing the batteries of the remote control, the manufacturer number may return to default. In this case, register it again.
- The manufacturer number cannot be registered depending on the TV. Even if the number can be set, some buttons may not work.

## Before Starting Playback (continued)

Manufacturer/Brand	Set-Up Code Number
HALL MARK	004
HANNSPREE	046
HARLEY DAVIDSON	028
HARMAN KARDON	164
HARVARD	043
HISENSE	170 179
HITACHI	163 004 007 009 011 072 010 012 023 075 143 158 166 254 232
HP	027 039 214 085
HUMAX	069
HYPERION	253
HYUNDAI	049 067
ILO	183 145
INFINITY	164
INFOCUS	068 092 097 240
INSIGNIA	024 145 147 148 149 180 244 128
INKEL	129
INTEQ	073
JBL	164
JCB	001
JCPENNEY	004 006 008 024 030 065 101 143 156 160
JENSEN	013
JVC	038 001 034 083 206 159
KENWOOD	006 001
KLEGG	182
KLOSS	002 059
KONKA	180
KREISEN	090
KTV	006 043 143 154
LG	004 106 119 110 112 113 127 143 084 223
LOGIK	072
LOEWE	207 164
LUXMAN	004
LXI	007 015 052 081 160 164

Manufacturer/Brand	Set-Up Code Number
MAGNAVOX	006 003 004 022 059 060 061 063 064 127 164 094 160 028 035
	124 181 215
MAJESTIC	072
MARANTZ	164 006 230 231
MATSUI	164
MATSUSHITA	080
MEGATRON	004
MINTEK	108 168
MITSUBISHI	109 024 042 004 040 146 028 081 225
MOTOROLA	081
MTC	006 004 062 101
MULTITECH	043
NAD	015 025
NIKO	220
NEC	004 006 016 019 040 109 134 167
NORCENT	124
NUVISION	221
OLEVIA	216 084 132
OPTIMUS	080
OPTOMA	029 032
ORION	096
PANASONIC	080 098 243 251
PHILCO	006 003 004 024 056 059 060 063 064 127 143 164
PHILIPS	164 005 038 093 127 006 003 004 059 210 215 161 239
PIONEER	023 025 135 176 004 018 006 209 234 118 131 140
POLAROID	015 077 078 079 070 177 178 190 199 200 212
PORTLAND	004 143 103
PRISM	034
PROSCAN	144 160 161
PROTON	004 058 143 171 173 112 086
PROTRON	130 141 192 193 195
PROVIEW	190

Manufacturer/Brand	Set-Up Code Number
QUASAR	034 056 250
RADIO SHACK	004 019 127 143 043
RCA	160 161 144 156 065 006 004 023 024 056 074 152 081 233
REALISTIC	007 019
RUNCO	072 073 050 137 169
SAMPO	006 004 058 242
SAMSUNG	004 101 127 133 143 160 089 105 211 228 229
SANSEI	120
SANSUI	096 145 255
SANYO	007 053 057 082 020
SCEPTRE	036
SCOTCH	004
SCOTT	004 005 028 043 048 143 191
SEARS	004 007 015 028 030 057 082 094 143 160 052 164
SEMIVOX	043
SEMP	015
SHARP	081 014 019 028 004 022 143 175
SHERWOOD	100
SIGNATURE	072
SONY	001 126 139 252
SOUNDESIGN	003 004 028 043
SOYO	086
SPECTRICON	112
SPECTRONIQ	193 195
SQUAREVIEW	052
SSS	004 043
STARLITE	043
SUNBRITE TV	245
SUPRE MACY	002
SUPREME	001
SVA	079
SYLVANIA	006 003 059 060 063 064 127 160 164 044 249 213 238
SYMPHONIC	052 249
SYNTAX OLEVIA	216 084 132

## Before Starting Playback (continued)

Manufacturer/Brand	Set-Up Code Number
TANDY	081
TATUNG	056 062
TECHNICS	034 080
TECHNOL ACE	028
TECHVIEW	099
TECHWOOD	004
TEKNIKA	002 003 004 024 028 043 072 101 143 103 164
TELEFUNKEN	255
TELERENT	072
TERA	172
TMK	004
TNCI	073
TOSHIBA	015 030 007 040 062 101 045
TOTEVISION	143
TRUTECH	087
UNIVERSAL	008 009
VIDEO CONCEPTS	146
VIDIKRON	174 188 164 050
VIDTECH	004
VIEWSONIC	122
VIORE	183 236
VISCO	190
VITO	084
VIZIO	078
WARDS	004 064 164 008 009 019 028 060 061 063 072 074 143
WESTING HOUSE	076 036 001 217 218
WINBOOK	031
YAMAHA	004 006 115 116 162 165
YORK	004
YUPITERU	043
ZENITH	072 073 095 103 011 096
ZONDA	112

### ■ Using AQUOS LINK

#### Controlling the unit using AQUOS LINK

##### What is AQUOS LINK?

Using the HDMI CEC (Consumer Electronics Control), with AQUOS LINK you can interactively operate this unit with your SHARP AQUOS TV.

##### What you can do with AQUOS LINK

When you connect this unit to the LCD TV compatible with AQUOS LINK using an HDMI cable, you can perform the functions listed below. (See page 9 for connecting to the HDMI terminal).

##### Automatic input select function

When you start playback of this unit, the input selector of the LCD TV will automatically switch to the LCD TV input terminal connected to the unit and the playback image will appear on the screen, even if you are watching a TV programme.

##### Automatic power off function

Turning off the LCD TV under different condition will set this unit as below:

Condition	Unit will turn off automatically
DISC function	YES (during stop mode only)
TV(ARC) function	YES
Other functions (iPod/USB-2 (iPod)/Tuner/Audio In/Line In/Digital In)	NO

##### Automatic power on function

When you switch to the LCD TV input terminal connected to this unit, the power of this unit will be turned on automatically.

##### AQUOS PURE MODE

When you connect this unit to an AQUOS LCD TV compatible with AQUOS LINK and set "AQUOS LINK" to "Yes", images automatically adjusted to the most suitable image quality for the AQUOS TV are output from the HDMI OUT terminal of this unit.

##### Note:

- In order to make AQUOS LINK available, set "AQUOS LINK" to "Yes" (See page 28). Refer to the Operation Manual of the TV for details regarding setup.

### ■ Audio Return Channel (ARC) (Audio Return Channel submenu)

The audio return channel (ARC) enables an HDMI ARC-capable TV to send the audio stream to the HDMI OUT socket of this unit. To use this function, press TV (ARC) button on the remote control.

### ■ Using 3D

This sets output of 3D images.

To view 3D images, playback of 3D content (3D BD video) is necessary with a 3D compatible TV and 3D glasses in addition to this unit.



Press **3D** to change to the 3D mode.

- Each time the button is pressed, the mode switches between "Auto(3D)" and "2D".
- The status of the selected mode will be displayed on the TV screen.

**Auto:** Video signals are output as 3D when 3D content (3D BD video) is played or as 2D when 2D content is played.

**2D:** Even if 3D content (3D BD video) is played, video signals are output as 2D at all times.

- This setting (Auto(3D)/2D) can also be performed using the menu screen (See page 28).

##### Notes:

- The 3D mode can be switched only when playback is stopped.
- Depending on the connected TV, the images during playback may switch to 2D images due to changes in the resolution, etc. Make sure the 3D image setting is performed on the TV.
- The 3D images may not be output as set in "HDMI Video Out".
- When performing Fast Forward/Reverse, images are shown in 2D.

##### Caution:

- When viewing 3D images, viewing for a long period of time or lying on your back may cause eye strain and discomfort. In addition, 3D images may affect the eyesight of young children/infants, so keep them from viewing the images.

## Before Starting Playback (continued)

### ■ Control Panel

This function allows you to operate this unit using the TV remote control by displaying the control panel on the TV screen.

- To operate this function, connect this unit to a TV compatible with HDMI CEC (Consumer Electronics Control) using an HDMI cable (See page 9). Make sure that "Control Panel" is set to "Yes" (See page 28). When the settings are completed, perform the following operations.

#### Notes:


- The control panel may not be displayed depending on the TV. Also, it may not be available depending on the content.
- When operating using the remote control of the unit, the control panel does not appear.
- When playing video on demand streaming content available with this unit, the control panel cannot be displayed.

1 Switch the TV input to the input source to which this unit is connected (HDMI input).

2 Press the **PLAY** button on the TV remote control.

- The control panel appears on the TV screen.

### Control Panel

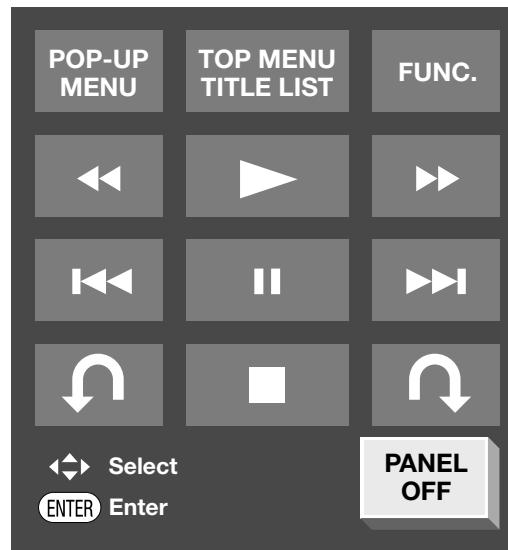

- When there is no operation for approximately 10 seconds, the control panel disappears automatically.  
To display the control panel, press the **PLAY** button on the TV remote control.
- 3 Press  $\wedge/\vee/\langle/\rangle$  on the TV remote control to select the desired button icon, then press **ENTER**.
  - The function of the selected button icon is available.

### Major functions of each button icon

#### POP-UP MENU

- Display the pop-up menu screen for BD video and the menu screen for DVD video.

#### TOP MENU TITLE LIST

- Display the top menu screen for BD video and DVD video.

#### FUNC.

- Display the Function Control screen for BD video, DVD video, etc.



- Fast reverse (search).



- Play.



- Fast forward (search).



- Skip to the beginning of a chapter.



- Pause.



- Skip to the next chapter.



- Jump backward (approx. 10 seconds). (This function is used when you want to re-watch a scene that has just been shown.)



- Stop.




- Jump ahead (approx. 30 seconds).

#### PANEL OFF


- Turn off the control panel.

# Video/Picture/Music Playback

## ■ Loading a Disc

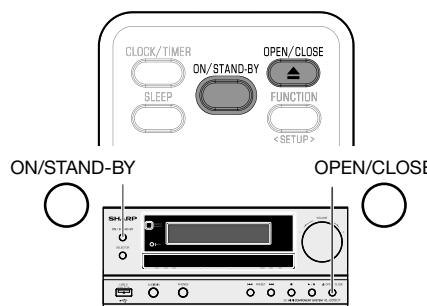

- 1 Press ON/STAND-BY to turn on the power.
- 2 Press DISC button on the remote control or SELECTOR button repeatedly on the main unit to select DISC function.
- 3 Press OPEN/CLOSE to open the disc tray.
- 4 Load a disc on the disc tray.
  - Insert the disc with the label face up.
  - In case of disc recorded on both sides, face down the side to play back.

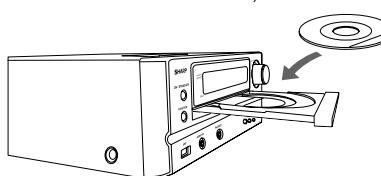


- 5 Press OPEN/CLOSE to close the disc tray.

## ■ BD/DVD Video Playback

**BD VIDEO**   **BD-RE**   **BD-R**  
**DVD VIDEO**   **DVD-R**   **DVD-RW**

This section explains playback of commercially available BD Video and DVD Video discs (like movies) and recorded DVD-RW/R discs.  
● This unit supports DVD upscaling during DVD playback.  
● For a description of other playback functions, refer to "Playback Functions" on pages 24-26.

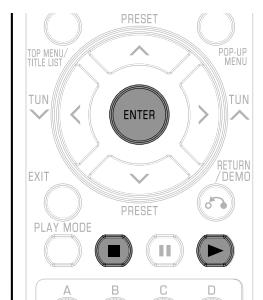

- 1 Load a disc.
  - Playback may begin automatically, depending on the disc.
  - Playback begins from the first title.
  - The menu may be displayed first, depending on the disc. Perform playback operation by following the directions on the screen.
  - When loading a disc containing 3D content (3D BD video) with "Yes" selected in the "3D Notice" setting (page 29), playback will be stopped and the 3D notice will be displayed on the TV screen. In such cases, press ENTER for confirmation, and then playback will start.
- 2 Press ▶ if playback does not begin automatically or playback is stopped.

### Note:

- The disc load time may vary depending on the disc.

### Regarding playback of BD video discs

- Some of the newly released BD video discs cannot be played back unless you update the unit software to the latest version. Therefore, it may be required to update the software of the unit.
- Refer to pages 31-34 for more information regarding software updates for the unit.

### To stop playback

Press ■.


### Resume playback function

- If you press ▶ next, playback will resume from the point where the unit was previously stopped. To playback from the beginning, cancel resume mode by pressing ■, then press ▶. (This may not work depending on the type of disc. In this case, open the disc tray or enter standby.)

### Notes:


- Resume playback may not function depending on the disc.
- The resume playback function for discs will be cancelled if video on demand streaming content is viewed after disc playback. Disc playback will start from the beginning after viewing streaming content.

### Displaying the disc information

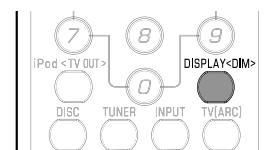

Press DISPLAY <DIM> during playback.

- Each time you press DISPLAY <DIM>, the display switches as follows.

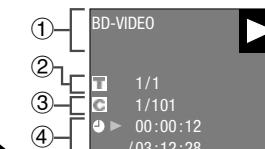

Disc Information screen A



Disc Information screen B

### No Display


- ① Type of disc
- ② Title number being played / Total number of Titles
- ③ Chapter number being played / Total number of Chapters
- ④ Elapsed playback time / Total playback time for the Title

### Notes:

- Disc Information Screen A disappears after about 1 minute elapses without performing any operations.
- For some commercially-released BD VIDEO discs, the total playback time display for the Chapter/Title may not appear.

## ■ BD/DVD Menus

- This section explains how to play back a BD/DVD video disc with a top menu, disc menu or pop-up menu.
- The titles listed in the top menu and a disc guide (for options like subtitles and audio languages) are given in the disc menu.

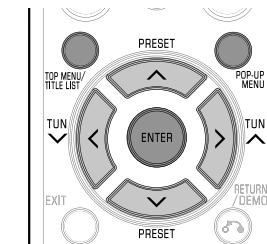

### Start playback by selecting a title from the top menu

**BD VIDEO**   **DVD VIDEO**

- 1 Press TOP MENU/TITLE LIST.

- The top menu screen is displayed if present on the BD/DVD video disc.

## Video/Picture/Music Playback (continued)

### Example



2 Press  $\wedge/\vee/\langle/\rangle$  to select the title, then press **ENTER**.

- The selected title is played back.

#### Note:

● The procedure explained on this page is the basic operation procedure. Procedures vary depending on the BD/DVD video disc, so you may need to follow the instructions in the BD/DVD video disc manual or the instructions displayed on the screen.

### Top menu

- With some BD/DVD discs, the top menu may be referred to as the "Title Menu". Use **TOP MENU/TITLE LIST** on the remote control when the instructions refer to "Title Menu".
- If no top menu is available, the **TOP MENU/TITLE LIST** button will have no effect.

### Using the disc menu

#### DVD VIDEO

**Example:** Select "SUBTITLE LANGUAGE".


1 Press **TOP MENU/TITLE LIST**.

- The disc menu screen is displayed if present on the DVD video disc.

2 Press  $\wedge/\vee$  to select "SUBTITLE LANGUAGE", then press **ENTER**.

- The screen for selecting the subtitle language is displayed.

### Example

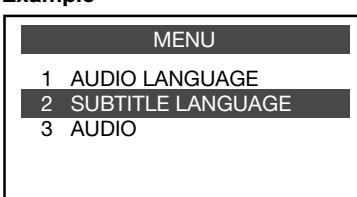

3 Press  $\wedge/\vee$  to select the subtitle language, then press **ENTER**.

4 Press **TOP MENU/TITLE LIST** to exit.


### Using the pop-up menu

#### BD VIDEO

1 Press **POP-UP MENU** during playback.

- The pop up menu screen is displayed.
- The menu contents displayed vary depending on the disc. For details on how to see and operate the pop-up menu, refer to the manual for the disc.

### Example

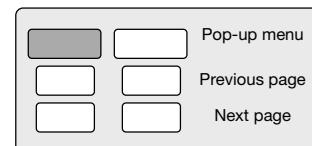

2 Press  $\wedge/\vee/\langle/\rangle$  to select the desired item, then press **ENTER**.

3 Press **POP-UP MENU** to exit.

- The pop-up menu will automatically disappear for some discs.

### ■ Enjoying BONUSVIEW or BD-LIVE

#### BD VIDEO


This Unit is compatible with additional functions of BD-Video, BONUSVIEW (BD-ROM Profile 1 Version 1.1) and BD-LIVE.

For BD-Video discs compatible with BONUSVIEW, the functions of Picture in Picture and Virtual Package are available. For BD-LIVE compatible discs, you can enjoy a variety of functions via the Internet in addition to the BONUSVIEW functions.

Virtual Package/BD-LIVE data is saved in Local Storage (USB memory device connected to this Unit). To enjoy these functions, connect a USB memory device (2GB or greater) supporting USB 2.0 High Speed (480Mbit/s) to the USB1 terminal on this unit.

- USB memory device can be used only on USB 1 terminal. (When you insert or remove a USB memory device, be sure to turn the main power off and make sure that "Quick Start" is set to "No" (See page 28).)

#### Rear

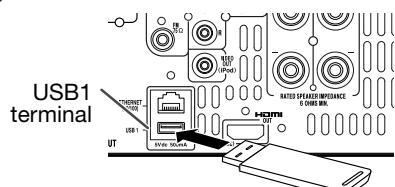

USB memory device

- If there is insufficient storage space, the data will not be copied/downloaded. Delete unneeded data or use a new USB memory device.
- If a USB memory device containing other data (previously recorded) is used, the video and audio may not play back properly.
- If the USB memory device is disconnected from this unit during playback of Virtual Package/BD-LIVE data, playback of the disc will stop.
- Some time may be required for the data to load (read/write).

Refer to "USB Memory Management" on page 31 for erasing the Virtual Package data and the BD-LIVE data in the USB memory device.

#### Notes:


- SHARP cannot guarantee that all brands' USB memory devices will operate with this unit.
- Only USB memory devices formatted with FAT 32/16 are compatible.

When formatting a USB memory device using a PC, perform the following settings.

- Format File System: FAT32
- Allocation Unit Size: Default Allocation Size
- Do not use a USB extension cable when connecting a USB memory device to the USB terminal of the unit.
- Using a USB extension cable may prevent the unit from performing correctly.

### Use of Picture in Picture function (secondary audio/video playback)

BD-Video that includes secondary audio and video compatible with Picture in Picture can be played back with secondary audio and video simultaneously as a small video in the corner.

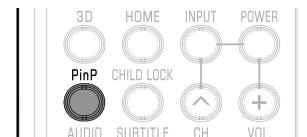

1 Press **PinP** during playback to show the 2-picture screen.



Primary audio/  
video      Secondary  
audio/video

2 To remove the secondary video, press **PinP** again.

#### Notes:

- To listen to secondary audio, make sure that "Secondary Audio" is set to "On". (See page 28.)
- The secondary audio and video for Picture In Picture may automatically play back and be removed depending on the content. Also, playable areas may be restricted.

### Virtual Package

For BD-Video discs compatible with Virtual Package, data is copied from the discs or Internet to local storage. It is automatically copied to the local storage prior to playback. You can enjoy a variety of additional functions including secondary video, secondary audio, subtitles, movie trailers, etc.

- The playback methods vary depending on the disc. For details, refer to the disc manual.

### BD-LIVE

In this Unit, a variety of contents with interactive functions are available through BD-LIVE compatible Blu-ray discs by connecting to the Internet. You can enjoy the download of bonus features such as latest movie trailers to the USB memory device, communication compatible BD-J interactive games, etc.

- The available functions differ depending on the disc.

## Video/Picture/Music Playback (continued)

### Notes:


- Regarding playback method of BD-LIVE contents, etc., perform the operations in accordance with the instructions in the BD disc manual.
- To enjoy BD-LIVE functions, perform the broadband Internet connection (page 11) and communication settings (pages 29–30).
- Before using this function, please read "Network Service Disclaimer" (page 45).
- Refer to page 28 regarding the setup to restrict access to BD-LIVE contents.
- If the BD-LIVE screen does not appear for a while after you select the BD-LIVE function in the BD disc menu, the USB memory device may not have enough free space. In such cases, eject the disc from the unit, and then erase the data in the USB memory device in the "USB Memory Management" menu on page 31.

### DVD-R/-RW (VR format) / BD-RE/-R (BDAV format) Playback

DVD-R DVD-RW BD-RE BD-R

You can play back a recorded disc (DVD: VR format finalised disc only / BD: BDAV format disc only).

- For a description of other playback functions, refer to "Playback Functions" on pages 24–26.

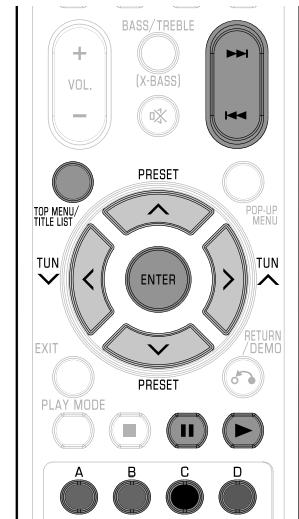


### Notes:

- "Finalise" refers to a recorder processing a recorded disc so that it will play in other DVD units/recorders as well as this unit. Only finalised DVD discs will play back in this unit. (This unit does not have a function to finalise discs.)
- Some discs cannot be played back depending on the audio format.
- BD-RE/-R discs recorded from a BD recorder comply with AACS copyright protection technology. As this unit is not intended to be compliant with AACS, such discs cannot be played back. (AACS: Advanced Access Content System)

### Playback by selecting a title

- Load a recorded disc.
  - The Title List screen is displayed.

Example: Thumbnail screen

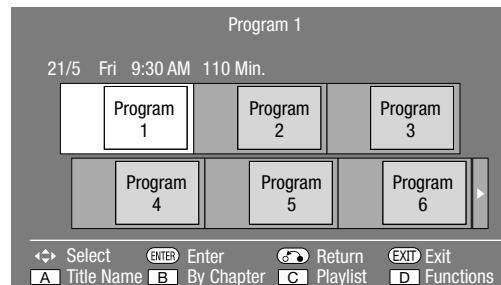

- If the Title List screen is not displayed, press **TOP MENU/TITLE LIST**.
- When loading a BD disc with usage restrictions placed by a BD recorder, the password input screen appears. Then, input your password. If you input a wrong password three times, the disc tray will open. Close the disc tray, and then input a correct password.
- Press  $\wedge/\vee/\langle/\rangle$  to select the desired title, then press **ENTER** to start playback.
  - If you want to select additional titles, switch pages by pressing  $\blacktriangleleft$  or  $\triangleright$ .
  - You can playback by pressing **A** (Red) instead of pressing **ENTER**.
- Press **■** to stop playback.


#### Note:

- The Title List screen also can be displayed by pressing **TOP MENU/TITLE LIST** when playback is stopped.


#### About Title List

- The Title List can be displayed in two types, Thumbnail and Title Name.
- Each time you press **A** (Red), the screen changes between Thumbnail and Title Name.

### Thumbnail

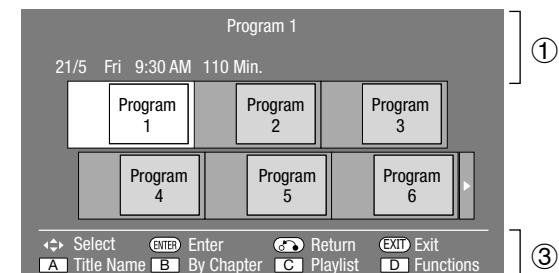

### Title Name

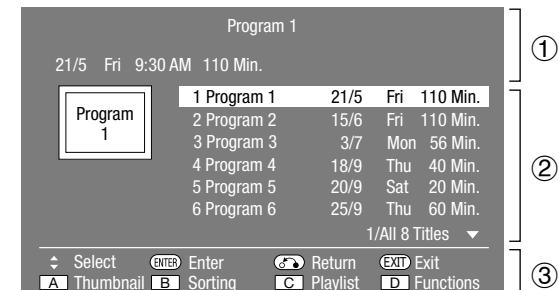


① Information of selected title

- ② Title Name  
Recording Date  
Recording Duration  
③ Button Guide

### Playback by selecting a chapter

- Press **B** (Green) while the Thumbnail screen is displayed.
  - The chapter screen is displayed.
- Press  $\wedge/\vee/\langle/\rangle$  to select the desired chapter, then press **ENTER** to start playback.
  - If you want to select additional chapters, switch pages by pressing  $\blacktriangleleft$  or  $\triangleright$ .
  - To return to the Thumbnail screen, press **B** (Green).
- Press **■** to stop playback.

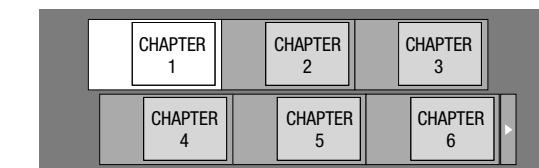

## Video/Picture/Music Playback (continued)

### Sorting the titles


Each time you press **B** (Green) while the Title Name screen is displayed, the Title Name display changes between displaying the newest title first and the oldest title first.

### Playback by selecting a Playlist

1 Press **C** (Yellow) while the Title List screen is displayed.

- The Playlist screen is displayed.

**Example:** Thumbnail screen

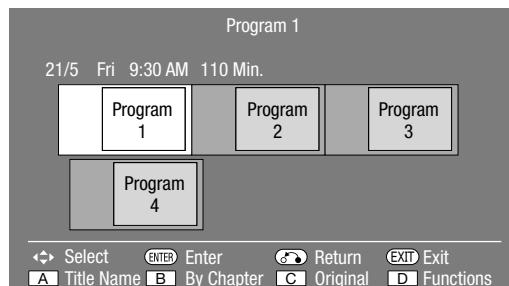

2 Press  $\wedge/\vee/\langle/\rangle$  to select the desired title, then press **ENTER** to start playback.

3 Press **■** to stop playback.

### Playback from the beginning or resume playback

When you play back the title from the Title List after you stopped playback, you can select playback from the beginning or from the point where it was last stopped.

1 Press **D** (Blue) when the desired title is selected while the Title List screen is displayed.

2 Press  $\wedge/\vee$  to select the type of Playback, then press **ENTER** to start playback.

- The type of Playback may be selected from "From Beginning" or "From Continued".



3 Press **■** to stop playback.

### ■ Audio CD Playback

#### AUDIO CD

This Unit can play back audio CDs.

● For a description of other playback functions, refer to "Playback Functions" on pages 24-26.

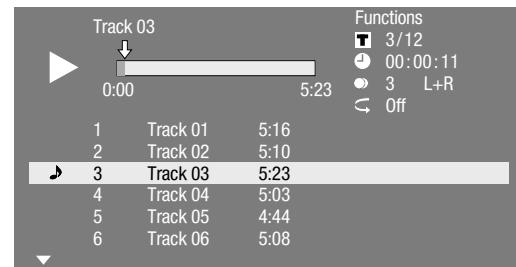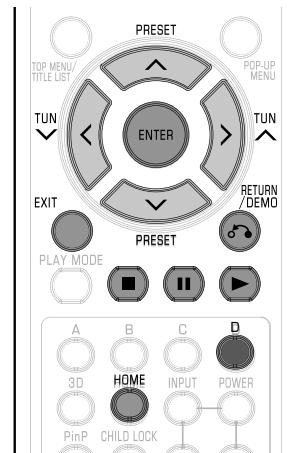


2 Press **■** to stop playback.

### Operation procedure for the "Functions" menu

1 Press **D** (Blue) (Functions) when the CD screen is displayed.

- The "Functions" menu is activated.

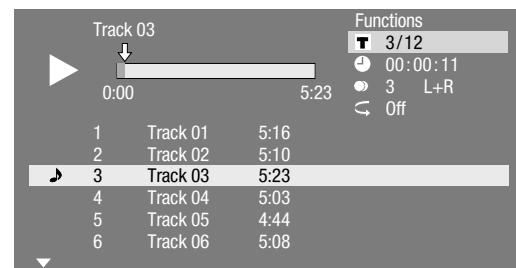

2 Press  $\wedge/\vee$  to select the desired setting, then press **ENTER**.

- When playback is stopped, only "Track" can be selected.
- For a description of each setting, see "Functions which can be set" (Page 26).

3 Press  $\wedge/\vee/\langle/\rangle$  to set, then press **ENTER**.

- Operations vary depending on the setting. Follow the operation instructions on the screen.

4 Press  $\circlearrowleft$  **RETURN/DEMO** or **D** (Blue) to exit the "Functions" menu.

#### Note:

- The displayed items vary depending on the disc.

### ■ Audio Data (MP3 File) Playback



CD-R CD-RW DVD-R DVD-RW USB

This Unit can play back audio data (MP3 files) recorded on CD-R/RW discs, DVD-R/RW discs and USB memory devices or via a home network.

● For details on the audio data that you can play using this unit, refer to page 3.

● When data in the USB memory device is played back, playback from the USB memory device will stop when **OPEN/CLOSE** on the remote control or the unit is pressed or when a disc is inserted into the unit.


## Video/Picture/Music Playback (continued)

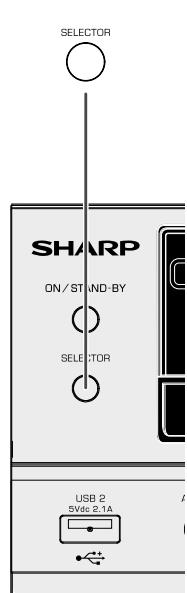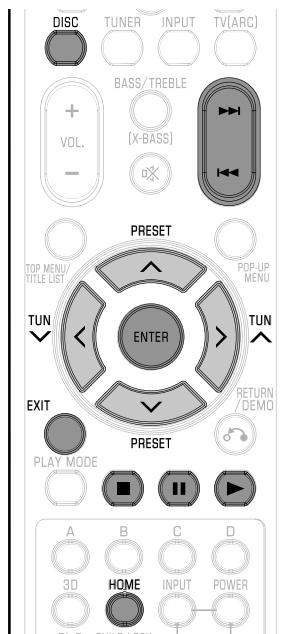

- 1 Press **DISC** button on the remote control or **SELECTOR** button repeatedly on the main unit to select **DISC** function.
- 2 Load a disc or a USB memory device\* containing audio data (MP3 files).


\* When you insert or remove a USB memory device, be sure to turn the main power off and make sure that "Quick Start" is set to "No" (See page 28).

### Rear

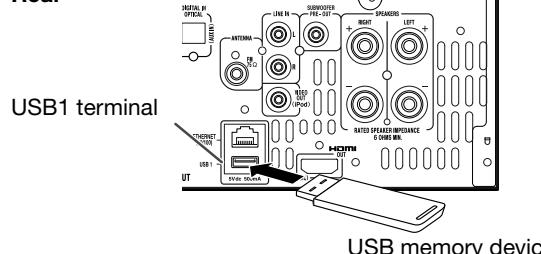


### Note:


- A USB memory device can be used only on **USB1** terminal.

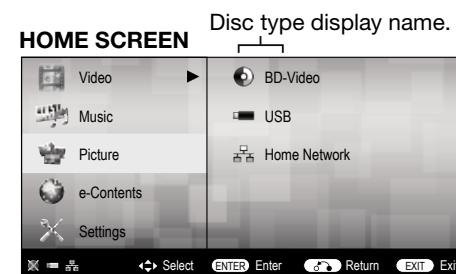

- 3 Press **▲** / **▼** to select "Music", then press **>** or **ENTER**.
  - 4 Press **▲** / **▼** to select "DVD", "CD", "USB" or "Home Network", then press **>** or **ENTER**.
  - 5 Press **▲** / **▼** to select a folder or file.
- When you select a folder, press **ENTER** to open it, and then press **▲** / **▼** to select a file in the folder.

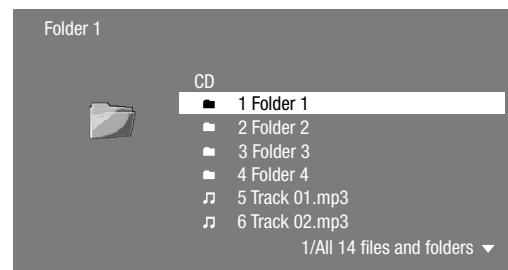

- 6 Press **ENTER** to play back the selected file.
- Playback of the selected file will begin.

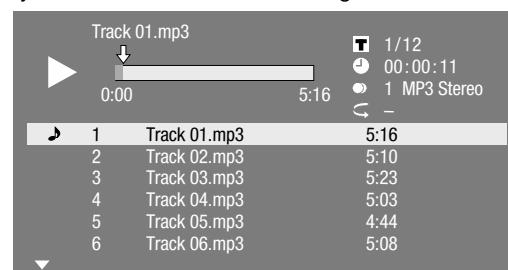

- When MP3 files are played, the "Functions" menu is not available.
- 7 To return to the HOME screen, press **□** (press twice if during playback), and then press **HOME** or **EXIT**.

### List of available buttons during playback

Buttons	Description
<b>▲</b> / <b>▼</b>	Select a desired audio file.
<b>ENTER</b>	Play back audio file.

Buttons	Description
<b>II</b>	Pause audio file playback. ● Return to playback when paused.
<b>◀</b>	Skip backward.
<b>▶</b>	Skip forward.
<b>■</b>	Stop playback.

### Notes:


- The Fast Forward/Reverse function does not work.
- The Repeat function does not work.
- The Random (Shuffle) function does not work.

### ■ Displaying Still Images (JPEG files)

**CD-R** | **CD-RW** | **DVD-R** | **DVD-RW** | **USB**

This Unit can display still images (JPEG files) recorded on CD-R/RW discs, DVD-R/RW discs and USB memory devices or via a home network.

- For details on the still images that you can display using this unit, refer to page 3.
- Still images are played one by one while during "Slide show", they are automatically replaced one after another.
- When data in the USB memory device is played back, playback from the USB memory device will stop when **OPEN/CLOSE** on the remote control or the unit is pressed or when a disc is inserted into the unit.

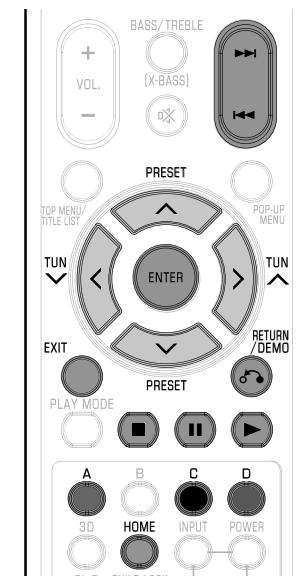

## Video/Picture/Music Playback (continued)


1 Press DISC button on the remote control or SELECTOR button repeatedly on the main unit to select DISC function.

2 Load a disc or a USB memory device\* containing Still Images (JPEG files).

\* When you insert or remove a USB memory device, be sure to turn the main power off and make sure that "Quick Start" is set to "No" (See page 28).

### Note:

● A USB memory device can be used only on USB1 terminal.

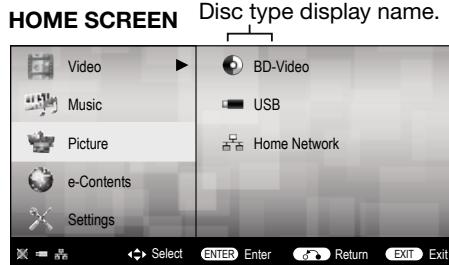


3 Press  $\wedge$  /  $\vee$  to select "Picture", then press  $>$  or ENTER.

4 Press  $\wedge$  /  $\vee$  to select "DVD", "CD" or "USB" or "Home Network", then press  $>$  or ENTER.

5 Press  $\wedge$  /  $\vee$  to select a folder or file.

● When you select a folder, press ENTER to open it, and then press  $\wedge$  /  $\vee$  to select a file in the folder.

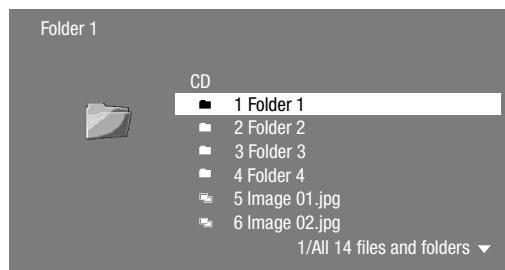

● To set slide show speed/repeat playback, press D (Blue) (Slide Show Menu).

### Slide Show Menu

<b>Slide Show Speed</b>	Setting of slide show playback speed
<b>Repeat Mode Setting</b>	Setting of slide show repeat playback
<b>Guide Display Setting</b>	Guide display setting during still image display

6 Press ENTER to display the selected file.

● The selected still image appears on the screen.



7 To return to the HOME screen, press ■, and then press HOME or EXIT.

### Operational buttons during still image display

Buttons	Description
◀/▶	Go to the previous/next picture in the same directory.
RETURN/DEMO	Return to the selection screen.
C (Yellow)	Rotate the picture by 90 degrees to the left.
D (Blue)	Rotate the picture by 90 degrees to the right.
▶	Play back Slide Show. Return to slide show playback when paused.
■	Pause slide show playback.
■	Stop still image display/slideshow playback.
A (Red)	Guide display on/off

### Notes:

- Thumbnail data will be displayed when JPEG files from a digital camera contain thumbnail data.
- An icon will be displayed for JPEG files which do not contain thumbnail data.

### ■ Accessing DLNA servers

The unit can browse and play movies, music and photos stored on your DLNA Certified media servers connected within your home network.

### About a home network


This unit can display and play movies, photos and music content from your DLNA-compatible digital media servers (such as a PC and consumer electronics).

### Before accessing DLNA servers:

- DLNA servers and this unit must be connected to the same local area network. Specify the settings required for connecting this unit to the local area network.
- DLNA servers must be turned on.

● When a PC running DLNA server software or other DLNA-compatible devices are connected to this unit, some setting changes of software or other devices may be required.

● Please refer to the operating instructions for the software or devices for more information.

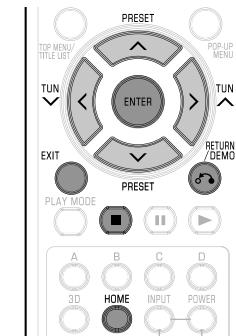

### Types of playable files

Video	DivX Plus HD (avi/divx/mkv)
Music	mp3
Picture	jpg

### Notes:

- Even if DLNA compatible, a connection may not be able to be made depending on the server, or playback may not be available even if a connection is made successfully.
- Some files may not be playable depending on the file. For details, refer to page 3 of the operation manual disc.
- To enjoy this function, make a broadband Internet connection to both your PC and this unit (See page 11 of the operation manual disc), and then set communication settings (See pages 29-30 of the operation manual disc), then perform the following operation.
- To use this function, we recommend setting "Auto Power Off" to "No". (See page 12 of the operation manual disc.)
- Before using this function, please read "Network Service Disclaimer" (page 45).


### Playback by selecting a file list

1 Press DISC button on the remote control or SELECTOR button repeatedly on the main unit to select DISC function.

2 Press  $\wedge$  /  $\vee$  to select Video/Music/Picture, then press  $>$  or ENTER.


3 Press  $\wedge$  /  $\vee$  to select "Home Network" in the sub window.

## Video/Picture/Music Playback (continued)

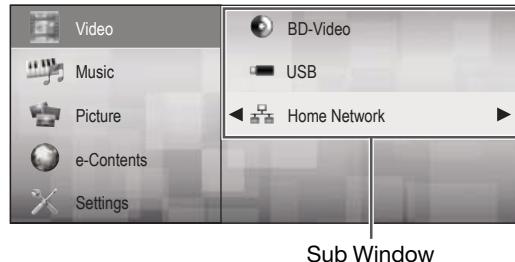

4 Press **ENTER** or **>**.

- The unit automatically scans and displays DLNA servers within your local network.

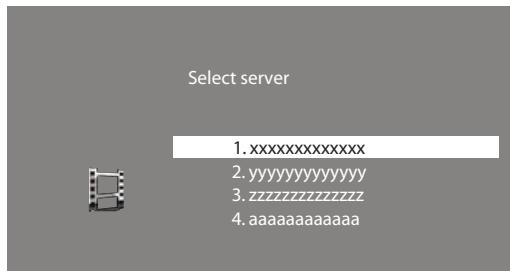


5 Press **^/▼** to select a DLNA server which you want to access, then press **ENTER** or **>**.

- The folder list or file list of the DLNA server which you accessed is displayed.
- The previous screen appears when **RETURN/DEMO** is pressed.

6 Press **^/▼** to select the folder or file which you want to access, then press **ENTER**.

- When you select a folder, the file list of the folder is displayed. Press **^/▼** to select the file which you want to play, then press **ENTER**.

● Playback starts.

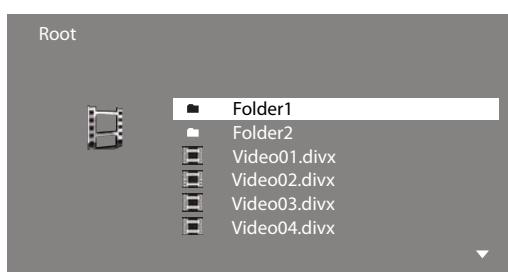

- For operation during playback, refer to pages 24–26.

7 Press **■** to stop playback.


- The file list reappears.

● The previous screen appears when **RETURN/DEMO** is pressed.

8 Press **EXIT** or **HOME** to exit playback.

- The **HOME** screen reappears.

## Playback Functions

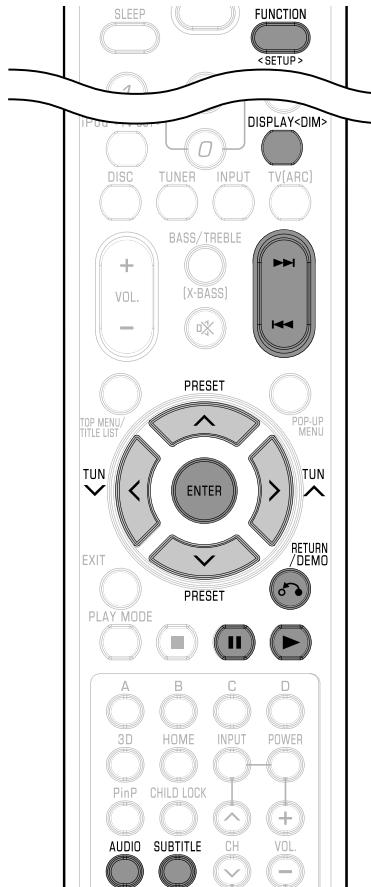

### Note:

- Some operations in the following playback functions cannot be performed depending on the specifications of the disc.

### Fast Forward/Reverse (Search)

**BD VIDEO** | **BD-R** | **BD-RE**

**DVD VIDEO** | **DVD-R** | **DVD-RW**

**AUDIO CD**

The Fast Forward/Reverse function is enabled when **◀▶** or **▶▶** is pressed for more than 2 seconds during playback.

- The speed change each time the button is pressed and hold.

### When playing back a DVD

- You cannot perform Fast Forward/Fast Reverse from one title and continue to another title (except when playing audio CDs). At the end or beginning of the title, Fast Forward/Fast Reverse will be cancelled and normal playback will automatically resume.

### Note:

- Subtitles are not played back with BD/DVD video discs during Fast Forward and Fast Reverse.

### Skip to the Next or the Start of the Current Chapter (Track/Title)

**BD VIDEO** | **BD-R** | **BD-RE**

**DVD VIDEO** | **DVD-R** | **DVD-RW**

**AUDIO CD** | **CD-R** | **CD-RW** | **USB**

The Skip (to the beginning of a chapter, track or title) function is enabled when **◀◀** or **▶▶** is pressed during playback.

### Pause/Frame Advance Playback

**BD VIDEO** | **BD-R** | **BD-RE**

**DVD VIDEO** | **DVD-R** | **DVD-RW**

The Pause function is enabled when **■** is pressed during playback. (If you are playing back an audio CD, audio data [MP3 files] or still images [JPEG files], these will also pause.)

The Frame Advance Playback function is enabled when **▶▶** is pressed during pause.

- Frame Advance Playback may not function properly with discs other than DVD-RW/R (VR format).

### Notes:

- Some BD/DVD Video discs are not compatible with Pause/Frame Advance Playback.
- Frame Advance/Reverse Playback can be performed for DVD discs by pressing **▶▶** or **◀◀** during pause.
- Frame Reverse Playback cannot be performed for DivX video.

### Slow Playback (Forward/Reverse)

**BD VIDEO** | **BD-R** | **BD-RE**

**DVD VIDEO** | **DVD-R** | **DVD-RW**

The Slow Playback (Forward/Reverse) function is enabled when **▶▶** or **◀◀** is pressed for more than 2 seconds during pause.

Press **▶** to return to normal playback.

### Notes:

- This doesn't work for audio CDs.
- You cannot perform Slow Playback between titles. At the end of the title, Slow Playback will be cancelled and normal playback will automatically resume.
- Reverse Slow Playback cannot be performed for BD video and DVD discs in AVCHD format.
- Reverse Slow Playback cannot be performed for DivX video.

## Playback Functions (continued)

 
### ■ Repeat Playback of a Title or Chapter (Repeat Playback)

BD VIDEO BD-R BD-RE

DVD VIDEO DVD-R DVD-RW

AUDIO CD

- 1 Play back the title or chapter you want to repeat.
- 2 Press **PLAY MODE**, then press  $\wedge$  /  $\vee$  to select the type of Repeat Playback.
  - Playback Title: Repeats the title currently being played back.
  - Playback Chapter: Repeats the chapter currently being played back.
  - Scene Selection: Repeats the specified scene of title or chapter.

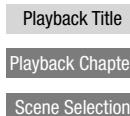


#### Notes:

- Press **RETURN/DEMO** to cancel without setting the type of Repeat Playback.
- For Audio CD, you can select "Playing Disc", "Playing Track" and "Specify The Part" as Repeat Playback options.
- Repeat Playback cannot be performed for DivX video.

4 Press **ENTER**.

Example: Repeat playback of a title (TITLE)

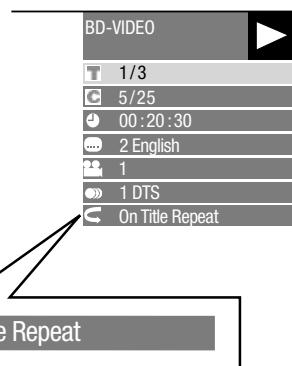

5 Press **PLAY MODE** to return to normal playback.

#### Note:

- "Scene Selection" operation is not available for BD video.

 
### ■ Partial Repeat Playback (Repeat Playback of a Specified Part)

DVD VIDEO DVD-R DVD-RW

AUDIO CD

1 Press **PLAY MODE** during playback.

- 2 Press  $\wedge$  /  $\vee$  to select "Scene Selection", then press **ENTER**.
  - "Set Start Point" displays.

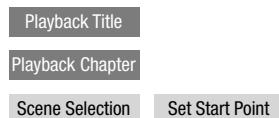

- 3 Press **ENTER** at the scene where you want to set the start point.
  - "Set End Point" displays.
- 4 Press **ENTER** at the scene where you want to set the end point.
  - You can press to fast forward to the scene where you want to set the end point. When you reach the desired scene, simply press and then **ENTER** to set the end point. To cancel Repeat Playback, press **PLAY MODE**.

#### Notes:

- Press , the Repeat Playback is cancelled and the next chapter being play back.
- Press once, the Repeat Playback is cancelled and the unit returns to the start of current chapter (track).
- If you press again (within about 5 seconds) the unit will skip to the beginning of the previous chapter (track).
- For Partial Repeat Playback, set the start and end points within the same title.
- Repeat Playback may be forbidden depending on the disc.
- Partial Repeat Playback may not work in multi-angle scenes.
- If you press **DISPLAY <DIM>**, you can confirm the Repeat Playback status.

### ■ Displaying the Audio Information

You can display the audio information on the disc currently being played back by pressing **AUDIO**.  
The displayed contents vary depending on the disc.

BD VIDEO DVD VIDEO

The audio channel currently being played back will be displayed.  
If multiple audio channels are recorded, you can switch the audio channel by pressing **AUDIO**.

DVD-RW DVD-R

When a recorded broadcast with stereo or monaural audio is played back:

"Stereo" is displayed. (Audio cannot be switched.)

#### Notes:

- When you play a programme recorded in stereo or monaural, and if you are listening to the Bitstream sound via the digital output jack, you cannot select the audio channel. Set "Audio Out" to "PCM" (page 28).
- Settings for audio can also be changed in the Function Control screen (Page 26).
- The operation of audio differs according to each disc. You may need to refer to the operation manual of the disc.
- The display for audio information automatically disappears after 5 seconds.

### ■ Switching Subtitles

BD VIDEO DVD VIDEO

If subtitles are provided in multiple languages, you can switch between them.

Press **SUBTITLE** during playback.

- The display indicates the subtitle number currently being played back, and the subtitles appear.  
Each time **SUBTITLE** is pressed, the subtitles change.
- "—" is displayed if a disc has no subtitles.
- You can also select "Off".

#### Notes:


- Settings for subtitles can also be changed in the Function Control screen (Page 26).
- The operation of subtitles differs according to each disc. You may need to refer to the operation manual of the disc.
- The display for subtitle information automatically disappears after 5 seconds.

### ■ Switching the Angle

BD VIDEO DVD VIDEO

If multiple angles are recorded, you can switch between them.

- 1 Press **FUNCTION <SETUP>** during playback.
  - The Function Control screen is displayed on the TV.
- 2 Press  $\wedge$  /  $\vee$  to select the Angle Number column, then press **ENTER**.

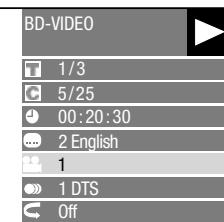

- 3 Press  $\wedge$  /  $\vee$  to select the desired Angle Number, then press **ENTER**.
- 4 Press **RETURN/DEMO** or **FUNCTION <SETUP>** to close the Function Control screen.

#### Notes:

- The displayed items vary depending on the disc.
- If you access the Function Control screen during playback of a BD/DVD video, it may be impossible to operate the BD/DVD video playback. In cases like this, close the Function Control screen.
- The operation of angles differs according to each disc. You may need to refer to the operation manual of the disc.
- The display for angle information automatically disappears after 5 seconds.

## Playback Functions (continued)

### ■ Displaying the Angle Mark

BD VIDEO DVD VIDEO

You can change settings so that Angle Mark appears in the right bottom part of the screen when multiple angles are recorded. The settings can be changed in "Settings" - "Playback Setting" - "Angle Mark Display" (Page 28).

## Settings During Playback

### ■ Function Control


BD VIDEO BD-R BD-RE

DVD VIDEO DVD-R DVD-RW

AUDIO CD

This allows you to adjust various settings at once, like subtitles, angle settings and the title selection for Direct Playback. You can adjust the video and audio to suit your preferences. The operations are the same for BD and DVD.

#### Function Control screen

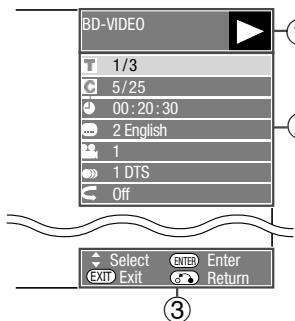

#### ① Playback status display

Shows the operation status and the disc type.

#### ② Setting items


Selects a title (or track) or chapter for playback, or performs video/audio settings.

- Title/Track Number (Direct Title/Track Skip)
- Chapter Number (Direct Chapter Skip)
- Playback Elapsed Time (Direct Time Skip)
- Subtitle Language
- Angle Number
- Audio
- Repeat

### ③ Operation guide display

Provides help on remote control button operations.

### Function control operation procedure

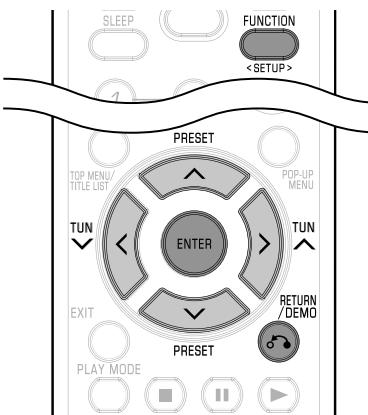


#### 1 Press **FUNCTION <SETUP>** during playback.

- The Function Control screen is displayed on the TV.

#### 2 Press **^ / v** to select the desired setting, then press **ENTER**.

- For a description of each setting, see "Functions which can be set" (on this page).

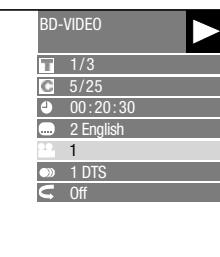

#### 3 Press **^ / v / </>** to set, then press **ENTER**.

- Operations vary depending on the setting. Follow the operation instructions on the screen.

#### 4 Press **RETURN/DEMO** or **FUNCTION <SETUP>** to close the Function Control screen.

#### Notes:

- If "—" is displayed for an option like title number or subtitles, the disc has no titles or subtitles which can be selected.
- The displayed items vary depending on the disc.
- If you access the Function Control screen during playback of a BD/DVD video, it may be impossible to operate the BD/DVD video playback. In cases like this, close the Function Control screen.

## Functions which can be set

### T Title/Track Number (Direct Title/Track Skip)

- Shows the title number being played back (or track number when playing back an audio CD). You can skip to the start of the title (or track).

- To skip to the start of a selected title (or track), press the **Number** buttons to enter the title (or track) number when this option is highlighted.

### C Chapter Number (Direct Chapter Skip)

- Shows the chapter number being played back. You can skip to the start of the chapter.

- To skip to the start of a selected chapter, press the **Number** buttons to enter the chapter number when this option is highlighted.

### ⌚ Playback Elapsed Time (Direct Time Skip)

- Shows the time elapsed from the beginning of the current disc title (or track). This lets you skip to a specific time.

- Press **</>** to select the Hour, Minute or Second, then press **^ / v** or the **Number** buttons to set the time. Press **ENTER** to start playback at the set time.

### Subtitle Language

- Shows the currently selected subtitle language. If subtitles are provided in other languages, you can switch to your preferred language.

### Angle Number

- Shows the currently selected angle number. If the video is recorded with multiple angles, you can switch the angle.

### Audio

- Shows the currently selected type of audio. You can select the desired type of audio.


### Repeat

- The current Title (or Chapter) or partial segments can be repeatedly played back. Repeat Playback is also possible with the **PLAY MODE** button on the remote control.

#### Note:

- These functions may not work with all discs.

## Settings During Playback (continued)

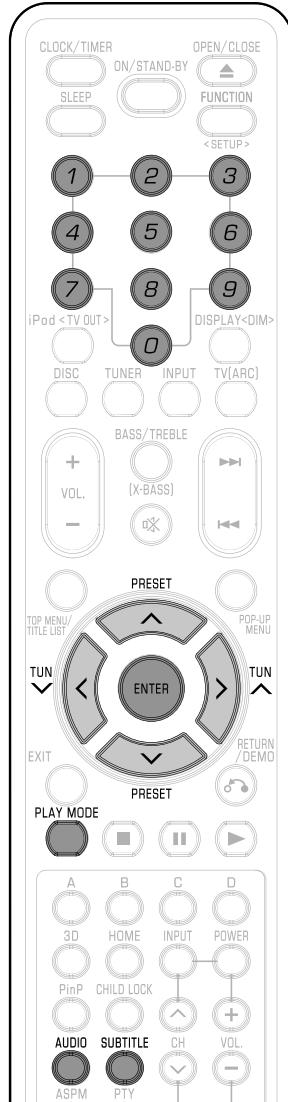


## Settings

### Common operations

The “menu” enables various audio/visual settings and adjustments on the functions using the remote control unit. You need to call up the On Screen Display to perform settings for this unit. The following is the explanation for the basic operations of the “menu”.

**Example:** Setting “AQUOS LINK”

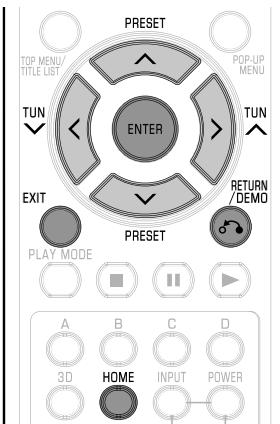


**1** Home screen display



Press  $\wedge$  /  $\vee$  to select “Settings”, then press  $>$  or **ENTER**.

**2** Select a menu item

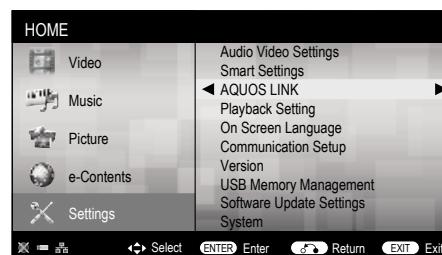

Press  $\wedge$  /  $\vee$  to select “AQUOS LINK”, then press  $>$  or **ENTER**.

**3** Select the next item

Press  $\wedge$  /  $\vee$  to select the desired item, then press **ENTER**.

Press  $\circlearrowleft$  **RETURN/DEMO** to return to the previous “menu” page.

**4** Exit the menu screen

Press **HOME** or **EXIT** to exit.


### Setting the PIN code for the first time

- 1 Press  $\wedge$  /  $\vee$  to select “Settings”, then press  $>$  or **ENTER**.
- 2 Press  $\wedge$  /  $\vee$  to select “Playback Setting”, then press  $>$  or **ENTER**.
- 3 Press  $\wedge$  /  $\vee$  to select “PIN Code Setting”, then press  $>$  or **ENTER**.
- 4 Press  $\wedge$  /  $\vee$  to select “Yes” to enter the PIN code setting menu.
- 5 Enter a 4-digit number for the PIN code setting.
- 6 Press **ENTER** to complete the PIN code setting.

### Parental Control Setting

PIN code must be set first before setting the Parental Control.

- 1 Press  $\wedge$  /  $\vee$  to select “Settings”, then press  $>$  or **ENTER**.
- 2 Press  $\wedge$  /  $\vee$  to select “Playback Setting”, then press  $>$  or **ENTER**.
- 3 Press  $\wedge$  /  $\vee$  to select “Parental Control”, then press  $>$  or **ENTER**.
- 4 Enter your 4-digit PIN code.
  - You cannot move to the next setting screen until you input the correct PIN code.
- 5 Press  $</>$  to select the parental control level for DVD VIDEO, BD-ROM, and then select the country code.  
Press **ENTER** after making each selection.

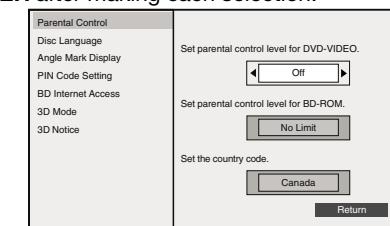

**6** Press **HOME** or **EXIT** to exit.

### Audio Video Settings

#### HDMI Video Out

This sets the resolution of the video output for the HDMI terminal of this unit.

Normally set to “Auto” (factory preset value).

#### Item

Auto, 1080p, 1080i, 720p, 576/480p

#### Note:

- When the BD unit is connected to a 1080p 24Hz compatible TV and the “HDMI Video Out” is set to “Auto”, 1080p 24Hz will automatically be displayed when compatible discs are played back.

## Settings (continued)

### Secondary Audio

This toggles the clicking sound on the menu and audio with secondary video in picture in picture mode for BD-Video.

- Select "Off" when enjoying the high quality sounds of BD-Video.

### Item

On, Off

### Audio Out

You can set the audio output when connecting to SURROUND equipment.

- 1 This sets the audio output connected to SURROUND equipment.

### Item

HDMI Output: Select this when you connect using HDMI OUT terminal.

- 2 You can set the audio output mode.

This sets the audio output mode for HDMI OUT terminal when selecting "HDMI Output".

### Note:

- When the secondary audio is set to "On", PCM is automatically selected as the audio output mode.

### Item

Bitstream:

- Select this when connecting to HDMI equipment with a built-in decoder for DOLBY DIGITAL, etc.

● Setting to Bitstream will output each audio signal by Bitstream.

PCM (Surround):

- Select this when connecting to multi-channel HDMI equipment.

● Setting to PCM (Surround) will output by LINEAR PCM by decoding audio signals recorded in each audio output mode such as DOLBY DIGITAL, DTS.

### Note:

- See page 34 for information on output of audio formats.

### Dynamic Range Control

This lets you adjust the range between the loudest and softest sounds (dynamic range) for playback at average volume. Use this when it is hard to hear dialogue.

### Item

Normal: The same audio output range is played as the original recorded audio output range.

Shift\*: When Dolby Digital audio is played back, the dynamic range of the audio is adjusted so that the dialogue portion can be heard easily. (If the audio sounds abnormal, set to "Normal".)

Auto: When you play back audio in the Dolby TrueHD format, the dynamic range is automatically adjusted.

\* Lower the audio volume before setting. If you do not do so, the speakers may emit a loud sound or excessive output may be applied to the speakers.

### SUPER PICTURE

This enhances the quality of video streaming images with pixel by pixel processing technology.

### Item

On, Off

### ■ Smart Settings

#### Quick Start

This turns the Quick Start function on and off.

When the Quick Start function is on:

- The startup time of the Unit is reduced.
- However, power consumption will increase.

When the Quick Start function is off:

- The unit will enter the low power consumption mode when in standby condition.

#### Item

Yes, No

#### Note:

- When "Quick Start" is set to "Yes", the Unit requires some time to turn off.

#### Control Panel

This lets you set display of the control panel on the TV screen to on or off.

#### Item

Yes, No

### ■ AQUOS LINK

This lets you set the Unit to receive the control signal from the AQUOS LINK remote control via the HDMI cable.

#### Item

Yes, No

#### Note:

- For details, refer to the operation manual of TV.

### ■ Playback Setting

#### Parental Control

This lets you set the Parental Control depending on the disc content. The available Parental Control Levels are shown below.

The 4-digit PIN code number needs to be entered before the Parental Control Levels and the Country Code are set. The Parental Control Levels and the Country Code cannot be set if a PIN code has not been created or the PIN code is not entered.

- Select the rating level appropriate for the age of the user.

#### Item (Parental control level for DVD-video)

8 and Off: All DVD-video can be played.

1–7: Prohibits play of DVD-video with corresponding ratings recorded on them.

#### Item (Parental control level for BD-video)

No Limit: All BD-video can be played.

0–99 year(s): Prohibits play of BD-video with corresponding ratings recorded on them.

#### Item (Country code)

Select the country code.

The ratings differ according to the country.

#### Note:

- Refer to "Basic Operation for Playback Setting" on page 27 for details.

### Disc Language (Disc Priority Language)

This lets you select the language for subtitles, audio and menus displayed on the screen.

#### Item (Subtitle)

Select the subtitle language you want to display.

#### Item (Audio)

Select the audio language you want to hear.

#### Item (Menu)

Select the menu language you want to display.

#### Note:

- When "Auto" is selected, the priority language of the disc will be played back.

### Angle Mark Display

This lets you turn the Angle Mark Display on or off when BD/DVD video recorded with multiple angles is played back. (The Angle Mark is displayed in the lower right screen.)

#### Item

Yes, No

### PIN Code Setting

This sets the PIN code for setting or changing the Parental Control Level.

#### Item

Yes: Enter the 4-digit number.

#### No

#### Notes:

- When you forget the PIN code, you can reset the current PIN code using "System Reset" under "Settings". (See page 29.)
- You can also set the new PIN code if desired.

### BD Internet Access

This allows you to set access restriction to BD-LIVE contents.

#### Item

Permit: Allows all BD-LIVE discs.

Limit: Allows only discs with owner certification.

Prohibit: Prohibits all BD-LIVE discs.

#### Notes:

- The available functions differ depending on the disc.
- Regarding playback method of BD-LIVE contents, etc., perform the operations in accordance with the instructions in the BD disc manual.
- To enjoy BD-LIVE functions, perform the broadband Internet connection (page 11) and communication settings (pages 29–30).

### 3D Mode

This sets output of 3D images.

To view 3D images, playback of 3D content (3D BD video) is necessary with a 3D compatible TV and 3D glasses in addition to this unit.

#### Item

Auto: Video signals are output as 3D when 3D content (3D BD video) is played or as 2D when 2D content is played.

2D: Even if 3D content (3D BD video) is played, video signals are output as 2D at all times.

## Settings (continued)

### Caution:

- When viewing 3D images, viewing for a long period of time or lying on your back may cause eye strain and discomfort. In addition, 3D images may affect the eyesight of young children/infants, so keep them from viewing the images.

### 3D Notice

This sets whether or not a notice is displayed ("Yes" or "No") on the connected TV every time 3D content (3D BD video) is played.

#### Item

Yes, No

### ■ On Screen Language

You can set the language you want to display on the screen.

#### Item

English, Deutsch, Français, Italiano, Español, Português, Nederlands, Svenska, Dansk, Norsk, Suomi, Polski, Česky, Magyar, Slovensky, Slovenčina

### ■ Version

When you select "Version", the system software version is displayed.

### ■ System

#### System Reset

You can reset all settings to the factory presets.

#### Item

Reset, Not Reset

#### DivX(R) Registration

The DivX registration code is displayed.

#### Item

Yes, No

#### Note:

- To learn more, visit [www.divx.com/vod](http://www.divx.com/vod).

#### DivX(R) Dereigstration

You can deactivate your DivX information on the unit.

#### Item

Yes, No

#### Note:


- To learn more, visit [www.divx.com/vod](http://www.divx.com/vod).

### ■ Communication Setup


This allows you to perform and/or change the communication settings and the Internet connection. This setting is required to use BD-LIVE functions, video on-demand services (e-Contents), home networks and software updates that connect to the Internet.

#### Notes:


- Make sure that the LAN cable is connected to this unit.
- For manually performing the setting, the following information of the connected router or modem is required. Confirm the information prior to the setting.
  - IP address, netmask, gateway, DNS address

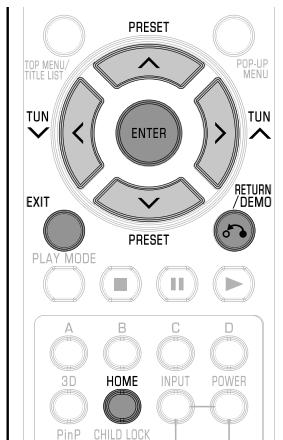

- 1 Press  $\wedge$  /  $\vee$  to select "Settings", then press  $>$  or **ENTER**.
- 2 Press  $\wedge$  /  $\vee$  to select "Communication Setup", then press  $>$  or **ENTER**.
- 3 Press  $\wedge$  /  $\vee$  to select "Ethernet Setup", then press  $>$  or **ENTER**.
- 4 Press  $\wedge$  /  $\vee$  to select "Change", then press **ENTER**.

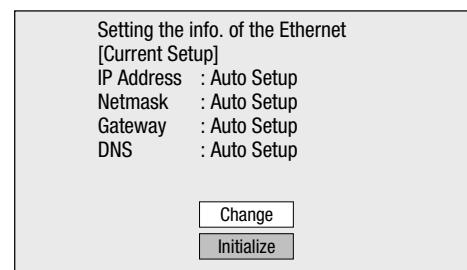


- For initializing the current setting, select "Initialize", then press **ENTER**.
- 5 For setting the IP address, press  $\wedge$  /  $\vee$  to select "Yes" or "No", then press **ENTER**.

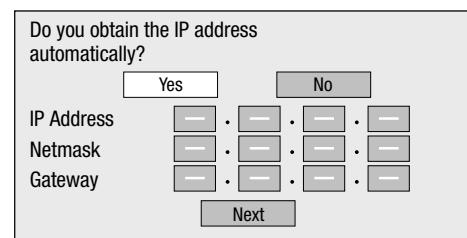

- If selecting "Yes": The IP address is automatically obtained.
- If selecting "No": The IP address, netmask and gateway are manually entered using the screen for inputting characters. (See page 29–30.)

Regarding each of the setup values, confirm the specifications of your broadband router.


- 6 Select "Next", then press **ENTER**.
- If selecting "Yes" in the step 5, go to the step 8.
- 7 Enter your DNS address.

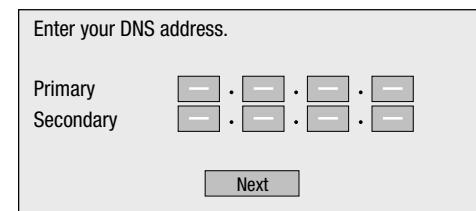

- The primary and secondary DNS addresses are entered using the screen for inputting characters. (See pages 29–30.)

Regarding each of the setup values, confirm the specifications of your broadband router.

- 8 Select "Next", then press **ENTER**.
- 9 For testing the connection to the Internet, after confirming the settings, press  $\wedge$  /  $\vee$  to select "Test", then press **ENTER**.
- "Test" is available only when setting to obtain the IP address automatically. "Test" cannot be selected if the IP address has not been obtained automatically.

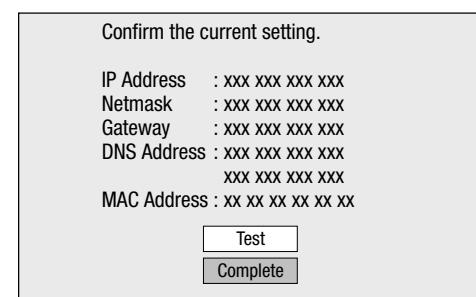

- As a result of the test, if the Internet connection fails, enter the setup values manually.
- 10 Press  $\wedge$  /  $\vee$  to select "Complete", then press **ENTER**.
  - 11 Press **HOME** or **EXIT** to return to the HOME screen.

- To perform other settings, press **RETURN/DEMO**.

## Settings (continued)

### The operation procedure for inputting characters manually

#### Note:

- Numeric characters such as IP address can be entered on the input screen either by selecting each of the characters in the "Numeric" mode or using the **Number** buttons on the remote control.

IP Address	123	.		.		.		.	
Netmask									
Gateway									

- 1 Press **ENTER** at the boxes in which characters are to be entered, and the input screen will appear.

▲ Numeric Edit ▼									
1	2	3	4	5	6	7	8	9	0

Selected by pressing ▲ / ▼

Selected by pressing ◄/►

- 2 Press ▲ / ▼ to select the desired input mode.

- 3 Press ◄/► to select a number/character, then press **ENTER**.

- 4 Repeat the step 3 to display all of the desired characters/numbers in the input field.

Example: The screen for inputting numeric characters

#### Notes:

- Press **RETURN/DEMO** (Del.Char.) to delete a number/character you have input.
- To change a number/character you have input, press **B** (Green) (Left) or **C** (Yellow) (Right) to select the number/character you want to change, and press **RETURN/DEMO** (Del.Char.). Then, press ◄/► to select a new number/character you want to input, and press **ENTER**.

- 5 Press **D** (Blue) (Complete) to fix the numbers which have been input.

IP Address	123	.		.		.		.	
Netmask									
Gateway									

- 6 Repeat step 1 to 5 to finish inputting all the required characters.

### Input character list

Numeric		1	2	3	4	5	6	7	8	9	0					
Edit	Cancel	Left	Right	Complete	Del.Char.											

The same operation as the coloured buttons and **RETURN/DEMO** can be performed by selecting each of the items and pressing **ENTER**.  
"Del.Char." stands for deleting characters.

## Settings (continued)

### Before using the USB memory device

#### Caution:

- Do not remove the USB memory device or unplug the AC power lead while the operations for "USB Memory Management" or "Software Update Settings (Manual Update from USB memory device)" are being performed.
- Do not use a USB extension cable when connecting a USB memory device to the USB1 terminal.
  - Using a USB extension cable may prevent the unit from performing correctly.

#### Notes:


- SHARP cannot guarantee that all brands' USB memory devices will operate with this unit.
- Only USB memory devices formatted with FAT 32/16 are compatible.  
When formatting a USB memory device using a PC, perform the following settings.  
Format File System: FAT32  
Allocation Unit Size: Default Allocation Size

#### Note:

- A USB memory device can be used only with USB1 terminal.


Rear

USB1 terminal

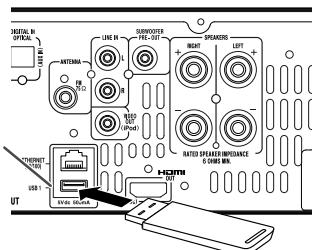

USB memory device

- 2 Press ON/STAND-BY to turn on the power.
- 3 Press  $\wedge$  /  $\vee$  to select "Settings", then press  $>$  or ENTER.
- 4 Press  $\wedge$  /  $\vee$  to select "USB Memory Management", then press  $>$  or ENTER.
  - The "USB Memory Management" screen is displayed.
  - "No USB Memory" appears when no USB memory is inserted.
- 5 Press  $\wedge$  /  $\vee$  to select "Erase" or "Format", then press ENTER.  
Erase: Deletes only BD-VIDEO data written on the USB memory device such as BD-LIVE data.  
Format: Be aware that all data including BD-VIDEO data and software update data will be deleted.
  - If you want to delete only the unneeded software update data after the software is updated, delete the data on the USB memory device using a PC.

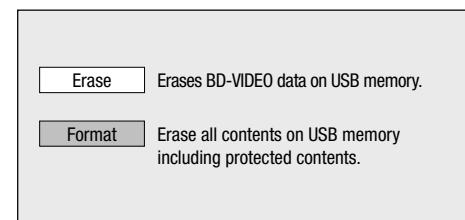

- 6 Press  $\wedge$  /  $\vee$  to select "Yes", then press ENTER.
  - A confirmation message is displayed. Check that the correct USB memory device is displayed, and then continue.
- 7 Start the process.
  - The screen for the current operation will display.



- 8 Press ENTER.

- 9 Press HOME or EXIT to exit.

#### Note:

Data which has been saved to the unit's internal memory (game score, etc.) will also be deleted.

### ■ Software Update Settings

In this unit, the software version can be updated using either one of the following methods.

- Auto Update from Network
- Manual Update from Network
- Manual Update from USB memory device

#### Auto Update from Network

This function allows you to perform the update by accessing an Internet connection automatically to check if there is a new firmware version every time the unit is turned on.


When using this function, it is required to perform the following settings in advance.

#### Notes:

- Make sure that the LAN cable is connected to this unit.
- Make sure to perform the communication settings. (See pages 29 –30.)
- It may take time to access and download the update depending on the Internet connection and other factors.

#### Caution:

- Do not remove the LAN cable or unplug the AC power lead while downloading or updating software.

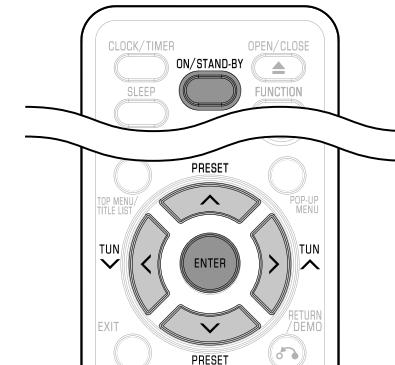

#### Setup

- 1 Press  $\wedge$  /  $\vee$  to select "Settings", then press  $>$  or ENTER.
- 2 Press  $\wedge$  /  $\vee$  to select "Software Update Settings", then press  $>$  or ENTER.
- 3 Press  $\wedge$  /  $\vee$  to select "Auto Update Setting", then press  $>$  or ENTER.
- 4 Press  $\wedge$  /  $\vee$  to select "Yes", then press ENTER.
  - After this, an Internet connection will be made automatically every time this unit is turned on.

When you insert or remove a USB memory device, be sure to turn the main power off and make sure that "Quick Start" is set to "No" (See page 28).

1 Insert the USB memory device into the USB terminal on this unit.

## Settings (continued)

### Update process

1 When this unit is turned on, the Internet connection starts automatically.

- “Accessing...” blinks on the screen.



- The current version of this unit software and the latest version of the update file on the network are displayed when latest version of firmware has been found.

To update this unit software with update file, select “Yes”, and go to step 2.

Latest version of firmware has been found.  
Firmware update is available.

Proceed with update?

Current Version : xxxxxxxxx

Latest Version : yyyyyyyyyy

If “Yes” will be selected, version update will start.

- If the latest firmware version has been already updated, nothing is displayed on the screen.

2 Press **ENTER** to start updating.

Downloading latest firmware...

Version : yyyyyyyyyy



3 When the software is successfully updated, a screen is displayed indicating that the update process is completed.

- If the update has failed, an error message appears.

Retry the update after checking if the broadband Internet connection (page 11) and communication settings (pages 29–30) are performed properly.

4 Press ON/STAND-BY to turn off the unit before using again.

### Manual Update from Network


This function allows you to perform the update operation by accessing an Internet connection manually to check if there is a new firmware version.

#### Notes:

- Make sure that the LAN cable is connected to this unit.
- Make sure to perform the communication settings. (See pages 29–30.)
- It may take time to access and download the update depending on the Internet connection and other factors.

#### Caution:

- Do not remove the LAN cable or unplug the AC power lead while downloading or updating software.

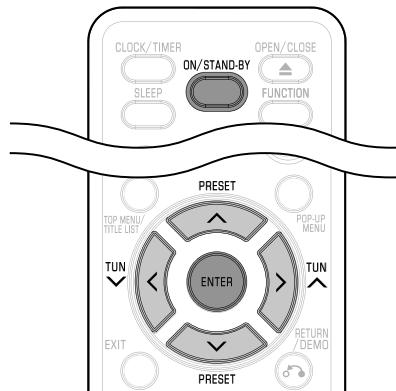

- 1 Press  $\wedge$  /  $\vee$  to select “Settings”, then press  $>$  or **ENTER**.
- 2 Press  $\wedge$  /  $\vee$  to select “Software Update Settings”, then press  $>$  or **ENTER**.
- 3 Press  $\wedge$  /  $\vee$  to select “Manual Update”, then press  $>$  or **ENTER**.
- 4 Press  $\wedge$  /  $\vee$  to select “Network”, then press **ENTER**.
- 5 During access to the network and checking the latest version of firmware, “Accessing” blinks.
- The current version of this unit software and the latest version of the update file on the network are displayed when latest version of firmware has been found.

To update this unit software with update file, select “Yes”, and go to step 6.

Latest version of firmware has been found.

Firmware update is available.

Proceed with update?

Current Version : xxxxxxxxx

Latest Version : yyyyyyyyyy

If “Yes” will be selected, version update will start.

 
- If the Internet connection has failed, an error message appears.

Retry the update after checking if the broadband Internet connection (page 11) and communication settings (pages 29–30) are performed properly.

6 Press **ENTER** to start updating.

Downloading latest firmware...

Version : yyyyyyyyyy

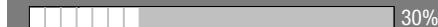

7 When the software is successfully updated, a screen is displayed indicating that the update process is completed.

- If the update has failed, an error message appears.

Retry the update after checking if the broadband Internet connection (page 11) and communication settings (pages 29–30) are performed properly.

8 Press ON/STAND-BY to turn off the unit.

### Manual Update from USB memory device

This function allows software updates by inserting a USB memory device with the update file into the USB1 terminal on this unit.

- When a software update is performed, the software update data must be written onto the USB memory device in advance using a PC.
- The USB memory device must be clear of all files except software update data to allow new software uploading.

To check for the availability of a software update, visit [www.sharp.de](http://www.sharp.de)

- When software update data is released, copy the data onto a USB memory device after downloading it to a PC.
- For methods such as downloading and copying to a USB memory device, carefully read the description shown on the website before performing the operation.

#### Notes:

- Only USB memory devices formatted with FAT 32/16 are compatible.


When formatting a USB memory device using a PC, perform the following settings.

Format File System: FAT32

Allocation Unit Size: Default Allocation Size

- Do not extract the firmware update file to any folders other than the root directory on the USB memory device. The firmware update file must be only one file directly in the root directory.

## Settings (continued)

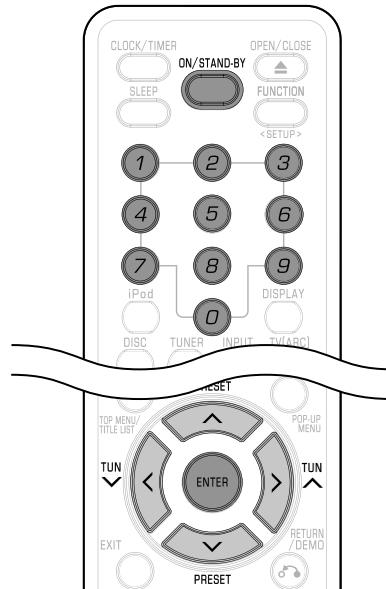

### Caution:

- Do not remove the USB memory device or unplug the AC power lead while the software is being updated.


When you insert or remove a USB memory device, be sure to turn the main power off and make sure that "Quick Start" is set to "No" (See page 28).

- 1 Insert the USB memory device with the update file into the USB1 terminal on this unit.

### Note:

- A USB memory device can be used only with USB1 terminal.


#### Rear

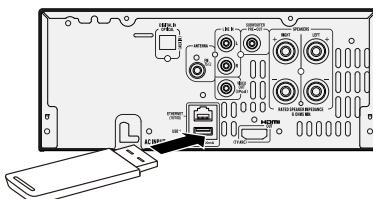

USB memory device

- 2 Press ON/STAND-BY to turn on the power.
- 3 Press  $\wedge$  /  $\vee$  to select "Settings", then press  $>$  or ENTER.
- 4 Press  $\wedge$  /  $\vee$  to select "Software Update Settings", then press  $>$  or ENTER.
- 5 Press  $\wedge$  /  $\vee$  to select "Manual Update", then press  $>$  or ENTER.
- 6 Press  $\wedge$  /  $\vee$  to select "USB Memory", then press ENTER.
- If you have set the PIN code, go to step 7, otherwise go to step 8.

- 7 Enter the 4-digit number using 0–9.

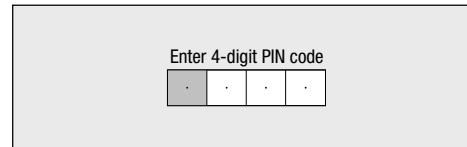


- 8 Press ENTER to start checking data in the USB memory device.



- 9 During the data checking, "Checking" blinks.



- The current version of this unit software and the version of the update file on the USB memory device are displayed. To update this unit software with update file, select "Yes", and press ENTER.

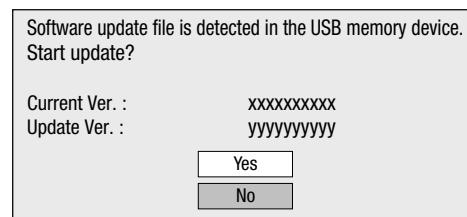

- If the USB memory device is not properly installed or the correct update file cannot be found on the USB memory device, an error message is displayed.  
Check the file on the USB memory device, and then reinsert the USB memory device correctly.

Software update file is not detected in the USB memory device. Confirm that you have transferred the file to the USB memory device and retry software update. Confirm that you have inserted the USB memory device into the correct device.

OK

There is more than one software file in the USB memory device. Confirm that only the software update file is in the USB memory device.

OK

- 10 Press ENTER to start updating.

- The screen becomes dark for a while until the update screen can be displayed. Please wait for the update screen to appear. Do not unplug the AC power lead.

The picture will temporarily go dark until the software update display appears. Wait several minutes and do not unplug the AC cord.

OK

Now updating  
\* Do not unplug AC cord.  
Update Version yyyyyyyyyy

30%

- 11 When the software is successfully updated, a screen is displayed indicating that the update process is completed.

- If the update has failed, check the file in the USB device and try Software Update again.

- 12 Press ON/STAND-BY to turn off the unit.

- Delete unneeded software update data using a PC after the software update process is completed.

- 13 Remove the USB memory device.

## Settings (continued)

### About Output of Audio Formats

Audio format	Maximum number of channels	HDMI	
		PCM	Bitstream
Dolby TrueHD	7.1ch (48kHz/96kHz)	7.1ch *1	7.1ch *2
	5.1ch (192kHz)	5.1ch *1	5.1ch *2
Dolby Digital PLUS	7.1ch (48kHz)	7.1ch	7.1ch *2
	5.1ch (192kHz)	5.1ch *1/*3	5.1ch *2
DTS-HD Master Audio	7.1ch (48kHz/96kHz)	7.1ch *1	7.1ch *2
	5.1ch (192kHz)	—	—
DTS-HD High Resolution Audio	7.1ch (48kHz/96kHz)	7.1ch *1	7.1ch *2
	5.1ch (192kHz)	7.1ch *1	—
LPCM	7.1ch (48kHz/96kHz)	5.1ch *1	—
	5.1ch (192kHz)	—	—

\*1 When “Secondary Audio” is set to “On”, the audio is output as 48 kHz.


\*2 When “Secondary Audio” is set to “On”, the audio is output as PCM.

\*3 When 5.1ch (192kHz), the audio output is downsampled to 96kHz.

\*3 When 2ch, the audio is output as 192kHz.

### Playing back video on demand streaming content

In this unit, you can enjoy a variety of video on demand streaming content by connecting to the Internet.

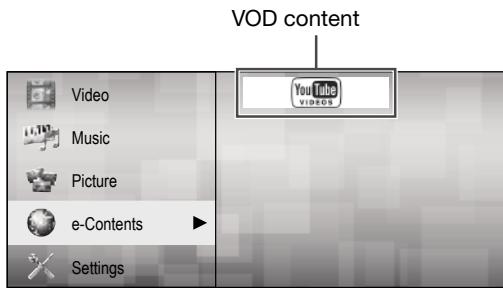

#### VOD content

##### YouTube

- Playing back YouTube video content streaming

##### Notes:

- To enjoy this function, make a broadband Internet connection to both your PC and this unit (See page 11), and then set communication settings (See pages 29–30), then perform the following operation.
- To use this function, we recommend setting “Auto Power Off” to “No”. (See page 12.)
- Before using this function, please read “Network Service Disclaimer” (page 45).

#### ■ Playing back YouTube content

This unit can play back YouTube video content streaming through the Internet.

- For more information about YouTube, see the YouTube website using a PC (<http://www.youtube.com>).

##### Notes:

- Some video content may not be played back with this unit.
- The actual functions which can be operated may differ from the descriptions shown.
- It may take time to access and download the update depending on the Internet connection and other factors.

#### Playing back

1 Press  $\wedge$  /  $\vee$  to select “e-Contents”, then press  $>$  or **ENTER**.

2 Press  $\wedge$  /  $\vee$  to select “YouTube”, then press  $>$  or **ENTER**.

3 The YouTube screen is displayed.

4 Follow the instruction on the screen.

5 To exit the screen, press **EXIT**.

#### Operational buttons for playback control

Item	
	Pause the video content. To resume playing paused content, press  on the playback controls.
	Skip to the previous video content on the video list.
	Skip to the next video content on the video list.
	Play back all the video content on the video list repeatedly.
	Switch the video quality to high resolution.
	Toggle the playback screen between normal and full screen.
Progress bar	Determine the point where you want to play back a video content by pressing $\langle\rangle$ on the progress bar.

##### Notes:

- To turn the playback controls on during full screen display, press **POP-UP MENU**.
- To return to the main page screen, press **TOP MENU/TITLE LIST**.

### Listening to the iPod, iPhone or iPad

#### iPod

##### Made for:

- iPod touch (4th generation)
- iPod touch (3rd generation)
- iPod touch (2nd generation)
- iPod touch (1st generation)
- iPod classic
- iPod nano (6th generation)
- iPod nano (5th generation)
- iPod nano (4th generation)
- iPod nano (3rd generation)
- iPod nano (2nd generation)
- iPhone 4
- iPhone 3GS
- iPhone 3G
- iPhone
- iPad 2
- iPad

##### Caution:

Please update your iPod, iPhone and iPad unit to the latest software version before using it. Please visit Apple’s homepage to download the latest version for your iPod, iPhone and iPad.

##### Notes:

- Charging terminal for iPod, iPhone and iPad:

Condition	DOCK	USB 2
USB-2 (iPod) function	YES	YES (without iPod or iPhone docking)
Other function (iPod/DISC/Tuner/Audio In/Line In/Digital In/TV ARC)	YES	YES (without iPod or iPhone docking)
Stand-by	YES	NO

● The message “This accessory is not made to work with iPhone” or similar, may appear on the iPhone screen when:

- battery is low.

- the iPhone is not properly docked (eg. slanting).


If this occurs, remove and re-dock the iPhone.

You may also experience brief audio interference during incoming calls.


## Listening to the iPod, iPhone or iPad (continued)

### ■ iPod, iPhone and iPad connection (USB 2 only)


- 1 Insert the connector to the iPod, iPhone or iPad.

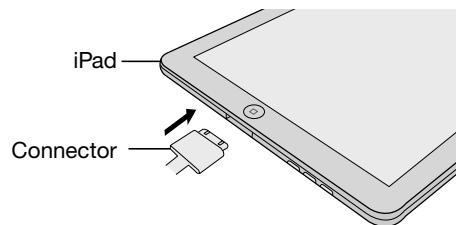

- 2 Place the iPad to the stand for iPad.

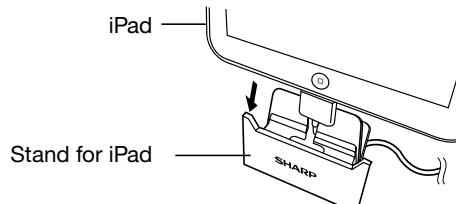

- 3 Connect the iPod, iPhone or iPad to the unit via USB connector.

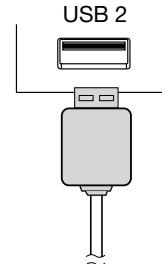

#### Caution:

- At USB-2 (iPod) mode, once the iPod or iPhone is docked onto the unit, the iPod or iPhone will automatically start charging. ‘iPod Dock Charge Mode’ will be displayed. In order to use USB-2 (iPod) function, the iPod or iPhone must be removed from the docking station.
- This product is made for iPod, iPhone and iPad. To prevent random interference when iPod, iPhone or iPad is connected, the headphone output is disabled, and “HP INVALID” will be displayed. You may also experience brief audio interference during incoming calls.
- USB 2 terminal does not support VIDEO out.
- iPod, iPhone and iPad can be used on USB 2 terminal.

### ■ iPod, iPhone or iPad playback (USB 2)

- 1 Press the ON/STAND-BY button to turn the power on.
- 2 Press the iPod <TV OUT> button repeatedly on the remote control or SELECTOR button repeatedly on the main unit to select USB-2 (iPod) function.

- 3 Connect iPod, iPhone or iPad to the unit. USB - 2 (iPod) will appear.

*USB - 2 (iPod)*

- 4 Press the ▶/II on the main unit or ▶ button on the remote control to start playback.

### ■ iPhone playback

- Sound will only switch from iPhone to the main unit after authentication process is completed in approximately 10 seconds.
- Incoming calls will pause the playback.
- Once the calls are answered, the conversation can only be heard through the built-in iPhone speaker. Turn on the iPhone speaker or undock the iPhone to start conversation.

### ■ iPod and iPhone connection (Dock only)

#### Note:

- Docking station is not recommended for iPad connection.

#### Adaptor for iPod and iPhone connection


#### Notes:

- Please use the adaptor supplied with your iPod or iPhone unit.
- You can use an audio cable to connect your iPod to the AUDIO IN socket if:
  1. your iPod adaptor does not fit into the iPod dock on the main unit.
  2. you have an iPod that does not have an iPod adaptor.
  3. you have an iPod that does not have an iPod 30 pin connector.


Adaptor No.	iPhone Description	Capacity
12	iPhone	4GB & 8GB & 16GB
15	iPhone 3G	8GB & 16GB
15	iPhone 3GS	16GB & 32GB
19	iPhone 4	16GB & 32GB

### ■ To insert adaptor for iPod or iPhone

Open the docking station for iPod and iPhone by pulling up.

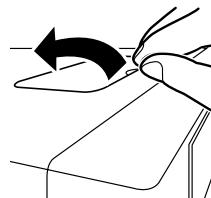

Insert the adaptor for iPod or iPhone into unit and connect your iPod or iPhone.

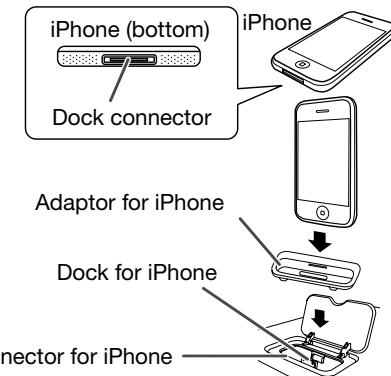


#### Caution:

Unplug all accessories from the iPod or iPhone before inserting it into the dock.


### ■ To remove adaptor for iPod or iPhone

 Insert the tip of a screwdriver (“-” type, small) into the adaptor hole as shown and lift upward to remove.

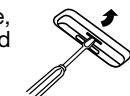

### ■ iPod or iPhone playback (Dock only)

- 1 Press the ON/STAND-BY button to turn the power on.
- 2 Press the iPod <TV OUT> button repeatedly on the remote control or SELECTOR button repeatedly on the main unit to select iPod function.
- 3 Insert iPod or iPhone unit into the dock of main unit. “iPod” will appear.
- 4 Press the ▶ (iPod or iPhone ▶/II) button to start playback.

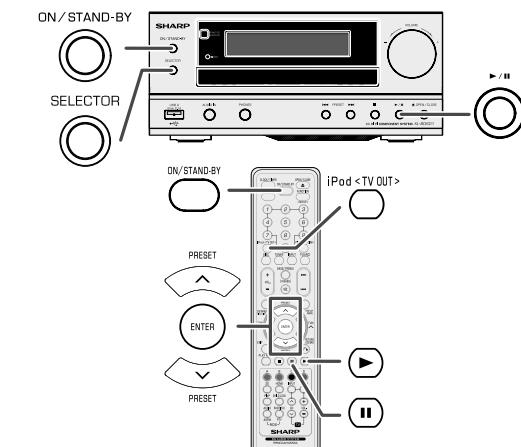

## Listening to the iPod, iPhone or iPad (continued)

### ■ To disconnect iPod, iPhone or iPad

Simply remove the iPod or iPhone from the docking station or iPad connector from USB 2 terminal. It is safe to do so even during playback.

### ■ Watching videos on a TV connected to iPod or iPhone

- 1 Press and hold iPod <TV OUT> button for more than 2 seconds until "TV OUT ON" appear on display.
- 2 Press the ENTER button to start playback.

#### Notes:

- If the TV Out setting is already turned on at video menu, the video is automatically displayed on the TV screen when ENTER key is pressed.
- TV out display is not support through USB terminal. (iPad)
- To return to watching video on iPod or iPhone screen, press the MENU button to enter video menu. Then press and hold iPod <TV OUT> button for more than 2 seconds until "TV OUT OFF" appears.
- During iPod or iPhone video playback, press and hold iPod <TV OUT> button will not toggle video out display between iPod and TV.

#### Caution:

- Unplug all accessories for the iPod or iPhone before inserting it into the docking station.

### ■ Navigating the iPod, iPhone or iPad menus

- 1 Press the TOP MENU/TITLE LIST button to view the menu on iPod, iPhone or iPad unit. Press it again to go back to previous menu.
- 2 Use the PRESET (▽ or △) button to select an item on the menu and then press ENTER button.

#### Note:

When navigating the iPod, iPhone or iPad menu with remote control, do not operate any of the buttons on the iPod or iPhone unit. The volume level is adjusted by pressing the VOL (+ or -) button on the remote control or VOLUME (+ or -) knob on the main unit. Adjusting the volume on the iPod, iPhone or iPad units give no effect.

#### iPod, iPhone and iPad operations:

The operations described below depend on the generation iPod, iPhone and iPad you are using.

#### System on operation:

When the main unit is powered on, the iPod, iPhone or iPad units will automatically power on when docked or connected in the unit.


#### System off (stand-by operation):

When the main unit is turned to stand-by mode, the docked iPod, iPhone or connected iPad unit will automatically turn to stand-by mode.

### ■ Various iPod, iPhone and iPad functions

Function	Main unit	Remote control	Operation
	Dock/ USB 2	Dock/USB 2	
Play			Press in the pause mode.
Pause			Press in the playback mode.
Stop			Press to stop playback
Track up/ down			Press in the playback or pause mode. If you press the button in the pause mode, press the  button to start the desired track.
Fast forward/ reverse			Press and hold down in the playback mode. Release the button to resume playback.
Display Toggle	—		Press for more than 2 seconds to toggle the video out display between iPod or TV.
Repeat	—		Press to toggle repeat mode.
Shuffle	—		Press and hold to toggle shuffle mode.
Menu	—		Press to view the iPod menu during iPod function.
Enter	—		Press to confirm the selection.
Cursor Up/Down	—		Press to select the iPod menu.

## Listening to the radio

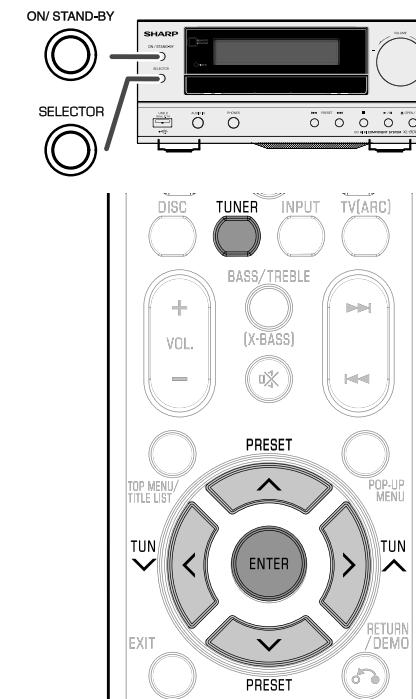

### ■ Tuning

- 1 Press the ON/STAND-BY button to turn the power on.
- 2 Press the TUNER button repeatedly to select FM Stereo or FM Mono.
- 3 Press the TUNING (▽ or △) button on the remote control to tune in to the desired station.

#### ● Manual tuning:

Press the TUNING (▽ or △) button repeatedly to tune in to the desired station.

#### ● Auto tuning:

When the TUNING (▽ or △) button is pressed for more than 0.5 seconds, scanning will start automatically and the tuner will stop at the first receivable broadcast station.

#### Notes:

- When radio interference occurs, auto scan tuning may stop automatically at that point.
- Auto scan tuning will skip weak signal stations.
- To stop the auto tuning, press the TUNING (▽ or △) button again.
- When an RDS (Radio Data System) station is tuned in, the frequency will be displayed first, and then the RDS indicator will light up. Finally, the station name will appear.
- Full auto tuning can be achieved for RDS stations "ASPM", see page 38.

## Listening to the radio (continued)

### To receive an FM stereo transmission:

- Press the TUNER button to select stereo mode and "ST" indicator will be displayed. "►●" and "●" will appear when an FM broadcast is in stereo.
- If the FM reception is weak, press the TUNER button to extinguish the "ST" indicator. The reception changes to monaural, and the sound becomes clearer.

### ■ Memorising a station

You can store 40 FM stations in memory and recall them at the push of a button. (Preset tuning)

- Perform steps 1 - 3 in "Tuning".
- Press the ENTER button.



- Within 30 seconds, press the PRESET (▼ or ▲) button to select the preset channel number. Store the stations in memory, in order, starting with preset channel 1.
- Within 30 seconds, press the ENTER button to store that station in memory. If the "ENTER" and preset number indicators disappear before the station is memorised, repeat the operation from step 2.
- Repeat steps 1 - 4 to set other stations, or to change a preset station. When a new station is stored in the memory, the station previously memorised for that preset channel number will be erased.

#### Note:

The backup function protects the memorised stations for a few hours should there be a power failure or the AC power lead become disconnected.

### ■ To recall a memorised station

- Press the PRESET (▼ or ▲) button to select the desired station.

### ■ To scan the preset stations

The stations saved in the memory can be scanned automatically. (Preset memory scan)

- Press the PRESET (▼ or ▲) button for more than 0.5 seconds. The preset number will flash and the programmed stations will be tuned in sequentially, for 5 seconds each.
- Press the PRESET (▼ or ▲) button again when the desired station is located.

### ■ To erase entire preset memory

- Press the ON/STAND-BY button to enter the stand-by mode.
- Whilst pressing down the ↪ button, press the ON/STAND-BY button until "Tuner Clear" appears.



## Using the Radio Data System (RDS)

RDS is a broadcasting service which a growing number of FM stations provide. These FM stations send additional signals along with their regular programme signals. They send their station names, and information about the type of programme such as sport, music, etc.

When tuned to an RDS station, "RDS" and the station name will be displayed.

"TP" (Traffic Programme) will appear on the display when the received broadcast carries traffic information, and "TA" (Traffic Announcement) will appear whilst a traffic information is on air.



"PTYI" (Dynamic PTY Indicator) will appear whilst the Dynamic PTY station is received.




You can control the RDS by using the buttons on the remote control only.

### ■ Information provided by RDS

Each time the DISPLAY <DIM> button is pressed, the display will switch as follows:

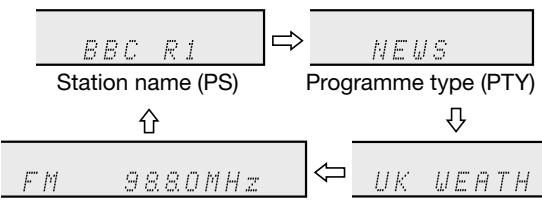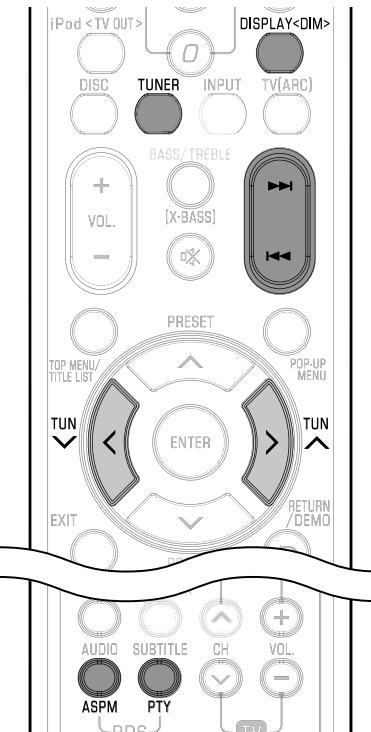

 Frequency  
When tuning in to a station other than an RDS station or to an RDS station which sends weak signal, the display will change in the following order:

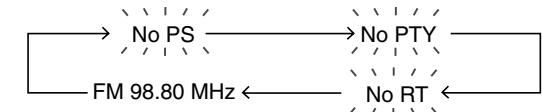

# Using the Radio Data System (RDS) (continued)

## ■ Using the Auto Station Programme Memory (ASPM)

 
Whilst in the ASPM operation mode, the tuner will automatically search for new RDS stations. Up to 40 stations can be stored.

If you have already stored some stations in memory, the number of new stations you can store will be less.

1 Press the TUNER button on the remote control or SELECTOR button repeatedly on the main unit to select TUNER function.

2 Press and hold down the RDS ASPM button on the remote control.


1 After "ASPM" has flashed for about 4 seconds, scanning will start (87.50 - 108.00 MHz).

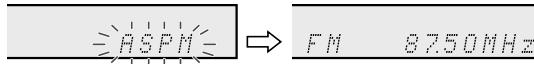

2 When an RDS station is found, "RDS" will appear for a short time and the station will be stored in memory.



 3 After scanning, the number of stations stored in memory will be displayed for 4 seconds, and then "END" will appear for 4 seconds.

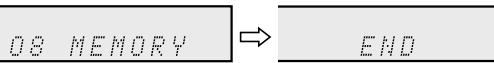

### To stop the ASPM operation before it is complete:

Press the RDS ASPM button whilst it is scanning for stations.

The stations which are already stored in memory will be kept there.

#### Notes:

- If the same station is broadcasting on different frequencies, the strongest frequency will be stored in memory.
- Any station which has the same frequency as the one stored in memory will not be stored.
- If 40 stations have already been stored in memory, the scan will be aborted. If you want to redo the ASPM operation, erase the preset memory.
- If no station have been stored in memory, "END" will appear for about 4 seconds.
- If the RDS signals are very weak, station names may not be stored in memory.
- The same station name can be stored in different channels.
- In a certain area or during certain time periods, the station names may temporarily be different.

## ■ Notes: for RDS operation

### If any of the following events occur, it does not mean that the unit is faulty:

- "PS", "No PS" and a station name appear alternately, and the unit does not operate properly.
- If a particular station is not broadcasting properly or a station is conducting tests, the RDS reception function may not work properly.
- When you receive an RDS station whose signal is too weak, information like the station name may not be displayed.

- "No PS", "No PTY" or "No RT" will flash for about 5 seconds, and then the frequency will be displayed.

#### Notes: for radio text:

- The first 14 characters of the radio text will appear for 4 seconds and then they will scroll across the display.
- If you tune in to an RDS station which is not broadcasting any radio text, "No RT" will be displayed when you switch to the radio text position.
- Whilst radio text data is received or when the text contents change, "RT" will be displayed.

(This does not mean that you can listen to the traffic information at that time.)

When the traffic information is broadcast, "TA" will appear.

### Descriptions of the PTY (Programme Type) codes, TP (Traffic Programme) and TA (Traffic Announcement)

You can search for and receive the following PTY, TP and TA signals.


<b>NEWS</b>	Short accounts of facts, events and publicly expressed views, reportage and actuality.
<b>AFFAIRS</b>	Topical programme expanding or enlarging upon the news, generally in different presentation style or concept, including debate, or analysis.
<b>INFO</b>	Programmes whose purpose is to impart advice in the widest sense.
<b>SPORT</b>	Programme concerned with any aspect of sport.
<b>EDUCATE</b>	Programme intended primarily to educate, of which the formal element is fundamental.
<b>DRAMA</b>	All radio plays and serials.
<b>CULTURE</b>	Programmes concerned with any aspect of national or regional culture, including language, theatre, etc.
<b>SCIENCE</b>	Programmes about the natural sciences and technology.
<b>VARIED</b>	Used for mainly speech-based programmes usually of light-entertainment nature, not covered by other categories. Examples include: quizzes, panel games, personality interviews.
<b>POP M</b>	Commercial music, which would generally be considered to be of current popular appeal, often featuring in current or recent record sales charts.
<b>ROCK M</b>	Contemporary modern music, usually written and performed by young musicians.
<b>EASY M</b>	Current contemporary music considered to be "easy-listening", as opposed to Pop, Rock or Classical, or one of the specialised music styles, Jazz, Folk or Country. Music in this category is often but not always, vocal, and usually of short duration.
<b>LIGHT M</b>	Classical music for general, rather than specialist appreciation. Examples of music in this category are instrumental music, and vocal or choral works.
<b>CLASSICS</b>	Performances of major orchestral works, symphonies, chamber music, etc., and including Grand Opera.
<b>OTHER M</b>	Musical styles not fitting into any of the other categories. Particularly used for specialist music of which Rhythm & Blues and Reggae are examples.
<b>WEATHER</b>	Weather reports and forecasts and meteorological information.
<b>FINANCE</b>	Stock Market reports, commerce, trading, etc.

#### If you select the traffic programme:

If you select the traffic programme (TP) in step 3, "TP" will appear.

<b>CHILDREN</b>	For programmes targeted at a young audience, primarily for entertainment and interest, rather than where the objective is to educate.
<b>SOCIAL</b>	Programmes about people and things that influence them individually or in groups. Includes: sociology, history, geography, psychology and society.
<b>RELIGION</b>	Any aspect of beliefs and faiths, involving a God or Gods, the nature of existence and ethics.
<b>PHONE IN</b>	Involving members of the public expressing their views either by phone or at a public forum.
<b>TRAVEL</b>	Features and programmes concerned with travel to near and far destinations, package tours and travel ideas and opportunities. Not for use for announcements about problems, delays, or roadworks affecting immediate travel where TP/TA should be used.
<b>LEISURE</b>	Programmes concerned with recreational activities in which the listener might participate. Examples include, Gardening, Fishing, Antique collecting, Cooking, Food & Wine, etc.
<b>JAZZ</b>	Polyphonic, syncopated music characterised by improvisation.
<b>COUNTRY</b>	Songs which originate from, or continue the musical tradition of the American Southern States. Characterised by a straightforward melody and narrative story line.
<b>NATION M</b>	Current Popular Music of the Nation or Region in that country's language, as opposed to International "Pop" which is usually US or UK inspired and in English.
<b>OLDIES</b>	Music from the so-called "golden age" of popular music.
<b>FOLK M</b>	Music which has its roots in the musical culture of a particular nation, usually played on acoustic instruments. The narrative or story may be based on historical events or people.
<b>DOCUMENT</b>	Programme concerned with factual matters, presented in an investigative style.
<b>TEST</b>	Broadcast when testing emergency broadcast equipment or receivers.
<b>ALARM!</b>	Emergency announcement made under exceptional circumstances to give warning of events causing danger of a general nature.
<b>TP</b>	Broadcasts which carry traffic announcements.
<b>TA</b>	Traffic announcements are being broadcast.

## Timer and sleep operation (Remote control only)

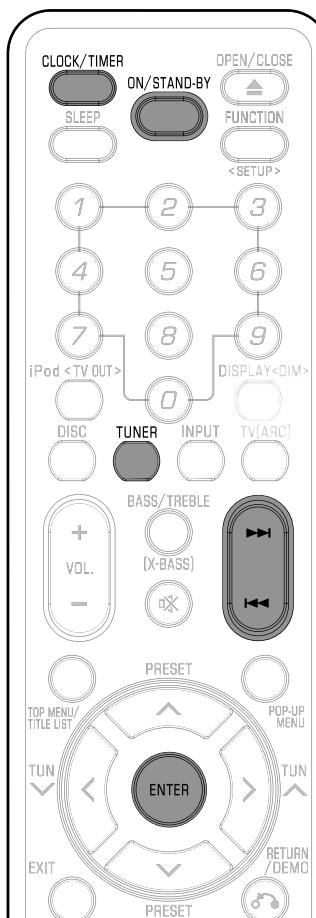

### Timer playback:

The unit turns on and plays the desired source (DISC, TUNER, USB-2 (iPod), AUDIO IN, LINE IN, DIGITAL IN) at a preset time.

**This unit has 2 types of timer: ONCETIMER and DAILYTIMER.**

#### Once timer:

Once timer play works for one time only at a preset time.

#### ("◎" indicator).

#### Daily timer:

Daily timer play works at the same preset time every day that we set. For example, set the timer as a wake-up call every morning.

 
#### ("DAILY" indicator).

#### Using the once timer and daily timer in combination:

For example, use the once timer to listen a radio programme, and use the daily timer to wake up.

- Set the daily timer (pages 39–40).

- Set the once timer (pages 39–40).

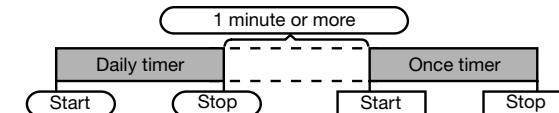


### ■ Timer playback

#### Before setting timer:

- Check that the clock is set to the correct time (refer to page 13). If it is not set, you cannot use the timer function.
- For timer playback: Plug in USB or load discs or dock iPod to be played.

- Press the ON/STAND-BY button to turn the power on.
- Press and hold the CLOCK/TIMER button.
- Within 10 seconds, press the **◀▶** or **◀▶** button to select "Once" or "Daily", and press the ENTER button.
- Within 10 seconds, press the **◀▶** or **◀▶** button to select "Timer Set", and press the ENTER button.
- To select the timer playback source (DISC, TUNER, USB-2 (iPod), iPod, DIGITAL IN, AUDIO IN, LINE IN, TV ARC), press the **◀▶** or **◀▶** button. Press the ENTER button. When you select the tuner, select a station by pressing the **◀▶** or **◀▶** button, and then press the ENTER button. If a station has not been programmed, "No Preset" will be displayed and timer setting will be cancelled.
- To adjust the day, press the **◀▶** or **◀▶** button and then press the ENTER button.
- Press the ENTER button to adjust the hour. Press the **◀▶** or **◀▶** button and then press the ENTER button.
- To adjust the minutes, press the **◀▶** or **◀▶** button and then press the ENTER button.
- Set the time to finish as in steps 7 and 8 above.
- Adjust the volume using the VOLUME control, and then press the ENTER button. Do not turn the volume up too high.
- Press the ON/STAND-BY button to enter the power stand-by mode. The "TIMER" indicator lights up and the unit is ready for timer playback.

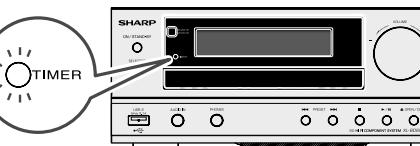

- When the preset time is reached, playback will start. The volume will increase gradually until it reaches the preset volume. The timer indicator will blink during timer playback.

## Timer and sleep operation (Remote control only) (continued)

13 When the timer end time is reached, the system will enter the power stand-by mode automatically.

### Once timer:

The timer will be cancelled.

### Daily timer:

The timer operates at the same time every selected day. It will continue until the daily timer setting is cancelled. Cancel the daily timer when it is not in use.

### Notes:

● When performing timer playback using another unit connected to the USB 2, AUDIO IN, LINE IN or DIGITAL IN socket select "USB-2 (iPod)" or "AUDIO IN" or "LINE IN" or "DIGITAL IN" in step 5.

● This unit will turn on or enter the power stand-by mode automatically. However, the connected unit will not turn on or off. To stop the timer playback, follow step "Cancelling the timer setting" of this page.

### Checking the timer setting:

1 Turn the power on and press and hold down the CLOCK/TIMER button.

2 Within 10 seconds, press the  $\blacktriangleleft$  or  $\triangleright$  button to select "Once" or "Daily", and press the ENTER button.

3 Within 10 seconds, press the  $\blacktriangleleft$  or  $\triangleright$  button to select "Timer Call", and press the ENTER button.

### Cancelling the timer setting:

1 Turn the power on and press and hold down the CLOCK/TIMER button.

2 Within 10 seconds, press the  $\blacktriangleleft$  or  $\triangleright$  button to select "Once" or "Daily", and press the ENTER button.

3 Within 10 seconds, press the  $\blacktriangleleft$  or  $\triangleright$  button to select "Timer Off", and press the ENTER button. Timer will be cancelled (the setting will not be cancelled).

### Reusing the memorised timer setting:

The timer setting will be memorised once it is entered. To reuse the same setting, perform the following operations.

1 Turn the power on and press and hold down the CLOCK/TIMER button.

2 Within 10 seconds, press the  $\blacktriangleleft$  or  $\triangleright$  button to select "Once" or "Daily", and press the ENTER button.

3 Within 10 seconds, press the  $\blacktriangleleft$  or  $\triangleright$  button to select "Timer On", and press the ENTER button.

4 Press the ON/STAND-BY button to enter the power stand-by mode.

### Sleep operation

The radio, disc, iPod, USB, Audio In, Line In, TV (ARC) and Digital In can all be turned off automatically.

- 1 Play back the desired sound source.
- 2 Press the SLEEP button.
- 3 Within 5 seconds, press the Numeric button to set the time. (1 minute ~ 99 minutes)
- 4 "SLEEP" will appear.
- 5 The unit will enter the power stand-by mode automatically after the preset time has elapsed. The volume will be turned down 1 minute before the sleep operation finishes.

### To confirm the remaining sleep time:

- 1 Whilst "SLEEP" is indicated, press the SLEEP button.

### To cancel the sleep operation:

Press the ON/STAND-BY button whilst "SLEEP" is indicated. To cancel the sleep operation without setting the unit to the stand-by mode, proceed as follows.


- 1 Whilst "SLEEP" is indicated, press the SLEEP button.
- 2 Within 5 seconds, press the "0" button twice until "SLEEP 00" appears.

### To use timer and sleep operation together

#### Sleep and timer playback:


For example, you can fall asleep listening to the radio and wake up to iPod in the next morning.

- 1 Set the sleep time (see above, steps 1 - 5).
- 2 Whilst the sleep timer is set, set the timer playback (steps 2 - 9, page 39).

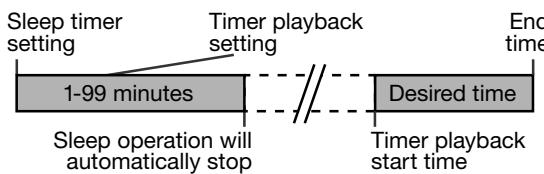

## Enhancing your system

The connection lead is not included. Purchase a commercially available lead as shown below.

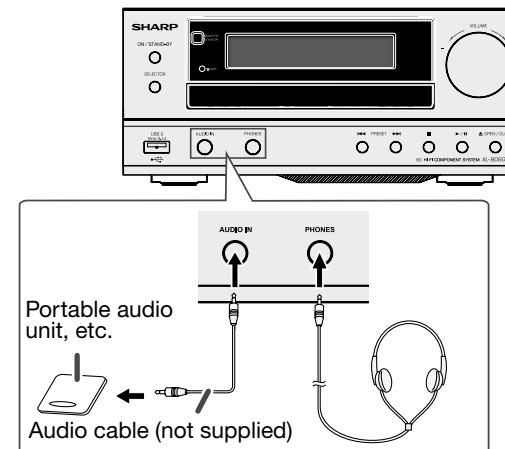

### Listening to the playback sounds of portable audio unit, etc.

- 1 Use a connection lead to connect the portable audio unit etc. to the AUDIO IN socket. When using video equipment, connect the audio output to this unit and the video output to a television.
- 2 Press the ON/STAND-BY button to turn the power on.
- 3 Press the INPUT button on the remote control or SELECTOR button repeatedly on main unit to select AUDIO IN function.
- 4 Play the connected equipment. If volume level of the connected device is too high, sound distortion may occur. Should this happen, lower the volume of the connected device. If volume level is too low, increase the volume of the connected device.

### Note:

To prevent noise interference, place the unit away from the television.

### Headphones

- Do not turn the volume on to full at switch on and listen to music at moderate levels. Excessive sound pressure from earphones and headphones can cause hearing loss.
- Before plugging in or unplugging the headphone, reduce the volume.
- Be sure your headphone has a 3.5 mm (1/8") diameter plug and impedance between 16 and 50 ohms. The recommended impedance is 32 ohms.
- Plugging in the headphone disconnects the speakers automatically. Adjust the volume using the VOLUME control.

## Troubleshooting chart

Many potential problems can be resolved by the owner without calling a service technician.

If something is wrong with this product, check the following before calling your authorised SHARP dealer or service centre.

### ■ Tuner

Symptom	Possible cause and solutions
● The radio makes unusual noises continuously.	● Is the unit placed near the TV or computer? ● Is the FM aerial placed properly? Move the aerial away from the AC power lead if it is located nearby.

### ■ USB

Symptom	Possible cause
● Device cannot be detected.	● Is there any MP3/WMA file available? ● Is the device properly connected? ● Is it an MTP device? ● Does the device contain AAC file only?
● Playback does not start.	● Is it a false MP3 file?
● Wrong time display. ● Wrong file name display.	● Is Variable Bitrate file being played back? ● Is the File Name written in Chinese or Japanese characters?

### ■ iPod, iPhone or iPad

Symptom	Possible cause and solutions
● No sound is produced. ● No image appears on the TV/monitor.	● The iPod, iPhone or iPad is not playing. ● The iPod, iPhone or iPad is not properly connected to the unit. ● Is the AC power lead of the unit plugged in? ● The video cable is not properly connected. ● The TV/monitor's input selection is not properly set. ● The iPod TV out feature has not been set to output video. ● USB terminal do not support video.
● iPod, iPhone or iPad will not charge.	● The iPod, iPhone or iPad is not making full contact with the connector. ● Using iPod (3rd generation). ● The iPod or iPhone is not supported. Refer to page 34 for compatible models.
● "This accessory is not made to work with iPhone" or "This accessory is not supported by iPhone" appears on iPhone screen.	● The iPhone battery is low. Please charge the iPhone. ● iPhone is not properly docked.

### ■ Power

Problem	Possible causes and solutions
The power cannot be turned on.	● Is the power cord firmly plugged into the AC socket? (Page 9) ● Perform a reset. (Page 42)

### ■ Basic Operation

Problem	Possible causes and solutions
The remote control does not work.	● Use the remote control within its operating range. (Page 12) ● Replace the batteries. (Page 12)
Cannot operate the Unit.	● Are you operating the Unit within the specified operating temperature range? (Page 3)

### ■ Playback

Problem	Possible causes and solutions
The Unit cannot play a disc.	● Take out the disc and clean it. (Page 6) ● Make sure that the disc is loaded properly (aligned in disc tray and label-side up). (Page 18) ● Make sure that region code on the disc matches that of this Unit. (Page 3) ● Allow any condensation in or near the Unit to dry. (Page 6) ● Check that the disc is recorded in the compatible TV system (PAL or NTSC). ● The Unit cannot play back video which was not recorded normally. (Page 3) ● Proper playback may be impossible due to the state of the disc recording, a scratched, warped or dirty disc, the state of the pick-up, or compatibility issues between this Unit and the disc being used. (Pages 3-4, 6) ● When the recorded time of a disc is unusually short, playback may not be possible. ● BD-RE/R discs recorded in a format other than BDMV/BDAV cannot be played back. (Page 3)
The disc is automatically ejected after closing the disc tray.	● Make sure that the disc is loaded properly (aligned in disc tray and label-side up). (Page 18) ● Take out the disc and clean it. (Page 6) ● Make sure that the disc is playable. (Page 3)
Video stops.	● Has the Unit been subjected to shock or impact? Are you using it in an unstable location? The Unit will stop if it senses shock or vibration.
The Unit makes a snapping sound when starting playback or loading a disc.	● The unit may sometimes make a snapping sound when starting playback if it has not been operated in a while. These sounds are not malfunctions of the unit but are normal operating conditions.

### ■ Picture

Problem	Possible causes and solutions
No picture.	● Make sure that the cable is connected correctly. (Page 11) ● Make sure that the connected TV or the AV receiver is set to the correct input. (Page 9) ● Take out the disc and clean it. (Page 6) ● Make sure that region code on the disc matches that of this Unit. (Page 3) ● There is no picture from the HDMI output. – Are the settings performed correctly? Please check the settings. (Page 28)
Screen freezes and operation buttons do not work.	● Turn off the power and turn on the power again. ● If the power is not turned off, perform a reset. (Page 42) ● Is the disc damaged or dirty? Check the condition of the disc. (Page 6)
Square noise (mosaic) appears on the screen.	● Blocks in images may be visible in scenes with rapid movement due to the characteristics of digital image compression technology.
Audio is not output, or images are not played back properly.	● The audio may not be output or the images may not be played back properly for some discs in which copyright-protected contents are recorded. (Page 3)
3D images cannot be output to a TV.	● Is an HDMI cable used? ● Are a 3D compatible TV and 3D glasses used? ● Is a proper connection made between the HDMI OUT terminal of the unit and the HDMI input terminal of the 3D compatible TV? (Page 9) ● Are all devices (amplifier, AV receiver, etc.) between the TV and the unit connected by HDMI and 3D compatible? (Pages 9-11) ● Is the 3D setting on this unit correct? (Pages 10, 16) ● Is the 3D setting on the TV correct? ● Is a 3D compatible BD disc being played back?
Noise appears on the screen.	● When you watch TV broadcasts with the power of this unit turned on, noise may appear on the TV screen. In such cases, turn off the power to this unit or keep this unit away from the TV.

## Troubleshooting chart (continued)

### ■ Sound

Problem	Possible causes and solutions
No sound, or sound is distorted.	<ul style="list-style-type: none"> <li>● If the volume of the TV or amplifier (XL-BD601PH) is set to minimum, turn the volume up.</li> <li>● Check that the audio cable is connected correctly. (Page 9)</li> <li>● Check that the cable plugs are clean.</li> <li>● Take out the disc and clean it. (Page 6)</li> <li>● Audio may not be output depending on the audio recording status, such as when audio other than an audio signal or non-standard audio is recorded for the audio content of the disc. (Page 3)</li> </ul>
Audio is not output, or images are not played back properly.	<ul style="list-style-type: none"> <li>● The audio may not be output or the images may not be played back properly for some discs in which copyright-protected contents are recorded.</li> </ul>

### ■ Network

Problem	Possible causes and solutions
Cannot connect to the Internet.	<p><b>When the wired Internet connection is made</b></p> <ul style="list-style-type: none"> <li>● Is the LAN cable connected properly? (Page 11)</li> <li>● Is the wrong cable such as a modular cable used? Connect a LAN cable to the ETHERNET terminal. (Page 11)</li> <li>● Is the power for the connected equipment, such as a broadband router or modem turned on?</li> <li>● Is the broadband router and/or modem properly connected?</li> <li>● Is the proper value(s) set in the network setting? Check "Communication Setup". (Pages 29–30)</li> </ul>
Cannot download BD-LIVE contents.	<ul style="list-style-type: none"> <li>● Is the LAN cable connected properly? (Page 11)</li> <li>● Is the USB memory device properly connected? Check that the USB memory device is connected to the USB1 terminal of this Unit. (Page 9)</li> <li>● Check if the BD disc supports BD-LIVE.</li> <li>● Check the setting for "BD Internet Access". (Page 28)</li> </ul>

### ■ Other

Problem	Possible causes and solutions
The TV operates incorrectly.	<ul style="list-style-type: none"> <li>● Some TVs with wireless remote control capability may operate incorrectly when using the remote control of this Unit. Use such TVs away from this Unit.</li> </ul>
The Unit heats up during use.	<ul style="list-style-type: none"> <li>● When using this Unit, the console cabinet may heat up depending on the usage environment. This is not a malfunction.</li> </ul>

## Maintenance

### ■ Cleaning the cabinet

Periodically wipe the cabinet with a soft cloth and a diluted soap solution, then with a dry cloth.

#### Caution:

- Do not use chemicals for cleaning (petrol, paint thinner, etc.). It may damage the cabinet.
- Do not apply oil to the inside of the unit. It may cause malfunctions.

### ■ Condensation

Sudden temperature changes, storage or operation in an extremely humid environment may cause condensation inside the cabinet (BD pickup, etc.) or on the transmitter on the remote control. Condensation can cause the unit to malfunction. If this happens, leave the power on with no disc in the unit until normal playback is possible (about 1 hour). Wipe off any condensation on the transmitter with a soft cloth before operating the unit.

### ■ If problem occurs

When this product is subjected to strong external interference (mechanical shock, excessive static electricity, abnormal supply voltage due to lightning, etc.) or if it is operated incorrectly, it may malfunction.

#### If such a problem occurs, do the following:

- 1 Set the unit to the stand-by mode and turn the power on again.
- 2 If the unit is not restored in the previous operation, unplug and plug in the unit again, and then turn the power on.

#### Note:

If neither operation above restores the unit, clear all the memory by resetting it.

### ■ Factory reset, clearing all memory

- 1 Press the ON/STAND-BY button to enter the power stand-by mode.
- 2 Whilst pressing down the OPEN/CLOSE button, press the ON/STAND-BY button until "Clear All" appears.



#### Caution:

This operation will erase all data stored in memory including clock, timer settings and tuner preset.

### ■ Before transporting the unit

Remove the iPod, iPhone, iPad, USB memory device and disc from the unit. Then, set the unit to the power stand-by mode. Carrying the unit with iPod, iPhone, iPad or USB memory device left connected or discs left inside might damage the unit.

## On-screen Error Messages

The following messages appear on the TV screen in case of an error during operation.

Error message	Possible Error	Suggested Solution
Cannot play.	● The disc cannot be played back with this Unit.	● Check the disc, and load it correctly.
Incompatible disc.	● If you load a disc which cannot be played with this Unit (i.e. a scratched disc), or if you load a disc upside down, this message will appear, and the disc tray will automatically pop out. ● Occurs if the loaded disc cannot be played because it is a non-standard disc or scratched, etc.	● Remove the disc.
Cannot operate.	● Occurs if an operation is incorrect.	_____
This USB memory is not formatted properly. Please format the memory in USB memory management.	● Occurs if there is a formatting error. ● Occurs if the USB memory is not formatted with FAT 32/16.	● Format the USB memory again. ● Format the USB memory with your PC.
The Connected USB Memory cannot be used. It should be compliant with USB 2.0	● Occurs if USB memory not compliant with USB 2.0 High Speed (480Mbit/s) is used (i.e. USB 1.0/USB 1.1).	● Connect USB 2.0 High Speed (480Mbit/s) compliant USB memory.

## Specifications

As part of our policy of continuous improvement, SHARP reserves the right to make design and specification changes for product improvement without prior notice. The performance specification figures indicated are nominal values of production units. There may be some deviations from these values in individual units.

### ■ General

Power source	AC 220 - 240V ~ 50/60 Hz
Power consumption	Power on: 52 W Power stand-by: 0.5 W (*)
Dimensions	Width: 215 mm (8 - 1/2") Height: 96 mm (3 - 4/5") Depth: 335 mm (13 - 1/5")
Weight	2.75 kg (6.06 lbs.)
Operating temperature	5°C to 35°C
Storage temperature	-20°C to 60°C
Operating humidity	10 % to 80 % (no condensation)
TV systems	PAL system/NTSC system (The system recorded on the disc is output.)

(\*) This power consumption value is obtained when the demonstration mode is cancelled in the power stand-by mode. Refer to page 10 to cancel the demonstration mode.

### ■ Amplifier

Output power	PMPO: 200 W MPO: 100 W (50 W + 50 W) (10% T.H.D.) RMS: 100 W (50 W + 50 W) (10% T.H.D.) RMS: 66 W (33 W + 33 W) (1% T.H.D.)
--------------	---

<b>Output terminals</b>	Speakers: 6 ohms 20Hz - 20kHz Subwoofer Pre-out (audio signal): 200 mV/10 k ohms at 70 Hz Video output: 1 Vp-p Headphones: 16 - 50 ohms (recommended: 32 ohms) HDMI 19-pin standard connector (1080p 24Hz output) HDMI™ (Deep Colour, x.v.Colour, Dolby TrueHD, DTS-HD Master Audio   Essential)
-------------------------	--

<b>Input terminals</b>	Audio In (audio signal): 500 mV/47 k ohms Line in (Analogue input): 500 mV/47 k ohms Digital audio optical input terminal: Square Optical terminal Ethernet: 10BASE-T/100BASE-TX
------------------------	---

### ■ BD player

Type	Single disc multi-play disc unit
Signal readout	Non-contact, 3-beam semiconductor laser pickup
Playable discs/ media formats	BD-ROM, BD-RE, BD-R, DVD Video, DVD+RW/+R/-RW/-R (Video/ VR/AVCHD/JPEG file/MP3 file/DivX (H.264/MKV) format), Audio CD (CD-DA), CD-RW/R (CD-DA/ JPEG file/MP3 file format)
Region code	B or marked ALL for BD, 2 or marked ALL for DVD
D/A converter	Multi bit D/A converter
Frequency response	20 - 20,000 Hz
Dynamic range	90 dB (1 kHz)

<b>■ USB</b>	
USB	● USB 1 (5 V dc 500 mA USB 2.0 High Speed (for Local Storage/ Software Update/JPEG/MP3 and DivX (H.264/MKV) playback) ● USB 2 (5 V dc 2.1 A) (iPod/iPhone and iPad compatibility)

<b>■ Tuner</b>	
Frequency range	FM: 87.5 - 108 MHz
Preset	40 (FM station)

<b>■ Speaker</b>	
Type	2-way type speaker system 2.5 cm (1") Dome-Tweeter 12 cm (4-3/4") woofer
Maximum input power	100 W
Rated input power	50 W
Impedance	6 ohms
Dimensions	Width: 148 mm (5-13/16") Height: 262 mm (10-5/16") Depth: 203.5 mm (8")
Weight	2.50 kg (5.51 lbs.)/each

# Glossary

---

## AVCHD (page 3)

AVCHD (Advanced Video Codec High Definition) refers to a recording format (specification) for digital video cameras which can record to a disc such as 8 cm DVD disc and play back digital high definition images.

## BDAV (page 3)

BDAV (Blu-ray Disc Audio/Visual, BD-AV) refers to one of the application formats used for writable Blu-ray discs such as BD-R, BD-RE, etc. BDAV is a recording format equivalent to DVD-VR (VR mode) of the DVD specifications.

## BD-J application

The BD-ROM format supports Java for interactive functions. "BD-J" offers content providers almost unlimited functionality when creating interactive BD-ROM titles.

## BD-LIVE (page 19)

A variety of interactive content is available from BD-LIVE compatible Blu-ray discs via the Internet.

## BDMV (page 3)

BDMV (Blu-ray Disc Movie, BD-MV) refers to one of the application formats used for BD-ROM which is one of the Blu-ray Disc specifications. BDMV is a recording format equivalent to DVD-video of the DVD specification.

## BD-R (pages 3-4)

A BD-R (Blu-ray Disc Recordable) is a recordable, write-once Blu-ray Disc. Since contents can be recorded and cannot be overwritten, a BD-R can be used to archive data or for storing and distributing video material.

## BD-RE (pages 3-4)

A BD-RE (Blu-ray Disc Rewritable) is a recordable and rewritable Blu-ray Disc.

## BD-ROM (pages 3-4)

BD-ROMs (Blu-ray Disc Read-Only Memory) are commercially produced discs. Other than conventional movie and video contents, these discs have enhanced features such as interactive content, menu operations using pop-up menus, selection of subtitle display, and slide shows. Although a BD-ROM may contain any form of data, most BD-ROM discs will contain movies in High Definition format for playback on Blu-ray Disc units.

## Blu-ray Disc (BD) (page 3)

A disc format developed for recording/playing high-definition (HD) video (for HDTV, etc.), and for storing large amounts of data. A single layer Blu-ray Disc holds up to 25 GB, and a dual-layer Blu-ray Disc holds up to 50 GB of data.

## Chapter number (page 26)

Sections of a movie or a music feature that are smaller than titles. A title is composed of several chapters. Some discs may only be comprised of a single chapter.

## Control Panel (page 16)

This function allows you to operate this unit using the TV remote control by displaying the control panel on the TV screen.

## Copy guard

This function prevents copying. You cannot copy discs marked by the copyright holder with a signal which prevents copying.

## Deep Colour

Deep Colour can reproduce rich colours, increasing the number of bits describing colours.

This Unit is compatible with Deep Colour. You can enjoy this function by connecting to a Deep Colour compatible TV using an HDMI cable.

## Disc menu (page 19)

This lets you select things like the subtitle language or audio format using a menu stored on the DVD video disc.

## Dolby Digital (page 5)

A sound system developed by Dolby Laboratories Inc. that gives movie theatre ambience to audio output when the product is connected to a Dolby Digital processor or amplifier.

## Dolby Digital Plus (page 34)

A sound system developed as an extension to Dolby Digital. This audio coding technology supports 7.1 multi-channel surround sound.

## Dolby TrueHD (page 34)

Dolby TrueHD is a lossless coding technology that supports up to 8 channels of multi-channel surround sound for the next generation optical discs. The reproduced sound is true to the original source bit-for-bit.

## DTS (page 5)

This is a digital sound system developed by DTS, Inc. for use in cinemas.

## DTS-HD High Resolution Audio (page 34)

DTS-HD High Resolution Audio is a new technology developed for the next generation high definition optical disc format.

## DTS-HD Master Audio (page 34)

DTS-HD Master Audio is a lossless audio compression technology developed for the next generation high definition optical disc format.

## DTS-HD Master Audio | Essential

DTS-HD Master Audio | Essential is a lossless audio compression technology developed for the next generation high definition optical disc format.

## DVD upscaling (page 18)

Upscaling (upconverting) refers to a function of various units and devices that enlarge the image size to fit the size of the screen of video equipments such as a TV.

## DVD video (pages 3-4)

A disc format that contains up to eight hours of moving pictures on a disc the same diameter as a CD. A single-layer single sided DVD holds up to 4.7 GB; a double layer single-sided DVD, 8.5 GB; a single layer double-sided DVD, 9.4 GB; double-layer double-sided DVD, 17 GB. The MPEG 2 format was adopted for efficient video data compression. It is a variable rate technology that encodes the data to according to the status of the video for reproducing high-quality images. Audio information is recorded in a multi-channel format such as Dolby Digital, allowing for a realistic audio presence.

## DVD+/-R (pages 3-4)

A DVD+/-R is a recordable, write-once DVD. Since contents can be recorded and cannot be overwritten, a DVD+/-R can be used to

archive data or for storing and distributing video material. The DVD+/-R has two different formats: VR format and Video format. DVDs created in Video format have the same format as a DVD video, while discs created in VR (Video Recording) format allow the contents to be programmed or edited.

## DVD+/-RW (pages 3-4)

A DVD+/-RW is a recordable and rewritable DVD. The re-recordable feature makes editing possible. The DVD+/-RW has two different formats: VR format and Video format. DVDs created in Video format have the same format as a DVD video, while discs created in VR (Video Recording) format allow the contents to be programmed or edited.

## HDMI (page 34)

HDMI (High-Definition Multimedia Interface) is an interface that supports both video and audio on a single digital connection. The HDMI connection carries standard to high definition video signals and multi-channel audio signals to AV components such as HDMI equipped TVs, in digital form without degradation.

## Interlace format

Interlace format shows every other line of an image as a single "field" and is the standard method for displaying images on television. The even numbered field shows the even numbered lines of an image, and the odd numbered field shows the odd numbered lines of an image.

## JPEG (pages 3-4, 22-23)

JPEG (Joint Photographic Experts Group) is a still image data compression format and is used in most of digital cameras.

## Linear PCM Sound (page 5)

Linear PCM is a signal recording format used for Audio CDs and on some DVD and Blu-ray discs. The sound on Audio CDs is recorded at 44.1 kHz with 16 bits. (Sound is recorded between 48 kHz with 16 bits and 96 kHz with 24 bits on DVD video discs and between 48 kHz with 16 bits and 192 kHz with 24 bits on BD video discs.)

## MP3 (pages 3-4, 22-23)

MP3 files are audio data compressed in the MPEG1/2 Audio layer-3 file format. "MP3 files" have ".mp3" as extensions.

## MPEG-2

MPEG-2 (Moving Picture Experts Group phase 2) is one of the video data compression schemes, which is adopted for DVD videos and digital broadcasts worldwide. Some Blu-ray Discs also use high bitrate MPEG-2.

## Multi Angle (page 25)

This is a feature of DVD and BD video discs. In some discs, the same scene is shot from different angles, and these are stored in a single disc so you can enjoy playback from each angle. (This function can be enjoyed if the disc is recorded with multiple angles.)

## Multi Audio (page 28)

This is a feature of DVD and BD video discs. This function makes it possible to record different audio tracks for the same video, so you can enhance your enjoyment by switching the audio. (You can enjoy this function with discs recorded with multiple audio tracks.)

## Glossary (continued)

---

### Parental control (page 28)

In some digital broadcasts and BD/DVD video discs, a control level for disc viewing is set depending on the age of the viewer. With this Unit, you can set the control level for viewing such broadcasts and discs.

### Pop-up menu (pages 17, 19)

An enhanced menu operation available on BD video discs. The pop-up menu appears when **POP-UP MENU** is pressed during playback, and can be operated while playback is in progress.

### Progressive format

Compared to the Interlace format that alternately shows every other line of an image (field) to create one frame, the Progressive format shows the entire image at once as a single frame. This means that while the Interlace format can show 30 frames/60 fields in one second, the Progressive format can show 60 frames in one second. The overall picture quality increases and still images, text, and horizontal lines appear sharper.

### Region code (pages 3-4)

Code identifying a geographic region of compatibility for a BD/DVD.

### Resume playback (pages 18, 21)

If you stop playback while it is in progress, the Unit stores the stop position in memory, and this function lets you playback from that point.

### Skip (pages 17, 22, 24-26, 34)

This returns to the start of the chapter (or track) being played, or skips to the next chapter (or track).

### Subtitles (pages 5, 19, 25)

These are the lines of text appearing at the bottom of the screen which translate or transcribe the dialogue. They are recorded on many DVD and BD video discs.

### Time number (pages 18, 26)

This indicates the play time which has elapsed from the start of a disc or a title. It can be used to find a specific scene quickly. (It may not work with some discs.)

### Title number (pages 18, 26)

These numbers are recorded on DVD and Blu-ray discs. When a disc contains two or more movies, these movies are numbered as title 1, title 2, etc.

### Top menu (pages 17-19)

In a BD/DVD video, this is the menu for selecting things like the chapter to be played back and the subtitle language. In some DVD videos, the top menu may be called the "Title Menu".

### Track number (pages 5, 26)

These numbers are assigned to the tracks which are recorded on audio CDs. They enable specific tracks to be located quickly.

### x.v.Colour

x.v.Colour reproduces a greater range of colour than before, showing almost all of the colours that the human eye can detect. (Applicable for JPEG files only with this system)

### YouTube (page 34)

YouTube is a website where users can upload and view video content, such as video clips and TV clips. You can watch the content streamed on your TV.

## Network Service Disclaimer

---

This Sharp device facilitates the access to content and services provided by third parties. The content and services accessible via this device belong to and may be proprietary to third parties. Therefore, any use of such third party content and services must be in accordance with any authorisation or terms of use provided by such content or service provider. Sharp shall not be liable to you or any third party for your failure to abide by such authorisation or terms of use. Unless otherwise specifically authorised by the applicable content or service provider, all third party content and services provided are for personal and non-commercial use; you may not modify, copy, distribute, transmit, display, perform, reproduce, upload, publish, license, create derivative works from, transfer or sell in any manner or medium any content or services available via this device.

Sharp is not responsible, nor liable, for customer service-related issues related to the third party content or services. Any questions, comments or service-related inquiries relating to the third party content or service should be made directly to the applicable content or service provider.

You may not be able to access content or services from the device for a variety of reasons which may be unrelated to the device itself, including, but not limited to, power failure, other Internet connection, or failure to configure your device properly. Sharp, its directors, officers, employees, agents, contractors and affiliates shall not be liable to you or any third party with respect to such failures or maintenance outages, regardless of cause or whether or not it could have been avoided.

ALL THIRD PARTY CONTENT OR SERVICES ACCESSIBLE VIA THIS DEVICE IS PROVIDED TO YOU ON AN "AS-IS" AND "AS AVAILABLE" BASIS AND SHARP AND ITS AFFILIATES MAKE NO WARRANTY OR REPRESENTATION OF ANY KIND TO YOU, EITHER EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ANY WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, FITNESS FOR A PARTICULAR PURPOSE OR ANY WARRANTIES OF SUITABILITY, AVAILABILITY, ACCURACY, COMPLETENESS, SECURITY, TITLE, USEFULNESS, LACK OF NEGLIGENCE OR ERROR-FREE OR UNINTERRUPTED OPERATION OR USE OF THE CONTENT OR SERVICES PROVIDED TO YOU OR THAT THE CONTENT OR SERVICES WILL MEET YOUR REQUIREMENTS OR EXPECTATIONS.

SHARP IS NOT AN AGENT OF AND ASSUMES NO RESPONSIBILITY FOR THE ACTS OR OMISSIONS OF THIRD PARTY CONTENT OR SERVICE PROVIDERS, NOR ANY ASPECT OF THE CONTENT OR SERVICE RELATED TO SUCH THIRD PARTY PROVIDERS.

IN NO EVENT WILL SHARP AND/OR ITS AFFILIATES BE LIABLE TO YOU OR ANY THIRD PARTY FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE, CONSEQUENTIAL OR OTHER DAMAGES, WHETHER THE THEORY OF LIABILITY IS BASED ON CONTRACT, TORT, NEGLIGENCE, BREACH OF WARRANTY, STRICT LIABILITY OR OTHERWISE AND WHETHER OR NOT SHARP AND/OR ITS AFFILIATES HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

# About Software License

---

## Information on the Software License for This Product

### Software composition

The software included in this product is comprised of various software components whose individual copyrights are held by SHARP or by third parties.

### Software developed by SHARP and open source software

The copyrights for the software components and various relevant documents included with this product that were developed or written by SHARP are owned by SHARP and are protected by the Copyright Act, international treaties, and other relevant laws. This product also makes use of freely distributed software and software components whose copyrights are held by third parties. These include software components covered by a GNU General Public License (hereafter GPL), a GNU Lesser General Public License (hereafter LGPL) or other license agreement.

### Obtaining source code

Some of the open source software licensors require the distributor to provide the source code with the executable software components.

GPL and LGPL include similar requirements. For information on obtaining the source code for the open source software and for obtaining the GPL, LGPL, and other license agreement information, visit the following website:

<http://www.sharp-eu.com/gpl>

We are unable to answer any questions about the source code for the open source software. The source code for the software components whose copyrights are held by SHARP is not distributed.

### Acknowledgements

The following open source software components are included in this product:

- cairo • Curl • DirectFB • Droid Sans font • Droid Sans Fallback font • Fltk • FreeType • Giflib • glib • Icu • Jpeg • Libpng • LibPTHread
- Librt • libsoup • Libstdc++ • libxml2 • OpenSSL • pango • swfdec
- Webkit • zlib • linux kernel • uClibc • modutils • NanoXML
- org.apache.oro.text.regex • libsysfs • mtd/jffs2 • ncurses • libiconv
- libusb • busybox • bash • libmpeg2 • libjpeg • FontConfig

## Software License Notice

### Software License Notice Requirements

The software components incorporated into this product include components whose copyright holders require license notices. The license notices for these software components are shown below.

### OpenSSL License

This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (<http://www.openssl.org>)

### Original SSLeay License

This product includes cryptographic software written by Eric Young ([eay@cryptsoft.com](mailto:eay@cryptsoft.com)).

### BSD License

This product includes software developed by the University of California, Berkeley and its contributors.

**SHARP**<sup>®</sup>

SHARP ELECTRONICS (Europe) GmbH  
Sonnenstraße 3, D-20097 Hamburg

SHARP CORPORATION