

morphy richards®



PerformAir Cyclonic vacuum cleaner



Please read and keep these instructions

Getting the best from your new cleaner...

If your cleaner is not picking up as well as it should, please check

Filters

It is important to rotate the filter dial prior to emptying.

This action shakes clean the dust canister filter. See page 6.

Blockages

Check the nozzle, tubes and hose for blockages.

Allergy sufferers

See page 7 for allergy details.

Turbo nozzle *(certain models only)*

Remove hair and dirt caught around the brush bar regularly.

Safety cut out

If the product switches itself off during use refer to page 7 for instructions.



 
For replacement parts, help with using your Morphy Richards, problems and lots more, contact us by phone or through our website.

 
VC71060 MUK Rev 5 05/06



UK Helpline: 0870 060 2604
Replacement parts: 0870 167 6635
Ireland 1800 409119

www.morphyrichards.com





IMPORTANT SAFETY INSTRUCTIONS

The use of any electrical appliance requires the following common sense safety rules.

Primarily there is danger of injury or death and secondly the danger of damage to the appliance.

Please read before using the appliance

Location

- Do not use or keep this product outside in the rain.
- Do not store the appliance near hot surfaces eg ovens or heating appliances.

Mains lead

- Do not allow the mains lead to become strained or run this appliance over it.
- If the electrical cable becomes damaged the cable assembly must be replaced. Do not attempt this task yourself, contact the helpline number that is found at the bottom of the page.

Personal safety

- The plug must be removed from the wall socket before cleaning or maintaining the appliance.
- Never modify the cleaner in any way.
- Never use in the presence of explosive liquids or vapours.
- Never pick up inflammable or poisonous liquids such as petrol, copier toner or other volatile substances. Never pick up acids, asbestos or asbestos dust.
- Repairs to electrical appliances are only to be undertaken by trained personnel.

Unprofessional repairs can be dangerous for users.

- Use only genuine Morphy Richards spare parts and accessories.
- The appliance must never be left running when unsupervised.
- This vacuum cleaner is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.

Product safety

- Never use the appliance without the filters being installed.
- Never use the appliance to vacuum hot ashes, broken glass, sharp objects or liquids.

Children

- Children do not understand the dangers associated with operating electrical appliances. Never allow children to use this appliance.

ELECTRICAL REQUIREMENTS

 
Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating current).


If the socket outlets in your home are not suitable for the plug supplied with this appliance the plug should be removed and the appropriate one fitted.

If you cut off the plug and let go of the cable it will rewind into the machine therefore you must pull out a length of cable and secure it before cutting the plug off and re-fitting a new one.

WARNING: The plug removed from the mains lead, if severed, must be destroyed as a plug with a bared flexible cord is hazardous if engaged into a live socket outlet.


Should the fuse in the 13 amp plug require changing a 13 amp BS1362 fuse must be fitted.



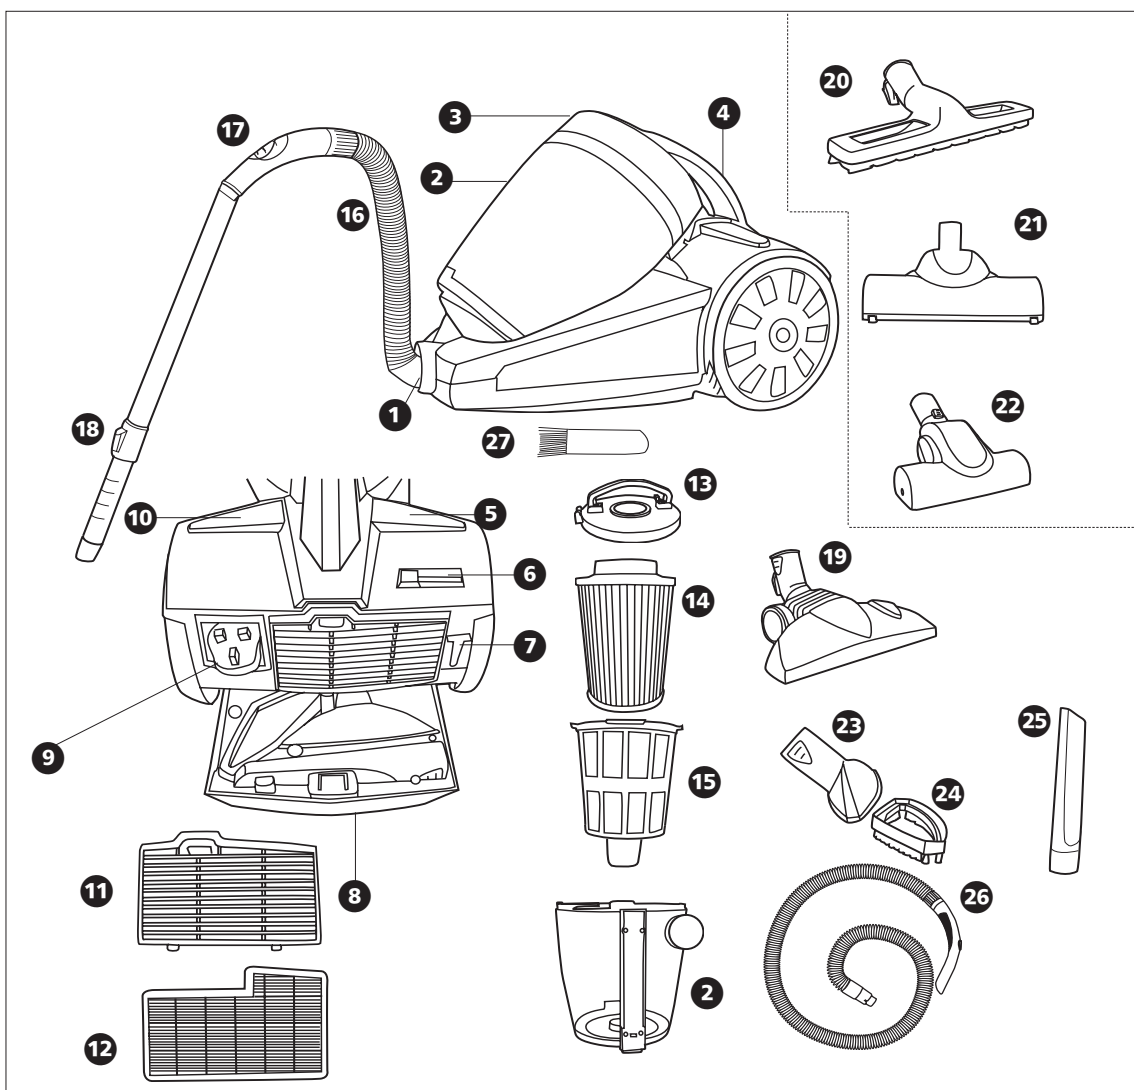

FEATURES

- | | | |
|--|---|---|
| <ul style="list-style-type: none"> 1 Hose inlet 2 Dust canister 3 Dust canister release button 4 Carrying handle 5 On/off power switch 6 Variable power switch 7 Parking slot 8 Tool storage drawer 9 Plug recess 10 Cable rewind switch 11 Exhaust filter grille | <ul style="list-style-type: none"> 12 Exhaust filter (certain models only) 13 Dust canister lid 14 Pleated, washable dust canister filter 15 Mesh filter cover 16 Standard hose 17 Hose handle with airflow regulator 18 Telescopic tube (length adjustable) 19 Combination floor nozzle 20 Hard floor nozzle (certain models only) 21 Large turbo nozzle (certain models only) | <ul style="list-style-type: none"> 22 Small turbo nozzle (certain models only) 23 Upholstery nozzle 24 Clip on brush (attached to 23) 25 Crevice tool 26 Stretch stair hose 27 Filter cleaning brush <p>Note: 23, 24, 25 are stored in the tool storage drawer 8.</p> |
|--|---|---|

 

OPERATING THE APPLIANCE

Quick start

- 1 Assemble the nozzle, telescopic tube and hose as shown. (Shown on page 3)
- 2 Pull out the mains cable to its full length and plug into the mains supply.
- 3 Switch on by pressing the on/off switch **5**.

TOOLS AND ACCESSORIES

- 1 Fit the hose to the cleaner by inserting the hose end into the hose inlet **1**. When removing, squeeze the clips either side and pull.
- 2 Attach the hose. Extend to the required length by pushing up the slider release and pulling out the tube **A**.

The hose handle features an airflow regulator which allows suction to be reduced as required.
- 3 Attach your choice of floor nozzle to the tube. **13**

Combination floor nozzle

The combination floor nozzle can be adjusted to suit different floor surfaces. Retract the brushes for use on carpet. The brushes should be down for use on hardfloors or damage may occur.


Hand tools

The crevice tool **25** (for awkward places, behind radiators etc) and the upholstery nozzle **23** with clip on brush **24** (for curtains and upholstery) are stored in the tool drawer **8**. The crevice tool is used for hard surfaces, pelmet, delicate objects etc **13**.

Using the large turbo nozzle (certain models only)

Attach the large turbo nozzle to the telescopic tubes.


This nozzle is ideal for carpet and especially effective at removing pet hair.

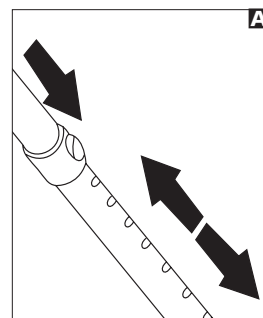

Using the small turbo nozzle (certain models only)

Attach the turbo nozzle to the hose handle **17** for use on upholstery and stairs.

WARNING: The turbo nozzle should not be used with the extension tubes. Attach to the hose handle only.

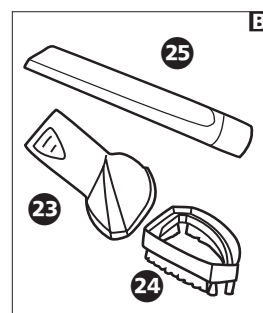

Cleaning the turbo nozzles

The turbo nozzles should be regularly cleaned and any hairs or fibres wrapped around the brush bar removed to maintain optimum performance. To aid cleaning, the small turbo nozzle can be opened up by pushing the button on the nozzle forwards. A cover on the bottom of the large turbo nozzle allows access to the turbine fan.

Hardfloor nozzle (certain models only)

 
Attach the hardfloor nozzle to the telescopic tubes. This nozzle is ideal for use on wood, laminate, tile and vinyl flooring.

 
Stretch stair hose

An additional stretch hose is also provided for use on stairs. Fit the hose to the cleaner by inserting the hose end into the hose inlet. When removing squeeze the clips either side and pull.

WARNING: For safety, always leave the cleaner at the bottom of the stairs and clean upwards.

WARNING: We do not recommend using the stair hose for general floor cleaning.





Quick guide to accessories:

	Combination floor nozzle	Large turbo nozzle	Small turbo nozzle	Hard floor nozzle	Crevice tool	Upholstery nozzle with clip on-brush
Carpet	✓ With brushes retracted	✓				
Rugs	✓ With brushes retracted	✓				
Wood/laminate	✓ With brushes down			✓		
Tile	✓ With brushes down			✓		
Vinyl	✓					
Upholstery			✓	✓	✓	✓
Stairs			✓			✓
Small spaces					✓	

CONTROLS

Power

- 1 Assemble the nozzle, telescopic tube and hose as shown. (Shown on page 3)
- 2 Pull out the mains cable to it's full length and plug into the mains supply.
- 3 Switch on by pressing the on/off switch fi.

handle. Closed for maximum suction, open for reduced suction.

Automatic cable rewind

 
After use, unplug and press the cable rewind switch to retract the cable.

WARNING: When using the cable rewind, always hold the plug as the cable will rewind quickly.

Variable power

A Variable power switch **6** varies the suction power as required. For example, maximum suction can be used for cleaning carpets, hard floors etc. and reduced suction for cleaning upholstery and curtains.

Suction can also be controlled using the airflow regulator on the hose



DUST CANISTER

Emptying

To obtain the best results from your cleaner empty the dust canister regularly, otherwise the airflow and cleaning power will be reduced.

- 1 Remove the dust canister from the product by pressing the dust canister release button **B**. Lift up the lid and remove the canister from the product, pulling the dust canister away from the product. **C**
- 2 Everytime the dust canister is emptied, turn the yellow dial (a minimum of 5 revolutions) prior to pressing the dust canister release button (this will agitate the fine dust between the filter pleats and restore the air flow)
- 3 Holding the dust canister over a dustbin press the dust release button as shown **D**, the bottom of the dust container will drop down to release the dirt.
- 4 Close the bottom of the dust canister by pressing the base upwards until it clicks into place.
- 5 Refit the dust canister back into the product. Make certain the dust canister feet are located in place.
- 6 Close the lid securely.

ALLERGY SUFFERERS

If the allergy sufferer is emptying the product it is recommended that the container is placed into a plastic bag to empty.

- 1 Place the container inside the plastic bag, releasing the container with one hand whilst holding the top of the bag closed with the other, leave the dust to settle for a few seconds before carefully removing the empty canister. The plastic bag can then be sealed and disposed of.

FILTERS

Cleaning canister filter

- 1 To access filter assembly rotate the canister lid anti-clockwise and lift off lid **E**.
- 2 Use the filter cleaning brush to remove any fluff from the outside of the mesh filter or gently tap.
- 3 Rotate mesh filter anti-clockwise to disassemble.
- 4 Shake the pleated filter to remove an dust.
- 5 Both the mesh and pleated filters may be washed (in cool water only) but must be thoroughly air dried before refitting.

Locate in the canister and replace the lid, twisting to lock into place.

IMPORTANT: Do not use detergents to clean the filter. The filter should be regularly washed, and must be thoroughly dry before the machine is used.





- A spare filter is provided.
- The dust container may not lock back onto the machine unless the filter is fitted correctly

Vacuum freshener (certain models only)

- 1 After emptying the dust canister and removing the filters (as described in points 1-4 above) open the clear packaging and remove the vacuum freshener.
- 2 Place it directly into the dust canister as shown **F**.
- 3 Refit the filters and canister (as described in point 5 above).

Only place the vacuum freshener directly into the dust canister. Do not place in the filter or any other part of your vacuum cleaner.

New vacuum freshener these can be purchased from Morphy Richards on Replacement parts line.

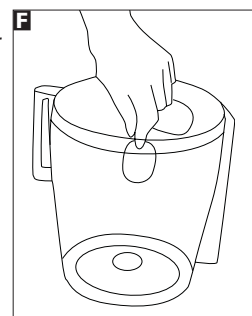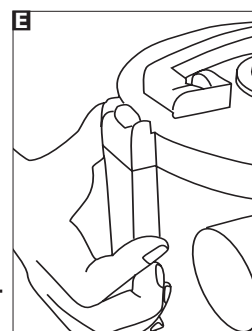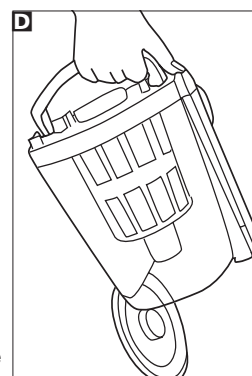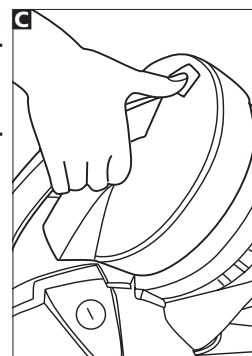

Exhaust filter

The exhaust filter **12** is located at the rear of the cleaner. Press the catch and pull the exhaust grille **11** away **G**. Pull the bottom of the filter outwards so the top of the filter unhooks from the filter recess.

Foam filters may be washed (in cool water), thoroughly air-dried and re-fitted. The pleated filters used on the Allergy models cannot be washed and should be replaced every 6 months or sooner depending on use.

IMPORTANT: To re-fit the filters, first hook the top of the filter into the filter recess then push the bottom of the filter into location **H**.

Note: If the filter is not correctly hooked in the exhaust filter grille will not close.

After fitting the filter, re-fit the exhaust filter grille by hooking the bottom of the grille in first and then pushing the top close until it clicks fully closed.

IMPORTANT: All filters should be checked regularly for signs of damage, preferably after each cleaning task. The filters must be replaced immediately if they become damaged.

- Always disconnect the cleaner from the mains when checking filters.
- Always make sure all filters are fitted before use. Failure to do so may result in damage to your product.

Storage position

When finished you can store the tubes and accessories by locating the tube storage clip into the parking slot on the side of the cleaner as shown **I**.

Safety cut-out

If the cleaner overheats a motor protection thermostat will automatically switch the motor off. If this happens, switch the cleaner off, unplug from the power supply and leave the cleaner to cool for at least 30 minutes. Check the airways for blockages, empty dust canister and clean the filters before restarting.

Cleaning and maintenance

Unplug from the mains before cleaning. The vacuum cleaner, especially the dust compartment and all accessories can be cleaned using a damp cloth or a non-abrasive cleaner and wiped dry.

Purchasing replacement filters

Use only original Morphy Richards filters. These can be purchased from Morphy Richards on Replacement parts line.

Allergy sufferers

If the allergy sufferer is emptying the product it is recommended that the container is placed into a plastic bag to empty.

- 1 Place the container inside the plastic bag, releasing the container with one hand whilst holding the top of the bag closed with the other, leave the dust to settle for a few seconds before removing the canister. The plastic bag can then be sealed and disposed of.

information ready to enable our staff to deal with your query quickly.

HELPLINE

If you have any difficulty with your appliance, do not hesitate to call us.

We are more likely to be able to help than the store from where you bought it.




Please have the following

- Name of the product
- Model number as shown on the underside of the appliance.
- Serial number as shown on underside of the appliance.

UK Helpline 0870 060 2604

Replacement Parts 0870 167 6635

Ireland Helpline 1800 409119

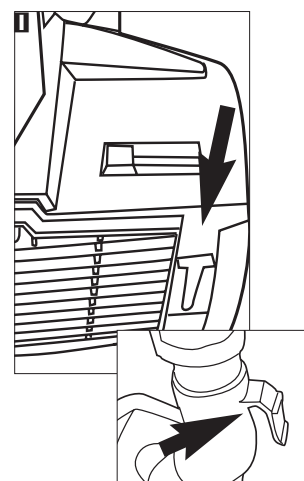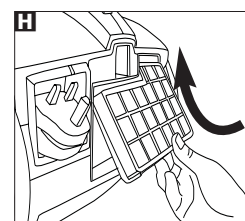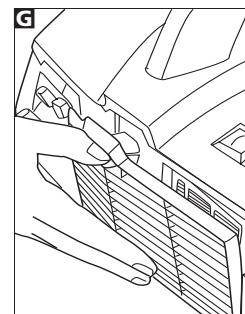

YOUR TWO YEAR GUARANTEE

It is important to retain the retailers receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no. Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline number quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown.

You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out below (see Exclusions) the faulty appliance will then be repaired or replaced and dispatched usually within 7 working days of receipt.

If you suspect a fault, follow the simple checks detailed below before retrying the appliance or calling the helpline.

- Check the filters for blockages.
- Check the tools / tubes for blockages.
- Check the plug is firmly in the socket is working by trying another appliance.
- Check the fuse in the plug.

If for any reason this item is replaced during the 2 year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee the appliance must have been used according to the instructions supplied.

Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

- 1 The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturers recommendations or where the fault has been caused by power surges or damage caused in transit.
- 2 The appliance has been used on a voltage supply other than that stamped on the products.
- 3 Repairs have been attempted by persons other than our

service staff (or authorised dealer).

- 4 Where the appliance has been used for hire purposes or non domestic use.
 - 5 Morphy Richards are not liable to carry out any type of servicing work, under the guarantee.
 - 6 The guarantee excludes consumables such as some filters.
- This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.
 - This guarantee is valid in the UK and Ireland only.



For electrical products sold within the European Community. At the end of the electrical products useful life it should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.

morphy richards

The After Sales Division
Morphy Richards Ltd
Mexborough, South Yorkshire,
England, S64 8AJ

Helpline (office hours)
UK 0870 060 2604
Republic of Ireland 1800 409119

Morphy Richards products are intended for household use only.

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.

For details of other products in the Morphy Richards range please see our website . . .