


**MODEL No.
Click 10
OPERATION MANUAL**

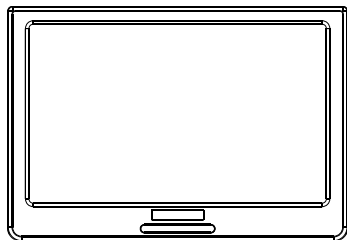

Thank you for purchasing this tablet DVD player. Please read this manual carefully before operation and reserve it for future reference. It will be helpful to you when you encounter any operational problem.

CAUTION:

These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operation manual unless you are qualified to do so.

WARNING:

To reduce the risk of fire or electric shock, do not expose this device to rain, moisture, dripping or splashing. No object filled with liquids (such as vase) shall be placed on the device. High voltages are present inside the unit. Under no circumstances should you try to repair the unit yourself. Refer servicing to qualified personnel.

LASER:

This unit employs a laser. Due to possible eye injury, only qualified service personnel should remove the cover or attempt to service this device.

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Visible and invisible laser radiation will be exposed when open and interlocks defeated.

DO NOT STARE INTO BEAM!

LASER

Type	Semiconductor laser GaAlAs
Wave length	650 nm/780nm
Output Power	5mW
Beam divergence	60degree

LASER RADIATION
DO NOT VIEW DIRECTLY WITH
OPTICAL INSTRUMENTS
CLASS 1M LASER PRODUCT

MACROVISION:

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision. If not, the use of this technology is only permitted for domestic use and other limited playback uses. Reverse engineering or disassembly is prohibited.

DOLBY:

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

DivX:

This device incorporates copyright protection technology that is protected by DivX, Inc.

DivX, DivX certified and associated logos are trademarks of DivX, Inc., and can only be used under license.

WEEE:

Please do not throw electronic devices into household waste. Separate them for correct recycling.

Component	Manufacturer/ trademark	Type/model	Value / rating	Stan-dard	Approval/ Reference
Power supply unit	Dee Van Enterprise Co., Ltd.	DSA-36W-12 30A	I/P: 100-240V~, 50/60 Hz, 1,0 A O/P: 12V, 2,5 A Class II	EN 60065: 2002 IEC 60065: 2001	CB (Cert. No.: JPTUV-010924, Report No.: 11004156 001)
Alt.	Sunny Electronics Corp.	SYS1319-3012	I/P: 100-240V~, 50-60 Hz, 1,0A O/P: 12V, 2,5A Class II	EN 60065: 2002 IEC 60065: 2001	CB (Cert.No.: JPTUV-013859, Report No.: 12012866 001)
Car charger	Various	Various	Input: 12V Output: 12V, 3A	EN 60065: 2002 + A1 EC 60065: 2001 + A1	Tested with appliance

CAUTIONS:

- Apparatus shall not expose to dipping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus;
- Excessive sound pressure from earphone and headphones can cause hearing loss.
- Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- For power supply unit, coupler is the disconnect device, and the disconnect device shall remain readily operable.

PRECAUTIONS	PRECAUTIONS.....1
TABLE OF CONTENTS	TABLE OF CONTENTS.....3
CAUTIONS ON USING THIS PLAYER	CAUTIONS ON USING THIS PLAYER.....5
DISCS PLAYABLE	TYPES OF DISCS PLAYABLE ON THIS PLAYER.....6
	PLAYABLE FORMATS6
PACKAGE CONTENTS	PACKAGE CONTENTS.....7
PARTS AND REMOTE CONTROL	FRONT.....8
	TOP.....8
	RIGHT.....9
	LEFT.....10
	BACK.....10
	HOW TO USE THE STAND.....10
	REMOTE CONTROL.....11
	NOTES ON USING THE REMOTE CONTROL13
	REPLACING THE BATTERY.....13
CONNECTIONS	CONNECTING THE ADAPTER TO A SOCKET.....14
	USING AN EARPHONE / AN AMPLIFIER.....14
	CONNECTING ACCESSORIES TO iX PORT.....14
	INSERTING A USB DISK INTO THE PLAYER.....15
	INSERTING A MEMORY CARD INTO THE PLAYER.....15
BASIC OPERATIONS	TURNING ON THE PLAYER BY USING THE ADAPTER.....16
	TURNING ON THE PLAYER BY USING THE BATTERY.....16
	SELECTING A LANGUAGE.....17
	TURNING OFF THE PLAYER.....17
	LOADING.....18
	PLAYBACK.....19
	STOPPING PLAYBACK.....19
	PAUSING PLAYBACK.....19
SYSTEM SETUP	OPTION.....20
	IR HEADPHONE.....20
	DISPLAY.....21
	TV SYSTEM.....21
	SCREEN SAVER.....22
	TV TYPE.....22
	PASSWORD.....23
	RATING.....23
	DEFAULT.....24

LANGUAGE SETUP	LANGUAGE.....	25
	SUBTITLE.....	25
AUDIO SETUP	AUDIO OUT.....	26
DIGITAL SETUP	SOUND EFFECT.....	27
	DYNAMIC RANGE.....	27
	DIVX[R] VOD.....	28
DISC SETUP	DISC MENU.....	29
	INFORMATION.....	29
	MUTE.....	30
	AUDIO.....	31
	SUBTITLE.....	32
	REPEAT.....	33
	ZOOM.....	34
MODE	MODE.....	35
	USB AND MEMORY CARD READING.....	36
FUNCTIONS ON THE REMOTE CONTROL	PLAYING AT FAST SPEED.....	37
	A-B PLAYBACK.....	37
	ANGLE.....	37
	PROGRAM.....	38
	PLAYING ADISC IN MP3 OR JPEG FORMAT.....	40
OTHER	DIMENSION AND PARAMETERS.....	44
	TROUBLE SHOOTING.....	45

CAUTIONS ON USING THIS PLAYER**1. DO NOT MOVE THE PLAYER DURING PLAYBACK**

During playback, the disc spins at high speed. So do not lift or move the player. Doing so may damage the disc.

2. TRANSPORT THE PLAYER

Before transporting the player, please remove the disc, turn off the power, and unplug the power cord.

3. PLACE OF INSTALLATION

Select a stable place near TV or stereo system to which you are going to connect the player.

Do not place the player on top of a TV or color monitor.

Install the player away from cassette decks or other devices which are easily affected by magnetic forces.

4. TURN OFF THE POWER WHEN NOT USING THE PLAYER

If the player is connected to your TV but not in use, switch the power off. It can avoid interference with your normal TV picture.

Noise problems may also be experienced if the player is used near a radio.

5. STORAGE TEMPERATURE OF THE PLAYER

Do not leave the player in places where the temperature is extremely low (about -10°C or lower) or extremely high (about 60°C or higher), such as inside the passenger cabin or trunk in midsummer. Doing so may warp the outer case or reduce the performance or quality of the battery pack.

6. WHEN USING WITH CAR POWER CABLE (OPTIONAL) IN CARS

Please turn the engine on and then connect the car power cable for using.

7. CLEANING THE PLAYER

Normally clean the player with a soft dry cloth. For tough dirt, apply some neutral detergent diluted in 5 to 6 parts water to a soft cloth, and wring out thoroughly. Wipe off the dirt, then clean the player with a dry cloth. Note that alcohol, thinner, benzene, insecticides, etc., may cause the paint or coating to peel off.

Also avoid leaving rubber or plastic products in contact with the player for long periods of time, as this may damage the cabinet. When using chemically treated cloths, read the cloth's instructions carefully. Always unplug the power cord from the power outlet before cleaning the player.

8. COPYRIGHTS

Unauthorized duplication, broadcast, public performance or rental of discs is prohibited by law.



9. MODEL NUMBER

To see the model no. of the player, you can unlock the stand, and see it printed on the backplate.

TYPES OF DISCS PLAYABLE ON THIS PLAYER



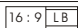

The discs listed on the table below can be played on this player without an adapter.

The marks shown on the table below are indicated on the disc's label, package or jacket.

Types of playable discs and their marks	Diameter/Playable sides	Playback time
DVD-Video disc 	DVD video 1 layer 12cm/single-sided 2 layer 12cm/double-sided 2 layer DVD video 1 layer 8 cm/single-sided 2 layer 8 cm/double-sided 2 layer	Playback time (MPEG 2 format) 133 minutes (4.7GB) 242 minutes (8.5GB) 266 minutes (9.4GB) 484 minutes (17GB) (MPEG 2 format) 41 minutes 75 minutes 82 minutes 150 minutes
	CD 12 cm/single-sided CD 8 cm/single-sided	74 minutes 20 minutes

Marks indicated on DVDs

DVD discs or packages include the marks shown below. These marks indicate the type of video or audio signals recorded on the disc and the functions that can be used.

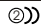Mark	Meaning
	Indicates the number of audio tracks.
	Indicates the number of angles.
	Indicates the selectable picture aspect ratio.
	Indicates the playable region number.

PLAYABLE FORMATS

The unit is able to play most audio/video files such as:









PICTURE: JPEG

AUDIO: MP3, WMA

VIDEO: DAT, VOB, MPEG2, MPEG4 (AVI, DIV)

PACKAGE CONTENTS

After unpacking, check the package contents of Click 10 first.


Click 10 	Quick Start 	Operation Manual 
AC/DC Adapter 	Remote Control 	Earphone 
Carrying Bag 	Click & Go (optional) 	

Note:


The actual products might appear slightly different from the pictures shown above.

FRONT

 1. Remote Control Sensor and IR Receiver

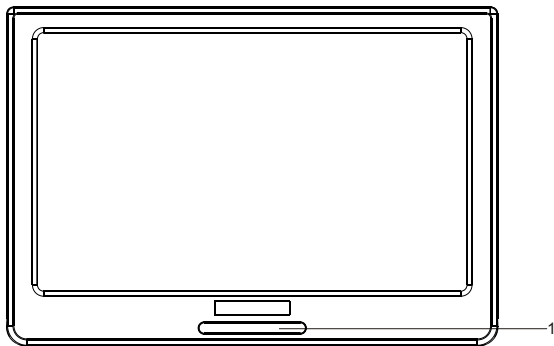

TOP

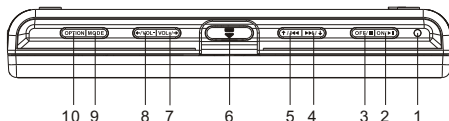 

1. LED Indicator

When the player is powered and the AC/DC adapter is connected, the LED indicator will be red to show the battery is charging. When the battery is fully charged, the indicator will turn green.

When the player is off and the AC/DC adapter is connected, the LED indicator will be red to show the battery is charging. When the battery is fully charged, the indicator will turn off. When the player is on and the AC/DC adapter is not connected, the LED indicator will be green to show the battery is being used. When the battery is discharged, the indicator will turn off.

2. ON / ►||

Press it for about 2 seconds to turn the player on.
Press it to start / pause the playback.
Press it to confirm the selection.

3. OFF / ■

Press it for about 2 seconds to turn the player off.
Press it to stop the playback.
Press it to exit the current operation.

4. **▶▶ / ↓**

Press it to skip to the next track / chapter when playing DVD.
Press it to move downwards.

5. **↑ / ◀◀**

Press it to skip to the previous track / chapter when playing DVD.
Press it to move upwards.

6. **☐**

Press it to open the cover.

7. **VOL+ / →**

Press it to turn the volume up.
Press it to move to the right.

8. **← / VOL-**

Press it to turn the volume down.
Press it to move to the left.

 
9. **MODE**

Press it to pop up the MODE menu, which includes DVD, USB, Memory Card, and AV Input.
The default mode is DVD.

10. **OPTION**

Press it to pop up the OPTION menu.

RIGHT

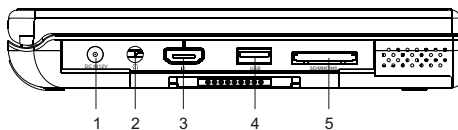1. **DC IN 12V**

Connect the included AC/DC adapter here.

2. **Earphone Jack**

Connect an earphone or an amplifier here.

3. **iX (Interface Extend) Port**

Connect to other accessories (such as AV box, TV box, and FM docking).

4. **USB Port**

Insert a USB disk here.

 
5. **Card Slot**

Support SD /MMC /MS cards.

LEFT

1. Lock


Lock / unlock the stand and Click & Go.

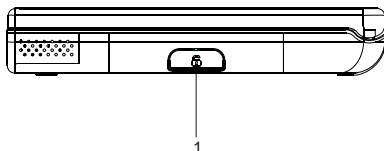

BACK




1. Stand

 The player can stand with it.

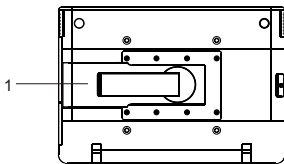


HOW TO USE THE STAND

   1. Pull out the support of the stand.
2. Rotate it to a proper position.
3. Lean the player back.



REMOTE CONTROL

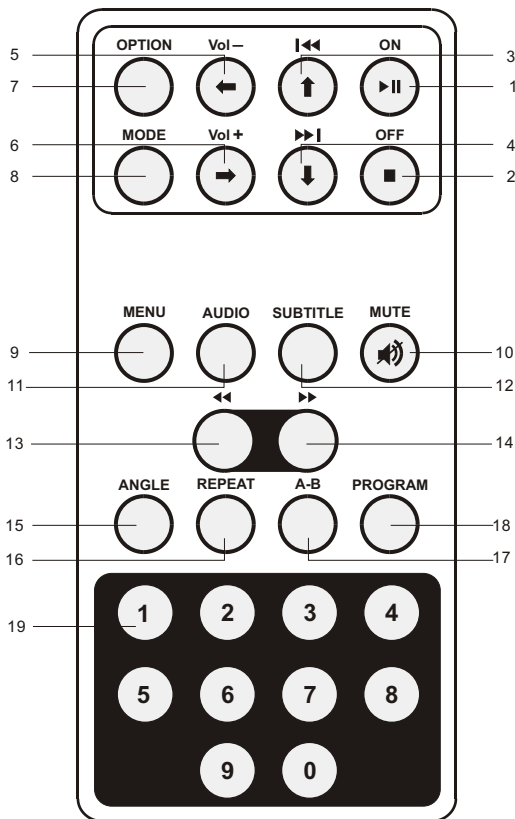 

1. ON/▶II

Press it to turn the player on.
 Press it to start / pause the playback.
 Press it to confirm the selection.

2. OFF/■

Press it to turn the player off.
 Press it to stop the playback.
 Press it to exit the current operation.

3. ↑/◀◀

Press it to skip to the previous track / chapter when playing DVD.
 Press it to move upwards.

4. ▶▶/↓

Press it to skip to the next track /chapter when playing DVD.
 Press it to move downwards.

5. Vol - / ←

Press it to turn the volume down.
 Press it to move to the left.

6. Vol + / →

Press it to turn the volume up.
 Press it to move to the right.

7. OPTION

Press it to pop up the OPTION menu.

8. MODE

Press it to pop up the MODE menu, which includes DVD, USB, Memory Card, and AV Input.
 The default mode is DVD.

9. MENU

Press it to display DVD menu.

10. MUTE

Press it to turn on/off the audio mute.

11. AUDIO

Press it to change the audio language.

12. SUBTITLE

Press it to change the subtitle.

13. ◀◀

Press it to fast backward a movie/music clip.

14. ▶▶

Press it to fast forward a movie/music clip.

15. ANGLE

Press it to switch angle.

16. REPEAT

Press it to repeat the playback.

17. A-B

During the playback, press it to set two points, and repeatedly play the section between them.

18. PROGRAM

Press it to arrange the playing order of tracks.


19. NUMBER KEY 0-9

NOTES ON USING THE REMOTE CONTROL


1. Do not drop or step on the remote control or subject it to shocks.
2. Note that the remote control may not work if there is any obstacle between the remote control sensor and itself.
3. Do not expose the remote sensor to strong light. Doing so may make operation impossible.
4. Use the remote control within the specified operating range.

REPLACING THE BATTERY

1. Use your fingernail to press A and pull out the battery holder according to the indicated direction.

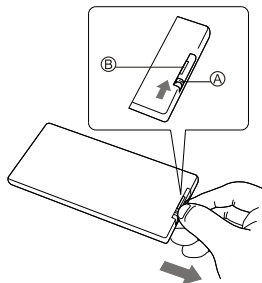


 2. Remove the old battery, and put a new one onto the battery holder with the + side facing upwards.




Lithium Battery (CR2025)

3. Put the battery holder back to its place.

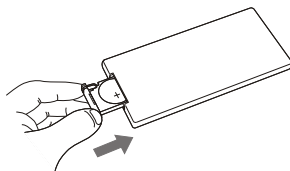


Note:


- To prevent leakage of fluid from the lithium battery, remove the battery when not using the remote control for a long time (one month or more).
If the battery leaks fluid, carefully take the battery out and wipe the battery holder, then replace the old battery with a new one.
Caution: The battery may present a risk of fire if not handled properly. Do not recharge, disassemble, or heat it above 100°C.
- Replace battery with the same type.
- Dispose of used batteries properly, keep away from children and do not dispose it into fire.

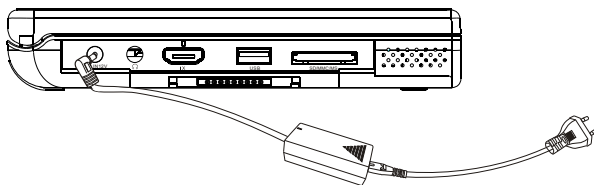CONNECTING THE ADAPTER TO A SOCKET**USING AN EARPHONE /AN AMPLIFIER**

1. Set the volume to its minimum sound level.
2. Connect an earphone or an amplifier to the earphone jack.
3. Adjust the volume to a sound level you prefer.

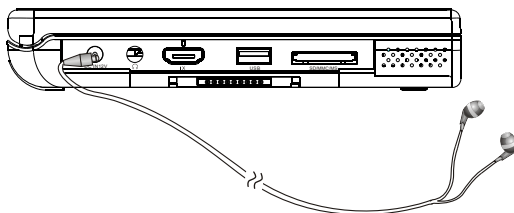**CONNECTING ACCESSORIES TO iX PORT**


Connect accessories, such as AV box, TV box, and FM docking, to the iX port as shown below.

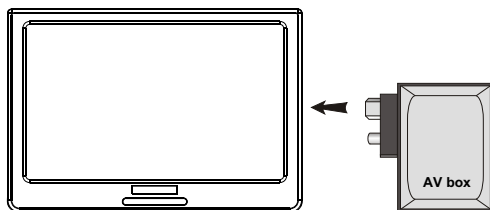

Note: Do not connect HDMI cable to the iX port, or it may cause damages.

INSERTING A USB DISK INTO THE PLAYER

 Insert a USB disk as shown below.

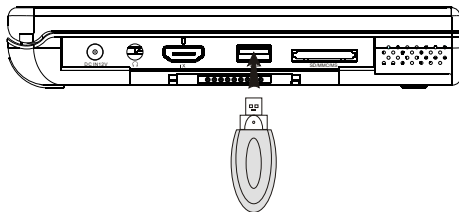


Note:

The player may not work properly if a USB disk is connected to a USB cable / hub.

INSERTING A MEMORY CARD INTO THE PLAYER

Insert a USB disk as shown below.

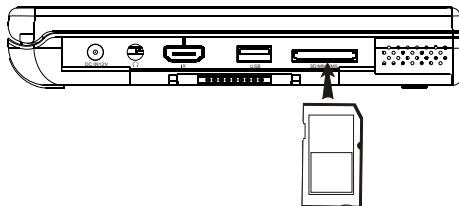


Note:

1. Because of various sizes of memory cards, please slightly adjust the angle if a memory card cannot be read.
2. Mini SD adapter or dual voltage SD cards may not be recognized by the player.
3. Please do not use an MS-PRO adapter with a surface whose paint has fallen off. Doing so may cause damages.

TURNING ON THE PLAYER BY USING THE ADAPTER

 1. Connect the included AC/DC adapter to a socket.
2. Connect the DC output plug of the adapter to the DC input jack on the unit.
3. Once the player is connected to the adapter or the backplate of Click & Go, the player will automatically turn on.

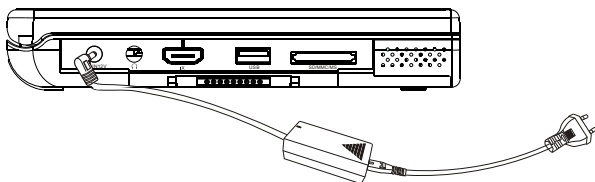**Note:**

The included AC/DC adapter is compatible with voltage from 100V to 240V. You can use it overseas, and a converter plug may be used to fit into the region in which you are traveling.

TURNING ON THE PLAYER BY USING THE BATTERY

1. The player also works without adapter if the battery is charged.
2. The built-in battery (7.4V/3200mAh) allows up to 2.5-hour use.
3. Press ON/▶|| on the unit for about 2 seconds.


SELECTING A LANGUAGE

When the player turns on for the first time, the following menu will pop up for you to select a language. 6 languages are provided: English, Deutsch, Español, Français, Italiano, and Swedish. . Navigate to the language you prefer, and press ► to confirm.



TURNING OFF THE PLAYER

1. Press OFF / ■ on the unit for about 2 seconds.
2. Unplug the adapter from a socket.
3. Disconnect the DC output plug from the DC input jack.

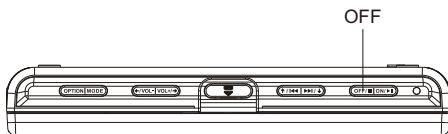

Note:


If there is no operation within 5 minutes, the message below will pop up on the screen for 10 seconds.




2. To keep using the player, you can press any button to exit the message interface, and the player will go back to its normal condition. If there is no operation within these 10 seconds, the player will automatically turn off.

LOADING

1. Press the OPEN button on the unit to open the disc door.
2. Insert a disc, and press it down with your fingers near the center hole. You can hear a click sound.
3. Close the disc door.

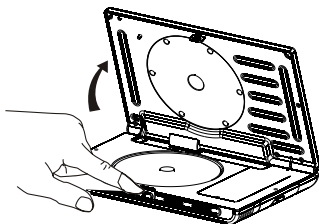

1

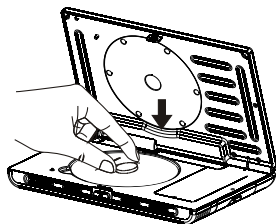


2

Note:

1. Make sure the disc is inserted properly. Failure to insert it properly may result in damages.
2. Do not use warped or cracked discs.
3. For single-sided discs, place them with the label side up.
4. For double-sided discs, since they have a recording layer on both sides of the disc, check each other carefully and make sure not to scratch them when removing them from the player.


PLAYBACK

1. Turn the power on.
2. Open the disc door, and insert a disc correctly.
3. Close the disc door.
4. The player will load the disc, and start the playback automatically. If not, press ►||.

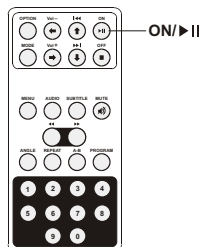


STOPPING PLAYBACK

1. Press ■ during the playback, and the player remembers the stopping point.
2. To resume playback from its stopping point, press ►||.
3. To cancel the stopping point, press ■ again in the STOP status. The player will not resume playback from the stopping point next time you press ►||.

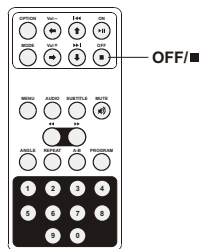

PAUSING PLAYBACK

1. Press ►|| during the playback.
2. To resume playback, press ►|| again.

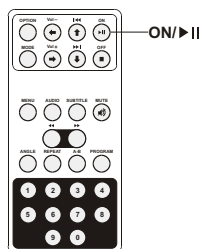 

OPTION

When the OPTION button on the unit is pressed, an option list will pop up, which includes the settings of IR Headphone, Display, Setup, Disc Menu, Information, Mute, Audio, Subtitle, Repeat, and Zoom.



IR HEADPHONE





When an IR headphone is connected to the player, you can select the channel you prefer. Navigate to IR Headphone, and press ► to enter the sub-menu.




- **Channel A:** If you want to select Channel A, select this, and press ► to confirm.
- **Channel B:** If you want to select Channel B, select this, and press ► to confirm.
- **Off:** When there is no IR headphone connected to the player or you want to turn off the IR headphone, select this, and press ► to confirm.

DISPLAY

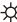Navigate to Display, and press ► to enter the sub-menu.

 1. Brightness: Navigate to Brightness , press ►, and then use ↑ and ↓ to adjust the brightness. Press ► to confirm.
2. Color: Navigate to Color , press ►, and then use ↑ and ↓ to adjust the color. Press ► to confirm.
3. Screen ratio: Navigate to Screen ratio , press ►, and then use ↑ and ↓ to select between 16:9 and 4:3. Press ► to confirm.
4. AV IN: Navigate to AV IN , press ►, and then use ↑ and ↓ to select between CVBS and S-VIDEO. Press ► to confirm.

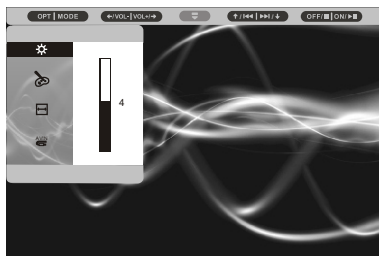

TV SYSTEM

Some DVDs have set up TV systems, and their TV systems may be varied. Before playing a DVD, you need to check its TV system first, and select the proper system. Navigate to SETUP, press ► to pop up the menu of TV System, and press ► again to enter the menu.

- **NTSC**: Select this if the player is connected to a NTSC TV.
 - **PAL**: Select this if the player is connected to a PAL TV.
 - **AUTO**: Select this if the player is connected to a multi-system TV.
- The default setting is AUTO.




Note:

If an incorrect TV system is selected, the picture will be displayed in black and white.

SCREEN SAVER

Navigate to Screen Saver, and press ► to enter the sub-menu.


- **ON:** Select this to activate the screen saver. When the player is in STOP or NO DISC status, or there is no motion for a long time, the screen will be displayed to protect the screen from damages.
 - **OFF:** Select this to cancel the screen saver.
- The default setting is ON.

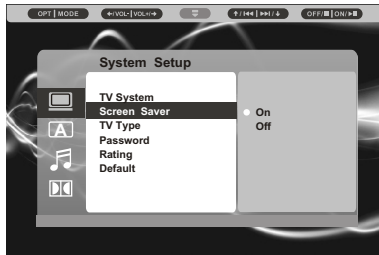

TV TYPE

Navigate to TV Type, and press ► to enter the sub-menu.


- **4:3PS :** Select this to adjust DVD aspect ratio to 4:3 pan & scan.
- **4:3LB :** Select this to adjust DVD aspect ratio to 4:3 letterbox.
- **16:9 :** Select this to adjust DVD aspect ratio to 16:9.

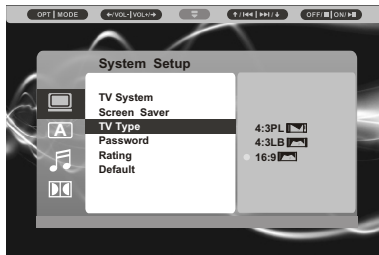

PASSWORD

The Password function is provided for parents to give DVD access to their kids selectively.

 
- For the first time use, enter 0000 or the assigned password to unlock the parental control.
- Once the parental control is unlocked, go to the RATING menu and set the rating for a program.
- Assign a new password (4 digits) to lock the rating.
- If you forget the password you assign, enter 0000 to unlock the rating again.

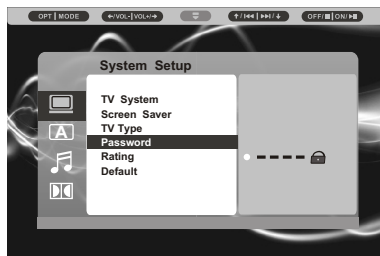

RATING

The Rating function works with those DVDs which a rating has been assigned to. This helps you to give DVD access to others selectively.

 - 8 options are provided: Kid Safe, G, PG, PG13, PG-R, R, NC-17, and Adult.
The default rating is Adult.

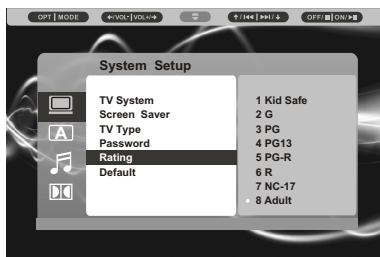

Note:

When the PASSWORD function is locked, you cannot change the rating.

DEFAULT

Select this to resume all the settings to default.



LANGUAGE

Navigate to Language Setup, press ► to enter the Display menu, and press ► again to enter the Display menu.

- 6 optional languages are provided: English, German, French, Spanish, Italian, and Swedish.
- Select the language you prefer, and press ► to confirm.
- The default language is English.



SUBTITLE

Navigate to Subtitle, and press ► to enter the sub-menu.

- If you want to play a DVD with subtitle, select ON, and press ► to confirm.
- If you want to play a DVD without subtitle, navigate to OFF, and press ► to confirm.



AUDIO OUT

Navigate to Audio Setup, press ► to highlight the Audio Out menu, and press ► again to enter the sub-menu. There are 3 optional audio output modes: Analogue, SPDIF/RAW, and SPDIF/PCM.

 
- **Analogue:** analogue output audio signal.
- **SPDIF/RAW:** digital decoder/amplifier audio signal output.
- **SPDIF/PCM:** digital audio signal output for use with digital stereo amplifier.



SOUND EFFECT

Navigate to Digital Setup, press ► to enter the Sound Effect menu, and press ► again to enter the sub-menu. 2 sound output effects are provided: Normal and Surround.

Choose the effect you prefer, and press ► to confirm.

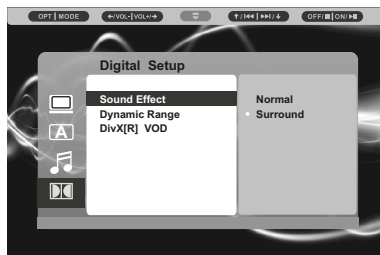


DYNAMIC RANGE

Navigate to Dynamic Range, and press ► to enter the sub-menu. This setting is to adjust the line out compressing ratio and get different effects. Use and to adjust it, and press ► to confirm.

If Off is selected, the audio signal peak value will be compressed to its minimum;

 If Full is selected, to its maximum.

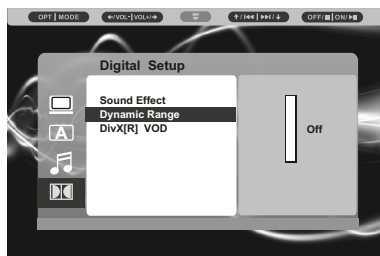


DIVX[R] VOD

DivX VOD files are downloaded after paying a rental from certain commercial websites. Prior to downloading a VOD you need to input the registration number of your DVD player on the purchase form on the site. Write down the VOD 8-character registration number so that you can fill in the form on the website you purchase your DivX VOD files from

To check the registration number, press **OPTION** on the unit or on the remote control, navigate to **SETUP**, and press **►II** to enter the sub-menu. Navigate to **DIGITAL SETUP**, and press **►II** to pop up the interface below.



Then press **►II** again, and the message below will appear.


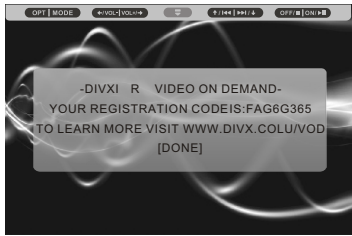


Note:

1. The registration code will be changed each time you use it to download the DivX files. You have to use new code to carry out downloading operation next time.
2. If you cannot play a DivX VOD file recorded on a CD-R disc after downloading it, the rental period allocated during purchasing from the website may have expired. It is also possible that the recorded file is not compatible with your player because of different versions or in correct download parameters. The parameters used when copying to CD-R may be another reason for this.
3. Since it is not possible here to supply all the information, parameters and advice relating to the use of DivX VOD files, we recommend that you visit specialist websites such as www.divx.com/vod.

DISC MENU


If a disc is provided with a menu, you can display the menu by navigating to Disc menu and pressing ►, or by pressing the MENU button on the remote control.

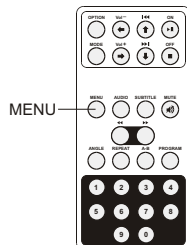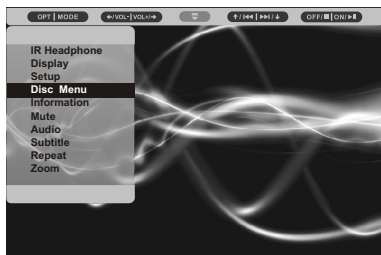

INFORMATION



Navigate to Information, and press ►. The disc and playback information will be shown on the top of the screen.



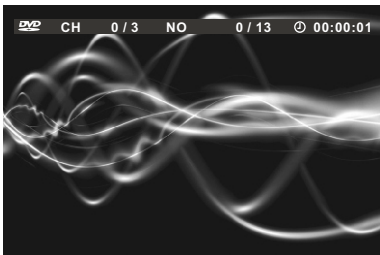


MUTE

To mute the sound, you can either navigate to MUTE and press **▶||**, or press the MUTE button on the remote control. Repeating the above step will un-mute the sound.

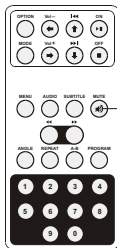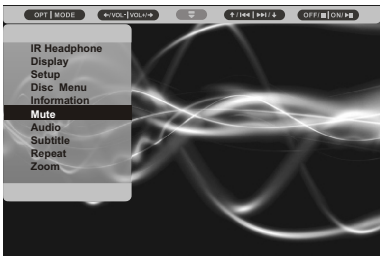

AUDIO

If a DVD is provided with different audio languages, you can choose the audio language you prefer by navigating to AUDIO and pressing ►►, or by pressing the AUDIO button on the remote control.

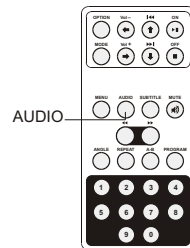


Note:

For VCD or CD, you can choose different channels to play.


SUBTITLE

Select the subtitle you prefer on DVDs by navigating to Subtitle and pressing ►►, or pressing the SUBTITLE button on the remote control during playback.

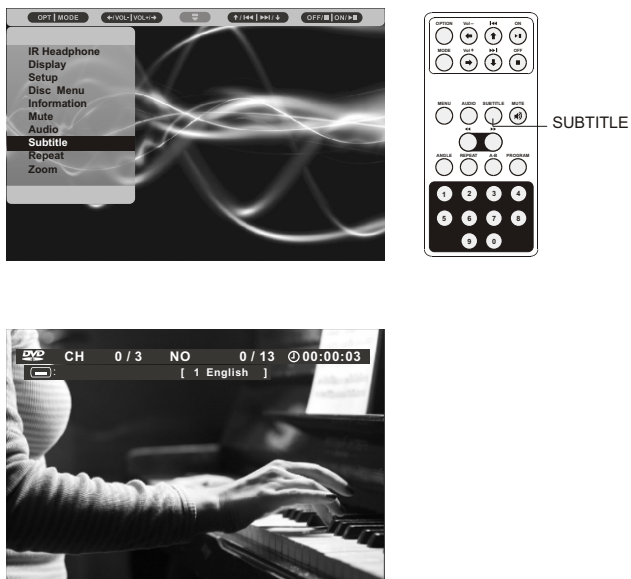

REPEAT

 During a playback, if the option Repeat is selected, or the Repeat button on the remote control is pressed, the title/chapter of a DVD or the track/entire disc of a CD will be played repeatedly.

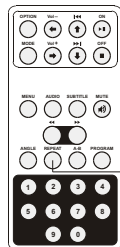

Note:

The REPEAT mode will be changed each time the REPEAT button is pressed.

ZOOM

If you want to zoom the picture on the screen, navigate to Zoom and press ► to. The zooming rate will be changed to 2, 3, 4, 1/2, 1/3, 1/4 and 1 time its original size each time the button is pressed.



Zoom: x2 ↓



Note:
If the option ZOOM is selected during the playback, the movie will be automatically paused.

MODE

When the MODE button on the unit is pressed, an option list will pop up, which includes DVD, USB, Memory Card, and AV Input.



- **DVD:** Select this if you want to play the DVD inside the player. Navigate to **DVD VIDEO**, and press **▶II** to start the playback.
- **USB:** Select this if you want to watch the video clips, listen to music, or view pictures in a USB disk. Navigate to **USB**, press **▶II** to load the USB disk, and the menu below will pop up.
- **Memory Card:** Select this if you want to watch the video clips, listen to music, or view pictures in a memory card. Navigate to **Memory Card**, press **▶II** to load the card, and the menu below will pop up.



- **AV Input:** Select this if an ATV box (optional) or a DVB box (optional) is inserted into the player. Navigate to **AV INPUT**, and **press** to load the contents in ATV/DVB box.

USB AND MEMORY CARD READING

- After the power is on or the disc door is closed, if there is only one storage base inside the player, the media contents in the storage base will be read directly.
- If there are two or more storage bases, the menu below will pop up for you to select a storage base.
- If a storage base is connected to the player while another storage base is playing, the playback will stop, and the player will play the media contents in the newly-inserted storage base.

 


PLAYING AT FAST SPEED

1. Press ◀ or ▶ on the remote control during playback.
2. The playback speed will be changed each time you press or. It will respectively change to 2, 4, 8, 20 and 1 time its normal speed.



Note:

When a disc (except for CD or MP3 disc) is playing at fast speed, the sound will be muted.

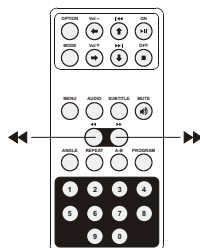


A-B PLAYBACK

  1. During a playback, if A-B button on the remote control is pressed once, the current point will be located by the remote control, and REPEAT A- will appear on the screen.
2. Press A-B button again, point B will be located, and the player will play from point A to point B repeatedly.
3. Press A-B button for the third time to cancel the A-B playback, and the player will resume its normal playback.

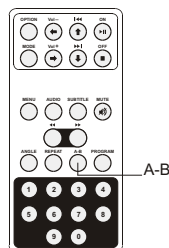

ANGLE


 
While playing a scene recorded with multiple angles, press the ANGLE button on the remote control to change the angle. If the scene is not recorded with multiple angles, the button will be invalid.

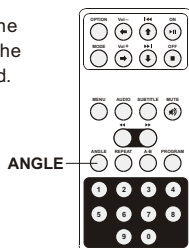

PROGRAM


The PROGRAM function can automatically play chapters or tracks according to the order you program.

  1. After inserting a disc, press the PROGRAM button on the remote control, and the menu below will pop up.

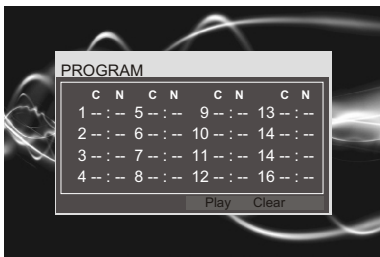


PROGRAM

 2. Use \uparrow , \downarrow , \leftarrow , \rightarrow and the number keys to select chapters, and arrange them in an order you prefer.

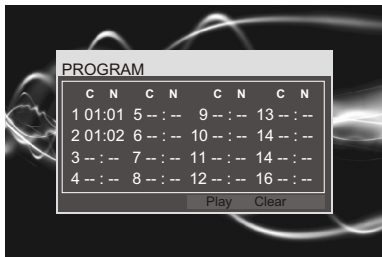

 3. Use \uparrow , \downarrow , \leftarrow , \rightarrow to move the cursor to PLAY, and press $\blacktriangleright\parallel$ to confirm.

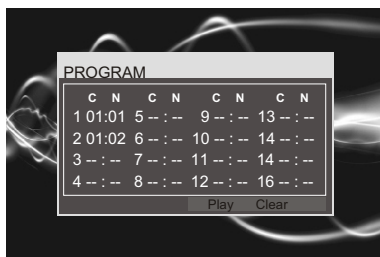


4. To cancel the program, press the PROGRAM button again.

Note:


1. When the player is off or the disc is taken out, the program you arrange will be removed.
2. If the chapter you select does not exist, the program playback will be canceled automatically.
3. This function may be invalid in some discs.


PLAYING A DISC IN MP3 OR JPEG FORMAT

 When inserting a disc which includes MP3 or JPEG files, the screen below will pop up. The folders in the disc will be displayed.

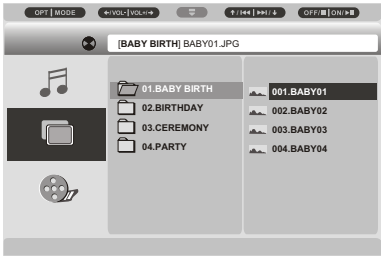


■ If you want to listen to music:

1. Navigate to , and press **▶||** to enter the folder list.
2. Select the folder which stores the music clips you want to listen to, and press **▶||** to enter the folder.

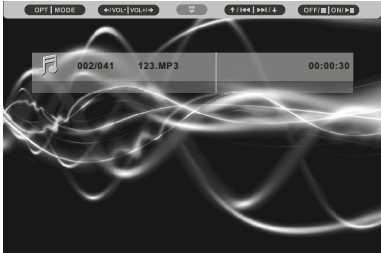 

3. Select the clip you prefer, and press **▶||** to start playing it.

 
4. During playback, you can press the A-B button to get the A-B repeat function. Or, you can press the REPEAT button to change the repeat modes, which includes Repeat: [Repeat 1] means repeating the clip that is playing; Repeat: [Repeat Dir] means repeating the folder; Repeat: [Repeat All] means repeating the disc; and Repeat: [Repeat Off] means no repeating.

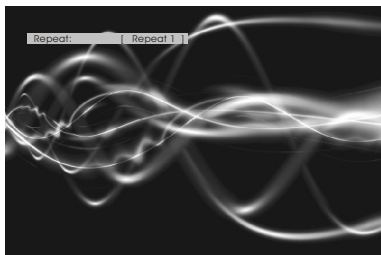

Note: When the disc is a DVD, the options are Repeat: [Off], Repeat: [Chapter] and Repeat: [Title]; for other discs, the options are Repeat: [Repeat 1], Repeat: [Repeat Dir] , Repeat: [Repeat All] and Repeat: [Repeat Off].

5. Press ■ to stop the playback, and press ■ again if you want to go back to the folder list.


■ If you want to view JPEG files:


1. Navigate to , and press **▶||** to enter the folder list.
2. Select the folder which stores the JPEG files you want to view, and press **▶||** to enter the folder.
3. When you navigate in the folder, the JPEG file you navigate to will be displayed in its thumbnail form in the middle blank.
4. Select the JPEG you prefer, and press **▶||** to view it in full screen.



5. Press **■** to stop the full-screen display, and press **■** again if you want to go back to the folder list.

- If you want to watch video clips:

1. Navigate to , and press **▶||** to enter the folder list.
2. Select the folder which stores the clips you want to watch, and press **▶||** to enter the folder.
3. Select the clip you prefer, and press **▶||** to start playing it.
4. During playback, you can press the A-B button to get the A-B repeat function. Or, you can press the REPEAT button to change the repeat modes, which includes Repeat: [Repeat 1], Repeat: [Repeat Dir], Repeat: [Repeat All], and REP Off. REP1 means repeating the clip that is playing; REP DIR means repeating the folder; REP ALL means repeating the disc; and REP Off means no repeating.

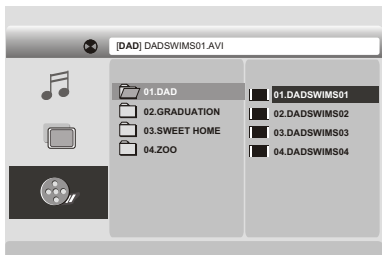 

5. Press **Stop** to stop the playback, and press **Back** again if you want to go back to the folder list.

DIMENSION AND PARAMETERS

Product name:	Click 10
Power:	12V / 2.5A
Consumption:	<30W
Audio out:	Line L/R
Video out:	S-Video / CVBS
Size:	252x174x31mm
Weight:	1070g

TROUBLE SHOOTING

Symptoms	Possible causes	Remedies
The disc does not play	Disc is not loaded correctly.	Load the disc with the label side up, and firmly press it into the center hole.
	Disc is scratched or not clean.	Make sure there is no scratch or fingerprint on it.
	Wrong regional disc.	Use the right regional disc.
No display	AV cable is disconnected.	Connect the cable firmly.
	Wrong setting or connection for the player.	Setting or connecting correctly with your player.
	Wrong mode setting.	Set the right mode.
No sound	AV cable is disconnected.	Connect the cable firmly.
	Wrong setting or connection for the player.	Setting or connecting correctly with your player.

Maintenance and clean the unit only as recommended in the operationa.l

DAMAGE REQUIRING SERVICE

Have the unit serviced by a qualified service technician if:

- The unit has been exposed to rain or water.
- The unit does not seem to operate normally.
- The unit exhibits a marked change in performance.

DO NOT ATTEMPT TO SERVICE THE UNIT BY YOURSELF!

