





# Steam Iron

## Dear Customer,

Before using the appliance, the user should read the following instructions carefully.

## Connection to the mains supply

The appliance should only be connected to an earthed socket installed in accordance with the regulations. Make sure that the supply voltage corresponds with the voltage marked on the rating label. This product complies with all binding CE labelling directives.

## Familiarisation

1. Soleplate
2. Water level indication
3. Rating label
4. Base stand
5. Spray nozzle
6. Water fill hole
7. Steam control button
8. Temperature control knob
9. Spray button
10. Steam jet button
11. Indicator lamp
12. Handle
13. Swivelling anti-kink covering
14. Power cord

## Important safety instructions

- Do not use the iron if it has been dropped onto a hard surface, or shows any other sign of damage, or is seen to leak water.
- Great care is necessary in using any appliance, especially near children. Do not leave the steam iron unattended while connected or on an ironing board. Always remove the plug from the wall socket and place the steam iron on its base stand.
- The appliance operates at very high temperatures. Do not touch any part of the appliance except the handle. Burns

can occur from touching the hot parts of the housing or the soleplate and from hot water or steam. When operating the steam iron, hold only by the handle. Do not allow steam to escape in the direction of anyone nearby.

- The iron must be used and stored on a stable and durable surface only.
- With the iron placed on its base stand, ensure that this too is on a stable and durable surface.
- Do not allow the power cord to touch hot surfaces. Do not coil the power cord round the appliance.
- **Always switch off and remove the plug from the wall socket after use, and also**
  - in case of any malfunction, and
  - during cleaning.
- When removing the plug from the wall socket, never pull on the power cord; always grip the plug itself.
- This appliance is not intended for use by any person (including children) with reduced physical, sensory or mental capabilities, or lacking experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate the appliance if excessive force has been used to pull the power cord. Damage cannot always be detected from the outside; the entire unit should therefore be checked by a qualified technician before it is used again.
- Before refilling or emptying the water reservoir, remove the plug from the wall socket.
- No responsibility is accepted if damage results from improper use, or if these instructions are not complied with.
- This appliance is intended for domestic use only and not for commercial applications.
- In order to comply with safety regulations and to avoid hazards, repairs

of electrical appliances must be carried out by qualified personnel, including the replacement of the power cord. If repairs are needed, please send the appliance to one of our customer service departments. The addresses can be found in the appendix to this manual.

### Steam control

The steam control is used to regulate the steam output.

Always wait until the appliance has reached the selected temperature level for steam ironing before using the steam control.

- Ensure that the steam control is closed when filling with water or topping up, and also while the appliance is heating up. With the steam control open, hot water may be emitted through the soleplate.

### Filling with water

Fill the water reservoir before using the steam function or the spray nozzle.

Remove the plug from the wall socket and close the steam control before filling the reservoir.

- This steam iron is to a large extent resistant to hard water (up to 15° dH). Although normal tap water may be used, it is advisable to use distilled, demineralised or decalcified water. Should you be unsure about the hardness of the water in your area, please enquire of the relevant local authority department.
- Fill the empty water reservoir using the measuring cup provided. Fill the reservoir to the indicated “**Max**” level only.

### General information about ironing

Always check first whether a label with ironing instructions is attached to the article to be ironed.

- The meaning of the ironing symbols is as follows:
  - synthetics

(low temperature)

- silk and wool

(medium temperature)

- cotton and linen

(high temperature)

- These markings can also be found on the temperature control knob of the steam iron in form of dot symbols.
- Laundry to be ironed should be sorted according to the fabric ironing temperature. Follow the ironing symbols and start with the lowest temperature.
- When ironing highly sensitive fabrics, or if you are not sure about the fabrics, you may carefully test-iron at a non-visible point, e.g. inside of seam. Start with the lowest temperature.
- If the laundry is being dried in a dryer before ironing, the temperature should be adjusted to “iron dry”. Very dry fabrics are difficult to iron.

### Start up

Clean the steam iron before using for the first time, according to the instructions given in the paragraph “*General Care and Cleaning*”. This will result in the removal of possible dust particles from the soleplate and subsequently lessen the smell typically encountered when first switching on.

Please ensure sufficient ventilation.

### Ironing

- Steam ironing requires high temperatures. The temperature level for steam ironing is indicated on the temperature control knob.
- After filling the reservoir with water, place the steam iron upright on its base stand and insert the plug into the wall socket.
- Set the temperature control knob to the required ironing temperature as indicated by the ironing symbols.
- During the heating-up process the indicator lamp will be on. The lamp will go out once the required ironing temperature is reached.

- Before ironing any fabrics, the soleplate should be cleaned by passing it over an old, clean cotton cloth, while using the steam jet function; this helps to flush out any dirt residues or lint particles trapped inside the openings in the soleplate.
- The steam output can be continuously adjusted with the steam control button or completely switched off for dry ironing.
- For dry ironing, the water reservoir may be empty. Should there be water left in the reservoir, the steam jet function may also be used when dry-ironing at higher temperature settings.
- Place the steam iron upright on its base stand after use and remove the plug from the wall socket.

### Steam Jet

When the steam jet button is depressed, an additional hot steam jet is emitted from the soleplate. This function can be very useful when the regular amount of steam emitted is not sufficient to remove stubborn creases or when ironing difficult or thick fabrics.

The steam jet function may also be used with the iron held vertically, to remove creases or wrinkles from fabrics.

### Using the Spray Nozzle

The laundry can be dampened by pressing the spray button. This will help to smooth out difficult areas. The spray nozzle may be used at any temperature level during dry or steam ironing.

### General Care and Cleaning

- Before cleaning the appliance, ensure it is disconnected from the power supply and has cooled down completely.
- To avoid the risk of electric shock, do not clean the appliance with water and do not immerse it in water.
  - If necessary, the unit may be wiped with a dry fuzz-free cloth.
  - Starch, fat and other deposits on the soleplate may be removed with a woollen cloth soaked in a vinegar-water solution.

- In order to protect the clean soleplate, you may occasionally apply a small amount of paraffin to the warm plate, wiping it off with a woollen cloth.
- Do not use abrasives or harsh cleaning solutions.
- Do not put vinegar or other descalers into the water reservoir.
- The soleplate should be cleaned as follows after a long period of rest and once a month:
  - Fill half the water reservoir with water and place it on its base stand.
  - Leave the iron to heat on the highest temperature setting until the indicator lamp goes out.
  - Unplug the unit, open the steam control button to its full and swing the iron horizontally over a sink. During this procedure, the steam jet button should be repeatedly depressed.
  - Hot water and steam will be emitted by the holes in the soleplate. This will result in the removal of dust particles from the soleplate.
  - Pour out any remaining water, let the iron heat up again and pass the soleplate over an old, clean cotton cloth.

### Storage

- Turn off the steam iron, remove the plug from the wall socket and let the unit cool down completely.
  - Pour any remaining water out of the reservoir through the water fill hole.
- To avoid damage to the soleplate, store the steam iron in upright position on its base stand.

### Disposal



Do not dispose of old or defective appliances in domestic garbage; this should only be done through public collection points.

### Guarantee

This product is guaranteed against defects in materials and workmanship for a period of

two years from the date of purchase. Under this guarantee the manufacturer undertakes to repair or replace any parts found to be defective, providing the product is returned to one of our authorised service centres. This guarantee is only valid if the appliance has been used in accordance with the instructions, and provided that it has not been modified, repaired or interfered with by any unauthorised person, or damaged through misuse.

This guarantee naturally does not cover wear and tear, nor breakables such as glass and ceramic items, bulbs etc. If the product fails to operate and needs to be returned, pack it carefully, enclosing your name and address and the reason for return. If within the guarantee period, please also provide the guarantee card and proof of purchase.