



PIXEL ENTERPRISE LIMITED

Remote Control RC-201

Instructions

Thank you so much for purchasing PIXEL product and read this instruction; Our unremitting strive power is for increase your interested of photography. You can easily to understand “how to use” and “condition” from this instruction manual. Remote control RC-201 is having the control shutter release function, just connect to all famous brand professional camera (which have the shutter socket) shutter plug, then easily to use the shutter release to take a picture. For more information, please read the camera instruction manual.

Caution

1. This is an electron product accessory; some of the environment causes will be effected the working. However this is hardly ever to get this situation, don't worry!
2. Remove the continuous mode before store this product for long time.
3. When the remote control is connected to camera, please do not pull and drag the cable.
4. Please do not store this product into high temperature location, such as car internal or control panel these high temperature area.
5. Please keep it dry and do not get wet; also cannot put in water or use under raining day.
6. Please do not use it in the presence of flammable or gas, it could cause an explosion or fire.

Installation

1. To prevent any unexpected matter, please turn off the camera power.
2. Open the shutter socket cover from camera, and plug in the remote control plug to the correct direction. (some plugs are the spiral plug, roll the lock to clockwise and tight it. When take off from camera, just roll the lock to anti-clockwise and release it.)
3. Now turn on the camera power, then start to take the wonderful picture.

Directions

1. Half press the release button, to start the camera auto-focus, let focus on the main point; then fully press the release button to take a picture.

2. Locking mode, (Please set the camera to continuous or BULB mode). Fully press the release button and lock the button. It's locked the camera to start the continuous shoot or long exposure.

3. Remove locking, let pull down the lock, then release the button.

Specification



Style: Cable style shutter release control

Mode: 2 ways button for focus and shooting, and lock the button for continuous shooting and long exposure.

Cable length: 110cm

Volume: 95.5mm(L)X29.4mm(W)X20.3mm(H)

Weight: 55 g

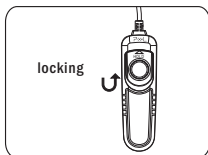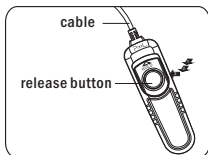

www.pixelhk.com

Add: Rm A07, 4/F, Hop Hing Industrial Building, 704 Castle Peak Road,
Lai Chi Kok, Kowloon, Hong Kong

3044011000601