



User Manual

AF 5077/5087/5107PS  
AF 5077/5087/5107MS



EN

# Introduction

## Dear Customer

Thank you for purchasing our photo frame. Get ready to experience photography like never before! The photo frame allows you to view photos, audio and video files—all without a computer.

### High definition LCD screen

Your digital photo frame includes a built-in memory, a memory card slot and a USB port. Files on the built-in memory can be deleted and files on memory card and USB-disc can be copied.

Supports browse mode (thumbnails of 20 images per page at a time). Your digital photo frame supports photo rotate and stretch function.

An automatic, continuous slide show with background music lets you enjoy all of your photos with ease.

The included remote control makes it simple to select photo-, music- and movies files, change settings and more.

Additional functions like time and date display, alarm clock and an automatic on and off switch are also available.

We hope you enjoy your device and its many functions!

## About this User Manual

With the installation guide on the following pages, you can start using your device quickly and easily. Detailed descriptions can be found in the following sections of this user manual.

Read the entire user manual carefully. Follow all safety instructions in order to ensure proper operation of your device. The manufacturer accepts no liability if these instructions are not followed.

Multiple models of this device series are described in this user manual. Please note that some functions are only available with specific models.

## Symbols Used

### DANGER!



#### DANGER!

Warns about dangers for people, damage to the device or other objects as well as possible loss of data. Injuries or damage can result from improper handling.

### Notice



#### Troubleshooting

This symbol designates tips that will help you to use your device more effectively and easily.

# Safety Instructions and Recommendations

EN

Do not make any changes or settings that are not described in this user manual. Physical injury or damage to the device or loss of data can result from improper handling. Take note of all warning and safety notes indicated.

## Setting Up the Device

The device is exclusively for indoor use only. The device should rest securely on a stable, flat surface. Position all cables in such a way that no one will stumble on them, thus avoiding possible injuries to persons or damage to the device itself.

Always handle the unit with care. Avoid touching the LCD screen. Never place heavy or sharp objects on the LCD panel, frame or power cord.

Protect the device against direct sunlight, heat, large temperature fluctuations and moisture. Do not place the device in the vicinity of heaters or air conditioners. Observe the information on temperature and humidity in the technical data.

The device should not be switched on immediately after being moved from a cold to a warm room or vice versa or into a cold room which has been heated up quickly. In such cases, wait at least three hours until the device has adapted to the changed conditions (temperature, humidity...).

In the event that the device becomes too hot, or if you see smoke coming from the device, you must immediately pull the power cable out of the power socket. Have your device examined by trained professionals at a technical service location. To prevent the spread of fire, open flames should be kept away from the device.

Do not plug in the device in moist rooms. Never touch the mains cable or the mains connection with wet hands.

Do not allow liquids to enter into the device. Disconnect the device from the power socket if liquids or foreign objects have entered the device and have your device examined by trained professionals at a technical service location.

Do not allow children to handle the device without supervision. The packing materials should be kept out of the hands of children.

## Power Supply

Use only the enclosed power adapter (see chapter Appendix / Technical Data). Check whether the mains voltage of your device (indicated on the type label) matches the mains voltage available at the setup location. This equipment complies with the voltage type specified on the unit.

Never touch the power cable if the insulation is damaged. Replace damaged wires immediately. Use suitable cables only; if necessary please contact our technical customer service or your retailer.

Before cleaning the surface of your device, disconnect it from the power network. Use a soft, lint-free cloth. Never use liquid, gaseous or easily flammable cleansers (sprays, abrasives, polishes, alcohol). Do not allow any moisture to reach the interior of the device.

Only clean the display with a dry, soft cloth. If the display breaks, a mildly corrosive liquid may escape. Avoid all contact with your skin and eyes.

## Repairs

Do not make any repairs to the device yourself. Improper maintenance can result in injuries or damage to the device. Only have your device repaired by an authorised service centre.

Do not remove the type label from your device; this would void the warranty.

## Photo Memory Media

Only use storage media that are compatible with the device. In order to prevent damage to the card or the unit, please turn off the power before removing or inserting the card.


Never pull out the memory card while the device is accessing it. This could cause data to be damaged or lost.

EN

# Overview


## Device Overview

- 1 —On/Off switch
- 2 —Slot for Memory card
- 3 —Navigating in the Menu / Decrease the brightness, contrast and colour saturation / Skips to the previous image, previous row or page
- 4 —Confirms the selection / Starting, interrupting the slide show
- 5 —Navigating in the Menu / Increase the volume / Switch on the background music during slide show
- 6 —Navigating in the Menu / Decrease the volume
- 7 —Navigating in the Menu / Increase the brightness, contrast and colour saturation / Skips to the next image, next row or page
- 8 **MENU**—Calling the main menu / press and hold: Switch on the analog clock
- 9 —Calling up the settings menu
- 10 —Mini USB connection - for connecting a computer
- 11 —Socket—USB port for a storage medium
- 12 —Socket - Port for power supply

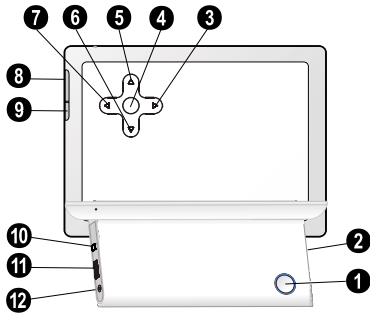

## Remote Control

(AF 5077/5087/5107MS)

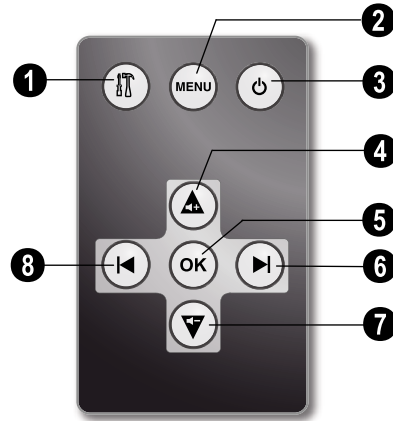

- 1—Calling up the settings menu
- 2—Calling the main menu / press and hold: Switch on the analog clock
- 3—Switching On and Off
- 4—Navigating in the Menu / Increase the volume / Switch on the background music during slide show
- 5—Confirms the selection / Starting, interrupting the slide show
- 6—Navigating in the Menu / Increase the brightness, contrast and colour saturation / Skips to the next image, next row or page
- 7—Navigating in the Menu / Decrease the volume
- 8—Navigating in the Menu / Decrease the brightness, contrast and colour saturation / Skips to the previous image, previous row or page

# Initial Operation

EN

## Packing Contents

- ❶ Digital photo frame with bracket
- ❷ Power supply with exchangeable plugs
- ❸ A remote control (with battery)  
(AF 5077/5087/5107MS)

User Guide (not depicted)



### Notice



#### Missing Package Contents

If one of the parts is missing or damaged, please contact your retailer or our customer service.

## Connecting power supply

### CAUTION!



#### Mains Voltage at the Site of Installation!

Check whether the mains voltage of your device (indicated on the type label) matches the mains voltage available at the setup location.

- 1 Choose the right plug for your country and slide it onto the power adapter. Ensure that the plug snaps in completely.
- 2 Insert the small plug of the power supply into the socket on the rear side of your device. Insert the power supply unit into the socket.

## Connecting to the PC

Using the USB cable, you can connect your photo frame to a computer to transfer files between the internal memory and computer.

- 1 Switch the device off using the on/off switch on the rear.
- 2 With the frame turned off, connect the small end of the cable to the digital picture frame and the large end to your computer.
- 3 Switch the device on using the on/off switch on the rear. Allow the computer a few moments to recognize the new hardware. Compatible photo, music and video files can be copied onto the internal memory.

- 4 If the connection with the computer is disconnected, the digital photoframe will restart automatically.

## Inserting a Memory Card

- 1 Insert a memory card into the appropriate card slot at the rear of the device. Your photo frame supports the following memory cards: SD/MMC/MS/SDHC/XD.

### DANGER!



#### Inserting a Memory Card!

Only use storage media that are compatible with the device.

Never pull out the memory card while the device is accessing it. This could cause data to be damaged or lost.

- 2 Switch the device on using the on/off switch on the rear. The player will start slide show after the start screen be displayed.

### Notice



#### Many Photos on the Memory Card

If the memory card contains many photos, it can take some time until the slide show starts.

- 3 Press **OK** at the rear during a slide show to stop the slide show.

### Notice




#### Using USB device and memory card at the same time


If a USB storage device is used at the same time as a storage card, the images from the memory card are displayed first.

EN

## Installing or Changing the Batteries of the Remote Control

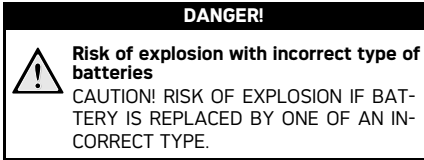

- 1 Take the battery compartment from the remote control by opening the locking mechanism (1) and pulling out the battery compartment (2).

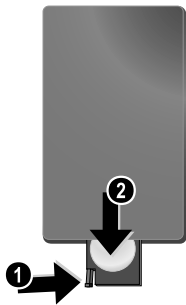

- 2 Insert the new batteries into the battery compartment with the positive and negative poles as shown on the back of the remote control. Make sure the polarities(+ and -) are aligned correctly.



- 3 Push the battery compartment back into the remote control until the locking mechanism engages.



### Notice



Normally the batteries will last for around one year. If the remote control does not work, please replace the batteries. If the player is not used for a long time, take out the batteries. So you can prevent leakage and possible damage to the remote control.

The batteries used should be disposed of according to the recycling regulations of your country.

## Using the Remote Control

Point the remote control to the remote sensor on the front panel of the device. Its working limits is within an angle of 30 degrees and a distance of 2 meter. When using the remote control, no obstacle should be placed between the remote control and remote sensor.


# Playback

EN

## Overview of the Menu Functions

There are three items on the main menu.

- 1 Photo Menu
- 2 Video Menu  
(AF 5077/5087/5107MS)
- 3 Music Menu  
(AF 5077/5087/5107MS)

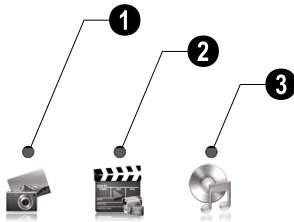 


## Navigating in the Menu

- 1 Press **MENU** on the remote control or **MENU** on the device.
- 2 Select the desired menu using **◀/▶**.
- 3 Confirm with **OK**.

## Photo Playback

- 1 Select the photo menu in the main menu and confirm using **OK**.
- 2 Then the frame will display 16 thumbnail images per page.

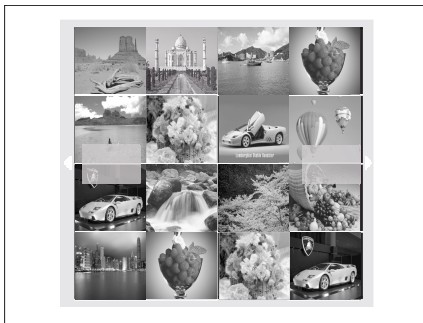

- 3 Use **↑/↓** or **←/→** to select the image from which to start the slide show.
- 4 Press **OK** to start the slide show.
- 5 Press **OK** to pause the slide show. A 'pause' symbol appears on the screen.

- 6 Press **⏪/⏩** to skip to the previous or next image.
- 7 End the slide show using **MENU**.

### Notice



#### Calling up Menu

During the slideshow you can return to the main menu by pressing **MENU** at any time.

## Setting the Background Music of the Slide Show

(AF 5077/5087/5107MS)

### Notice



As background music, you can only use files that are stored together with the photos in the internal memory on the memory card or the USB connection.

- 1 During the slide show press **▲** on the remote control or **⏮** on the device, to start the background music.

### Notice



Using **▲/▼**, set the volume.

## Music Playback

(AF 5077/5087/5107MS)

- 1 Select the music menu in the main menu and confirm using **OK**.
- 2 Using **◀/▶** or **▲/▼** select the music title you want to play.
- 3 Press **OK** to start playback. Additional information will be displayed during playback.
- 4 To stop, press **OK**.

EN

## Movie Playback

[AF5077/5087/5107MS]

- 1 Select the video menu in the main menu and confirm using **.**
- 2 Using **◀/▶** or **▲/▼** select the video title you want to play.
- 3 Press **OK** to start playback. To stop, press **OK**.

### Notice



#### Additional Playback Functions

During playback, you can skip to the previous or next song by using **◀/▶** or **▲/▼**.

During playback, press the **OK** on the remote control to pause and to resume playback.



## Adjusting Volume Level

[AF5077/5087/5107MS]


During playback you can adjust the volume using **▼/▲** on the remote control. Press repeatedly **▼** to switch off the volume (mute function).



# Settings

The settings menu contains four items and can be called up using  on the device or  on the remote control.

- 1 **ECO Settings** (Automatically switch on/off, Adaption of the LCD brightness automatically [AF 5077/5087/5107MS])
- 2 **Picture-Settings** (Slide show settings, rotating image)
- 3 **File Management** (Copy files, delete files, playlists)
- 4 **Basic-Settings** (Brightness, contrast, date, clock)

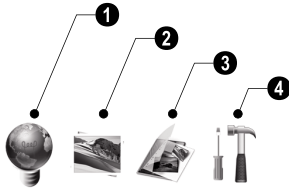







 

 

 
## ECO Settings



 

The digital picture frame can be switched on or off automatically or the brightness of the LCD screen can be adapted according to the ambient light [AF 5077/5087/5107MS].

Select from the following settings:


### Switching On and Off Automatically

The digital photo frame can be switched on or off at a particular time of the day.

- 1 Press .
- 2 Using / select the symbol  and confirm with **OK**.
- 3 The symbol  is selected.
- 4 Use / to select the coloured symbol and confirm using **OK**.
- 5 Select the time at which the digital photo frame should be switched on using /.
- 6 Confirm with **OK**. The colour of the cursor will change from white to red.
- 7 Select the time at which the digital photo frame should be switched off using /.
- 8 Confirm with **OK**. The colour of the cursor will change from red to white. The time period when the digital picture frame is switched on, is marked green.
- 9 To delete a time period, mark the time period again. The green marking will be removed.

10 Press  and select the symbol  using /.

11 Confirm with **OK**.









12 You can exit with .

### Notice



#### Switching Automatic On/Off



 




 

You can deactivate the automatic on/off. The actual setting is retained.

- 1 Press .
- 2 Using / select the symbol  and confirm with **OK**.
- 3 The symbol  is selected.
- 4 Select using / the black/white symbol (automatic switched off) or the coloured symbol (automatic switched on).
- 5 Confirm with **OK**.
- 6 You can exit with .

## Automatic adaption of the LCD brightness






 


 
 




[AF 5077/5087/5107MS]

With this function the brightness of the LCD screen can be adapted according to the ambient light.

- 1 Press .
- 2 Using / select the symbol  and confirm with **OK**.
- 3 Using  select the symbol  and confirm with **OK**.
- 4 Select using / the black/white symbol (automatic switched off) or the coloured symbol (automatic switched on).
- 5 Confirm with **OK**.
- 6 You can exit with .

## Modifying the Picture Settings





 





 
Here you can rotate the images, changing aspect ratio, determine the transition effects or adjusting the slide show speed.

- 1 Press .
- 2 Using / select  (Picture Setting) and confirm with **OK**.
- 3 Use / to select the required symbol.
  -  Rotating Image—Change the orientation of the image
  -  Aspect Ratio—The digital photo frame has a wide screen with 4:3 aspect ratio. Select whether you would like to view the image in the original format, in the wide screen format (16:9) or if the image should be stretched to match the shape of the screen.
  -  Transition Effects—Allows you to choose different styles of slide show effects.
  -  Slide Show Speed—Select from the displayed times.
  -  Personal Frame – Select from different frames for displaying the pictures.
- 4 Select the required setting using /.
- 5 Confirm with **OK**.
- 6 You can exit with .

## File Management

Files on the memory card or USB disk can be copied. Files in the internal memory can be deleted.

### Copy / Delete Files

 
- 1 Press .
- 2 Using / select  (File Management) and confirm with **OK**.
- 3 Using  to select  (copy) or  (delete) and confirm with **OK**.
- 4 Using /, / select the file you want to copy or delete.
- 5 Mark the file using **OK**.




#### Notice



#### Canceling the Selection

Press again **OK** to cancel the selection.


- 6 Using  to select the symbol line at the bottom of the screen.

- 7 Using / to select  icon and press **OK** to start copying or deleting.

#### Notice




#### Copy all Files from the Memory Card

Select  and confirm using **OK** to copy all files from the memory card to the internal memory.

#### Notice









 
 

#### Cancel Process

Select  and confirm using **OK** to cancel the process.

- 8 The screen will display the processing bar. After finish copying, you can find the image in the internal memory.

## Starting Mode

Select whether you would like images, movies or images and movies to be played automatically after Power on.








 




 


 



 

- 1 Press .
- 2 Using / select  (File Management) and confirm with **OK**.
- 3 Using  select  and confirm with **OK**.
- 4 Select from the options displayed using / and confirm using **OK**.
- 5 You can exit with .

## Playlists








 




Create your own playlist for images, movies and music.

Only images, movies and music in this playlists will be played back. You can create up to five playlists.

### Creating Playlist

- 1 Press .
- 2 Using / select  (File Management) and confirm with **OK**.
- 3 Select  (Playlists) using / and confirm with .
- 4 Select using / whether you would like to create a playlist for music, images or movies.
- 5 Confirm with **OK**.
- 6 Confirm 'OFF' using **OK** to create a new playlist.
- 7 Using / select e.g. playlist 1 and confirm with **OK**.
- 8 Select using / or / the file you want to add to the playlist. Mark the file using **OK**.
- 9 Mark further files using **OK**.
- 10 Using  to select the symbol line at the bottom of the screen.
- 11 Using / to select  icon and press **OK** to save the playlist.
- 12 You can exit with .



### Switching Playlist On/Off

- 1 Press .
- 2 Using / select  (File Management) and confirm with **OK**.
- 3 Select  (Playlists) using / and confirm with .
- 4 Select using / whether you would like to switch on a playlist for music, images or movies.
- 5 Confirm with **OK**.
- 6 Confirm e.g. playlist1 using **OK**.
- 7 Select the desired playlist using /.







#### Notice











 



#### Switching Playlist Off

With the selection of 'OFF' using / the playlist will be switched off. All images, movies or music files are available again.

## Modifying the Basic Settings

- 1 Press .
- 2 Using / select the symbol  and confirm with **OK**.
- 3 Use / to select the setting you would like to allocate.
- 4 Confirm with .

You can allocate the following settings:

-    (Brightness, Contrast, Colour saturation)—Adjustment of brightness, contrast, and colour saturation of the LCD screen.
  -  (Clock)—Setting the time and date.
  -  (Alarm) (AF5077/5087/5107MS)—Setting of the alarmtime, on/off of the alarm and the selection of the alarmtone.
  -  (Calendar) – Setting of year, month, day.
  -  (Default)—Restore the settings to the factory default.
- 5 Select the desired setting using /.
  - 6 Confirm with
  - 7 Modify the setting using /.
  - 8 Confirm the modified setting using .
  - 9 You can exit with .

# Service

**EN**

## Changing the frame

You can change the frame of the device using the picture frames supplied. The frames are held with magnets.

- 1 Press on the change frames key on the back of the device. Remove the frame.
- 2 Place the picture frame onto the device until it engages on the magnets.

Problems	Solutions
Photo Frame does not power on.	Check that you connect the AC adapter to the frame properly.
Cannot save files	Make sure that enough internal memory is available. Re-start the picture frame and delete some files in order to free up memory space.
No sound	Make sure the file format is supported, the computer and the frame are correct connected or the memory card is not damaged.
Memory card can not be recognized	If you connected the frame to a computer, the inserted memory card can not be recognized.
Not all files of the memory card will be shown for the slide show, movie and music play back.	Check whether a playlist is switched on.

# Appendix

**EN**

## Technical Data AF 5077PS

Dimensions (L x H x W).....	190 x 153 x 80 mm
Weight.....	0,4 kg
Mains Connection Input: 100–240 V ~ / 50–60 Hz .....Output: 5 V = / 2 A	
Recommended Ambient.....	5–45 °C
Relative humidity.....	20–80 %
Power Consumption	
Device is switched on (slide show).....	5,0 W
Screen size.....	7"
Aspect ratio.....	4:3
Resolution.....	800 x 600 Pixel
Internal memory.....	128 MB MB or up to 500 photos
USB Port.....	USB-Host
Compatible Memory Cards SD/MMC/MS/SDHC/XD Photo formats.....	JPEG

## Technical Data AF 5077MS

Dimensions (L x H x W).....	190 x 153 x 80 mm
Weight.....	0,4 kg
Mains Connection Input: 100–240 V ~ / 50–60 Hz .....Output: 5 V = / 2 A	
Recommended Ambient.....	5–45 °C
Relative humidity.....	20–80 %
Power Consumption	
Device is switched on (slide show).....	4,3 W
Screen size.....	7"
Aspect ratio.....	4:3
Resolution.....	800 x 600 Pixel
Internal memory.....	256 MB MB or up to 1000 photos
USB Port.....	USB-Host, USB Device
Compatible Memory Cards SD/MMC/MS/SDHC/XD Photo formats.....	JPEG
Music formats.....	MP3
Video formats.....	Motion Jpeg, Mpeg-4

## Technical Data AF 5087PS

Dimensions (L x H x W).....	203 x 163 x 90 mm
Weight.....	0,5 kg
Mains Connection Input: 100–240 V ~ / 50–60 Hz .....Output: 5 V = / 2 A	
Recommended Ambient.....	5–45 °C
Relative humidity.....	20–80 %
Power Consumption	
Device is switched on (slide show).....	5,4 W
Screen size.....	8"
Aspect ratio.....	4:3
Resolution.....	800 x 600 Pixel
Internal memory.....	128 MB MB or up to 500 photos
USB Port.....	USB-Host
Compatible Memory Cards SD/MMC/MS/SDHC/XD Photo formats.....	JPEG

## Technical Data AF 5087MS

Dimensions (L x H x W).....	203 x 163 x 90 mm
Weight.....	0,5 kg
Mains Connection Input: 100–240 V ~ / 50–60 Hz .....Output: 5 V = / 2 A	
Recommended Ambient.....	5–45 °C
Relative humidity.....	20–80 %
Power Consumption	
Device is switched on (slide show).....	6,3 W
Screen size.....	8"
Aspect ratio.....	4:3
Resolution.....	800 x 600 Pixel
Internal memory.....	1 GB MB or up to 4000 photos
USB Port.....	USB-Host, USB Device
Compatible Memory Cards SD/MMC/MS/SDHC/XD Photo formats.....	JPEG
Music formats.....	MP3
Video formats.....	Motion Jpeg, Mpeg-4

EN

### Technical Data AF 5107PS

Dimensions (L x H x W).....	255 x 203 x 90 mm
Weight.....	0,8 kg
Mains Connection Input: 100–240 V ~ / 50–60 Hz	
.....Output: 5 V = / 2 A	
Recommended Ambient.....	5–45 °C
Relative humidity.....	20–80 %
Power Consumption	
Device is switched on (slide show).....	6,1 W
Screen size.....	10,4"
Aspect ratio.....	4:3
Resolution.....	800 x 600 Pixel
Internal memory.....	128 MB MB or up to 500 photos
USB Port.....	USB-Host
Compatible Memory Cards.SD/MMC/MS/SDHC/XD	
Photo formats.....	JPEG

### Technical Data AF 5107MS

Dimensions (L x H x W).....	255 x 203 x 90 mm
Weight.....	0,8 kg
Mains Connection Input: 100–240 V ~ / 50–60 Hz	
.....Output: 5 V = / 2 A	
Recommended Ambient.....	5–45 °C
Relative humidity.....	20–80 %
Power Consumption	
Device is switched on (slide show).....	6,6 W
Screen size.....	8"
Aspect ratio.....	4:3
Resolution.....	800 x 600 Pixel
Internal memory.....	1 GB MB or up to 4000 photos
USB Port.....	USB-Host, USB Device
Compatible Memory Cards.SD/MMC/MS/SDHC/XD	
Photo formats.....	JPEG
Music formats.....	MP3
Video formats.....	Motion Jpeg, Mpeg-4
All data are provided for reference purposes only.	
<b>AgfaPhoto</b> reserves the right to make any changes without prior notice.	

**AgfaPhoto is used under license of Agfa-Gevaert NV & Co. KG or Agfa-Gevaert NV. Neither Agfa-Gevaert NV & Co KG nor Agfa-Gevaert NV manufacture this product or provide any product warranty or support.**

**For service, support and warranty information, contact the distributor or manufacturer.**

**Contact:AgfaPhoto Holding GmbH,  
www.agfaphoto.com**

**Manufacturer: Sagem Communications,  
www.sagem-communications.com**



The CE marking certifies that the product meets the main requirements of the European Parliament and Council directive 1999/5/CE on telecommunications terminal equipment, regarding safety and health of users and regarding electromagnetic interference.

The declaration of compliance can be consulted on the site [www.agfaphoto.com](http://www.agfaphoto.com)

Preservation of the environment as part of a sustainable development logic is an essential concern of AgfaPhoto. The desire of AgfaPhoto is to operate systems observing the environment and consequently it has decided to integrate environmental performances in the life cycle of this products, from manufacturing to commissioning use and elimination.



**Packaging:** The presence of the logo (green dot) means that a contribution is paid to an approved national organisation to improve package recovery and recycling infrastructures to facilitate. Please respect the sorting rules set up locally for this kind of waste.

**Batteries:** If your product contains batteries, they must be disposed of at appropriate collection points.



**Product:** The crossed-out waste bin stuck on the product means that the product belongs to the family of electrical and electronic equipment. In this respect, the European regulations ask you to dispose of it selectively;

- At sales points in the event of the purchase of similar equipment.
- At the collection points made available to you locally (drop-off centre, selective collection, etc.).

In this way you can participate in the re-use and upgrading of Electrical and Electronic Equipment Waste, which can have an effect on the environment and human health.

The paper and cardboard packaging used can be disposed of as recyclable paper. Have the plastic wrapping and Styrofoam packaging recycled or dispose of it in the non-recyclable waste, depending on the requirements in your country.

**Trademarks:** The references mentioned in this manual are trademarks of the respective companies. The lack of the trademarks ® and ™ does not justify the assumption that these dedicated terminologies are free trademarks. Other product names used herein are for identification purposes only and may be trademarks of their respective owners. AgfaPhoto disclaims any and all rights in those marks.

Neither AgfaPhoto nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or failure to strictly comply with AgfaPhoto operating and maintenance instructions.

AgfaPhoto shall not be liable for any damages or problems arising from the use of any options or any consumable materials other than those designated as original AgfaPhoto products or AgfaPhoto approved products.

AgfaPhoto shall not be held liable for any damage resulting from electromagnetic interference that occurs from the use of any interface cables other than those designated as AgfaPhoto products.

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of AgfaPhoto. The information contained herein is designed only for use with this product. AgfaPhoto is not responsible, if this information is applied to other devices.

This user manual is a document that does not represent a contract.

Errors, printing errors and changes are reserved.

Copyright © 2009 Sagem Communications

EN



AgfaPhoto is used under license of Agfa-Gevaert NV & Co. KG or Agfa-Gevaert NV. Neither Agfa-Gevaert NV & Co. KG nor Agfa-Gevaert NV manufacture this product or provide any product warranty or support. For service, support and warranty information, contact the distributor or manufacturer.

AF 5077/5087/5107PS, AF 5077/5087/5107MS  
GB  
253243477-A

